


# Supplemental Restraint System (SRS)

## SRS Unit Installation

**CAUTION:** Be sure to install the SRS wiring so that it is not pinched or interfering with other car parts.

1. Install the SRS unit.


**TORX® BOLTS 6 mm**  
**10 N·m (1.0 kg-m, 7.2 lb-ft)**  
Replace.

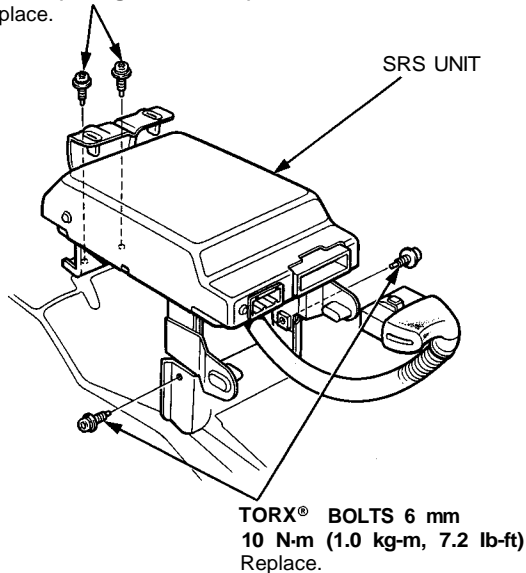

2. Connect the SRS main harness 18-P connector to the SRS unit.

**NOTE:** To reinstall a connector, push it into position until it clicks.

3. Install the rear console.

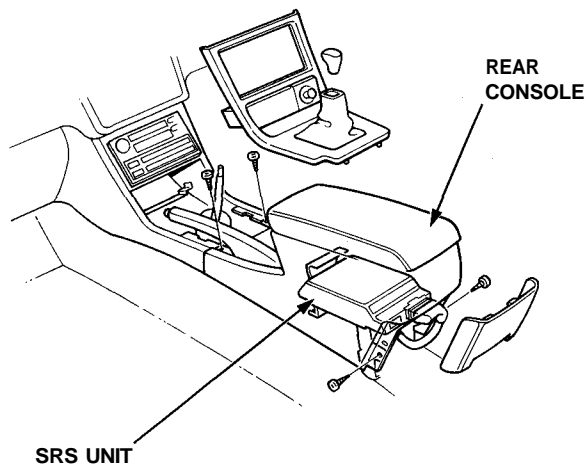

4. Disconnect the short connector from the driver's airbag connector, then connect the cable reel and driver's airbag connector.

**NOTE:** Attach the short connector to lid A, then install the lid.

5. Disconnect the short connector from the front passenger's airbag connector, then connect the SRS main harness 3-P connector and front passenger's airbag connector.
6. Attach the short connector to the connector holder. Install the glove box.
7. Connect the battery positive cable, then connect the negative cable.
8. After installing the SRS unit assembly, confirm proper system operation.

- Turn the ignition to II: the instrument panel SRS indicator light should go on for about 6 seconds and then go off.
- Enter the customer's code number to restore radio operation [L, LS model] (See page 23-228).