

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

The Legend Supplemental restraint system (SRS) includes a driver's airbag, located in the steering wheel hub, a front passenger's airbag located in the dashboard above the glove box, and seat belt pretensioners, located in the seat belt retractors. Information necessary to safely service the SRS is included in this service manual. Items marked with an asterisk (*) on the contents page include, or are located near, SRS components. Servicing, disassembling or replacing these items will require special precautions and tools, and should therefore be done only by an authorized ACURA dealer.

WARNING

- **To avoid rendering the SRS inoperative, which could lead to personal injury or death in the event of a severe frontal collision, all SRS testing and repair must be done by an authorized ACURA dealer.**
- **improper procedures, including incorrect removal and installation of the SRS components, could lead to personal injury caused by unintentional activation of the airbags and seat belt pretensioners.**
- **All SRS electrical wiring harnesses are covered with yellow outer insulation. Related components are located in the steering column, center console and armrest, dashboard lower panel, and in the dashboard above the glove box. Do not use electrical test equipment on these circuits.**

NOTE: The L and LS model radios may have a coded theft protection circuit. Be sure to get the customer's code number before

- disconnecting the battery.
- removing the No. 56 (7.5 A) fuse from the under-hood fuse/relay box.
- removing the radio.

After service reconnect power to the radio and turn it on. When the word "CODE" is displayed, enter the customer's 5-digit code to restore radio operation.