 


Product Illustration

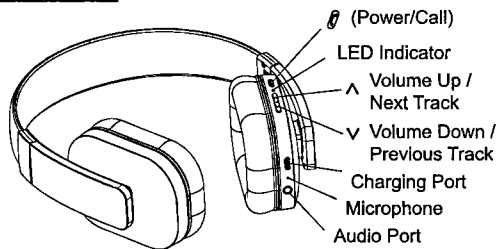

Package Contents

Bluetooth Headphones
USB Charging Cable
3.5 mm Audio Cable
Instruction Manual

Precautions

1. Do not listen through headphones at a high volume level for extended periods of time, as doing so may result in temporary or permanent hearing impairment. It is advised to keep volumes levels moderate or low at all times for your safety.
2. Do not use the headphones while talking, driving, cycling, jogging, operating machinery, or performing other activities that require hearing surrounding sounds.
3. Stop the use and turn off the product immediately if it functions in an abnormal manner, produces unusual sounds, smells, or becomes too hot.
4. Do not expose the product to fire, high temperature, direct sunlight, or excessive physical shock.
5. Do not leave the product in

vehicles that are subject to direct sunlight or hot weather, as the temperature inside the vehicle may become very high.

6. Do not immerse the product in water, place the product in humid environments, or spill any liquid into the product.
7. Do not expose the product to dust, smoke or steam. Do not allow small particles to get into the product.
8. Do not place the product on unstable or vibrating surfaces.
9. Do not disassemble the product, or make any modifications to the structure or any parts of it.
10. Keep the product out of the reach of small children.
11. Do not clean the product while it is working or the battery is charging.
12. The product contains a built-in rechargeable lithium ion battery. Dispose of the product separately at your local waste-recycling center. Do not dispose of it in your household waste bin.
13. Unplug the charging cable and turn the product off before cleaning for safety. Wipe the product gently

with a damp cloth when cleaning, and allow it to dry completely afterwards. Do not use organic solvents or other chemicals to clean the product.

Specifications



Bluetooth Version	CSR 4.0
Bluetooth Working Distance	≤ 10 m / 33 ft
Playtime	≤ 20 h
Standby Time	≤ 760 h
Impedance	32 Ω
Sound Pressure Level	103 ± 3 dB
Frequency Response	20 Hz - 20 kHz

Please note that the actual Bluetooth working distance depends on a variety of factors, and may be far shorter than 10 m / 33 feet if there is obstacle between the headphones and your device, or if your device does not support Bluetooth 4.0.


Charging the Headphones

1. Please charge the product before first use, when it fails to power on, or when the red LED flashes twice every 2 seconds (indicating low battery power).
2. To charge the product, simply connect the charging port to a USB port on your computer or power adapter using the charging cable. The LED indicator illuminates in red when the battery is charging, and illuminates in blue when the battery is fully charged.


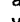 

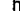 
Powering On/Off

1. Hold  for 2 seconds to turn on the headphones. The LED indicator will flash in blue twice.
2. Hold  for 3 seconds to turn off the headphones. The LED indicator will flash in red twice.

Establishing Bluetooth Connection

1. Hold  until the LED indicator flashes alternately in red and blue to enter the pairing mode.
2. Enable the Bluetooth function on your MP3 player, smartphone, tablet or computer, and allow it to search for devices.
3. The headphones will appear as "AudioMX" on the list of available devices. Select "AudioMX" to pair and connect. Enter the pairing code "0000" if requested. The LED indicator will flash only in blue when the connection is established.
4. The headphones may automatically pair with the last connected device when turned on, if the device is within the Bluetooth range and its Bluetooth function is on. You may need to disconnect the headphones from the previous device before pairing them with another one.

Operation in the Bluetooth mode

1. Press  to increase the volume, and press  to decrease the volume.
2. Hold  to play the next track, and hold  to play the previous track.

3. Press **⏸** to pause, and press again to resume.
4. The LED flashing in blue rapidly indicates an incoming call. Press **⏸** to answer, and press again to hang up.
5. Hold **Λ** for 2 seconds to reject the incoming call.
6. During a call, hold **Λ** for 2 seconds to switch the call between the headphones and the cell phone.
7. During a call, hold **V** for 2 seconds to mute, and hold **V** for 2 seconds again to resume.
8. When the headphones are standing by while connected to a smartphone, quickly press **⏸** twice to redial.

AUX Mode

1. Connect the headphones to your audio device using the 3.5 mm cable for wired audio output.
2. The audio control buttons on the headphones may not function in the AUX Mode. Volume adjustment etc needs to be done on the audio source device.

Trouble Shooting

Q1. Why can't I power on the headphones?

A1.1. The headphones may have run out of the battery power. Please charge the battery using the charging cable.

Q2. Why can't I connect the headphones to my Bluetooth device?

A2.1. The Bluetooth function on your device may have been turned

off. Please turn on the Bluetooth function on your device and allow it to search for compatible devices.

A2.2. The headphones may have been connected to another device. Please disconnect (unpair) the headphones from the previous device before connecting them to a new one.

A2.3. The headphones may not have been recognized by your device. Please turn off the headphones, turn them back on, search for the headphones on your Bluetooth enabled device, and make the connection again.

A2.4. The headphones may be too far away from your Bluetooth device. Please make sure that the headphones are close enough to your device, and there is no obstacle between them.

Q3. Why aren't the headphones playing sound tracks in the Bluetooth mode?

A3.1. The headphones may not have been selected as the output device. Please adjust the settings on your Bluetooth enabled device to use the headphones to play the sound tracks.

A3.2. The volume may have been adjusted to the minimum. Please press **Λ** to increase the volume.

Q4. Why is the sound quality very poor in the Bluetooth mode?

A4.1. The Bluetooth connection may not be in its optimal condition. Please make sure that the headphones are close enough to your device, and there is no obstacle between them.