

Owner's Manual

IMPORTANT SAFETY PRECAUTIONS

For U.S.A.

INFORMATION TO THE USER

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications to this equipment not expressly approved by TEAC CORPORATION for compliance could void the user's authority to operate this equipment.

For Canada

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.
CET APPAREIL NUMERIQUE DE LA CLASSE B EST CONFORME A LA NORME NIMB-003 DU CANADA.

Supplier's Declaration of Conformity

Model Number: DR-05X
Trade Name: TASCAM
Responsible party: TEAC AMERICA, INC.
Address: 10410 Pioneer Blvd., Unit #1, Santa Fe Springs, California 90670, U.S.A.

Telephone number: 1-323-726-0303

This device complies with Part 15 of FCC Rules.

- Operation is subject to the following two conditions:
- This device may not cause interference, and
 - This device must accept any interference, including interference that may cause undesired operation.

CE

This product complies with the European Directives request and the other Commission Regulations.

UKCA

This product complies with applicable UK regulations.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If

- the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.

- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- The apparatus draws nominal non-operating power from the AC outlet with its POWER or STANDBY/ON switch not in the ON position.

- The mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- Caution should be taken when using earphones or headphones with the product because excessive sound pressure (volume) from earphones or headphones can cause hearing loss.
- If you are experiencing problems with this product, contact TEAC for a service referral. Do not use the product until it has been repaired.

WARNING

To prevent possible hearing damage, do not listen at high volume levels for long periods.

CAUTION

- Do not expose this apparatus to drips or splashes.

- Do not place any objects filled with liquids, such as vases, on the apparatus.
- Do not install this apparatus in a confined space such as a book case or similar unit.
- The apparatus should be located close enough to the AC outlet so that you can easily grasp the power cord plug at any time.
- If the product uses batteries (including a battery pack or installed batteries), they should not be exposed to sunshine, fire or excessive heat.
- CAUTION for products that use replaceable lithium batteries: there is danger of explosion if a battery is replaced with an incorrect type of battery. Replace only with the same or equivalent type.
- Installed battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.

CAUTIONS ABOUT BATTERIES

This product uses batteries. Misuse of batteries could cause a leak, rupture or other trouble. Always abide by the following precautions when using batteries.

- Never recharge non-rechargeable batteries. The batteries could rupture or leak, causing fire or injury.
- When installing batteries, pay attention to the polarity indications (plus/minus (+/-) orientation), and install them correctly in the battery compartment as indicated. Putting them in backward could make the batteries rupture or leak, causing fire, injury or stains around them.
- When you store or dispose batteries, isolate their terminals with insulation tape or something like that to prevent them from contacting other batteries or metallic objects.
- When throwing used batteries away, follow the disposal instructions indicated on the batteries and the local disposal laws.
- Do not use batteries other than those specified. Do not mix and use new and old batteries or different types of batteries together. The batteries could rupture or leak, causing fire, injury or stains around them.
- Do not carry or store batteries together with small metal objects. The batteries could short, causing leak, rupture or other trouble.

- Do not heat or disassemble batteries. Do not put them in fire or water. Batteries could rupture or leak, causing fire, injury or stains around them.
- If the battery fluid leaks, wipe away any fluid on the battery case before inserting new batteries. If the battery fluid gets in an eye, it could cause loss of eyesight. If fluid does enter an eye, wash it out thoroughly with clean water without rubbing the eye and then consult a doctor immediately. If the fluid gets on a person's body or clothing, it could cause skin injuries or burns. If this should happen, wash it off with clean water and then consult a doctor immediately.
- The unit power should be off when you install and replace batteries.
- Remove the batteries if you do not plan to use the unit for a long time. Batteries could rupture or leak, causing fire, injury or stains around them. If the battery fluid leaks, wipe away any fluid on the battery compartment before inserting new batteries.
- Do not disassemble a battery. The acid inside the battery could harm skin or clothing.

For European Customers

Disposal of electrical and electronic equipment

- All electrical and electronic equipment should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- By disposing of the electrical and electronic equipment correctly, you will help save valuable resources and prevent any potential negative effects on human health and the environment.
- Improper disposal of waste equipment can have serious effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment.
- The crossed out wheeled dust bin symbol indicates that electrical and electronic equipment must be collected and disposed of separately from household waste.
- The return and collection systems are available to the end users. For more detailed information about



disposal of old electrical and electronic equipment, please contact your city office, waste disposal service or the shop where you purchased the equipment.

Disposal of batteries and/or accumulators

- Waste batteries and/or accumulators should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- By disposing of waste batteries and/or accumulators correctly, you will help save valuable resources and prevent any potential negative effects on human health and the environment.
- Improper disposal of waste batteries and/or accumulators can have serious effects on the environment and human health as a result of the presence of hazardous substances in batteries and/or accumulators.
- The crossed out wheeled dust bin symbol indicates that batteries and/or accumulators must be collected and disposed of separately from household waste. If the battery or accumulator contains more than the specified values of lead (Pb), mercury (Hg), and/or cadmium (Cd) defined in the Battery Directive (2006/66/EC), then the chemical symbols for lead (Pb), mercury (Hg) and/or cadmium (Cd) will be indicated beneath the crossed out wheeled dust bin symbol.
- The return and collection systems are available to the end users. For more detailed information about disposal of waste batteries and/or accumulators, please contact your city office, waste disposal service or the shop where you purchased them.



Contents

| | |
|--|----|
| Introduction..... | 5 |
| Note about the Reference Manual | 5 |
| Items included with this product | 5 |
| Precautions for placement and use..... | 5 |
| Beware of condensation | 5 |
| Cleaning the unit..... | 5 |
| About microSD cards..... | 6 |
| Using the TEAC Global Site | 6 |
| About TASCAM customer support service..... | 6 |
| Names and Functions of Parts..... | 6 |
| Top panel..... | 6 |
| Front panel..... | 6 |
| Rear panel..... | 6 |
| Left side panel..... | 7 |
| Right side panel..... | 7 |
| Bottom Panel..... | 7 |
| Making preparations..... | 7 |
| Installing batteries..... | 7 |
| Inserting microSD cards (sold separately)..... | 7 |
| Turning the unit on..... | 7 |
| Screen overview | 8 |
| Using the menu | 9 |
| Recording | 9 |
| Using the low-cut filter..... | 10 |
| Setting the limiter..... | 10 |
| Playing recordings..... | 10 |
| Selecting files..... | 11 |
| Deleting files..... | 11 |
| Changing the playback speed | 11 |
| Using I/O loop playback..... | 11 |
| Using as an audio interface | 12 |
| Preparation..... | 12 |
| Connection..... | 12 |
| Monitoring..... | 12 |
| Disconnecting..... | 12 |
| Troubleshooting | 13 |
| Specifications | 13 |
| Ratings..... | 13 |
| Inputs and outputs..... | 13 |
| Control Input/output ratings..... | 13 |
| Audio performance..... | 14 |
| Recording times..... | 14 |
| Other specifications | 14 |

Introduction

Thank you very much for purchasing the TASCAM DR-05X Linear PCM Recorder.

Before using this unit, read this owner's manual carefully so that you will be able to use it correctly and enjoy working with it for many years. After you have finished reading this manual, please keep it in a safe place for future reference.

Note about the Reference Manual

This Owner's Manual explains the main functions of this unit. Please see the Reference Manual for information about all the unit's functions.

You can also download this Owner's Manual and the Reference Manual from the TEAC Global Site (<https://teac-global.com/>).

Items included with this product

This product includes the following items.

Take care when opening the package to avoid damaging the items. Keep the packing materials for transportation in the future.

Please contact the store where you purchased this unit if any of these items are missing or have been damaged during transportation.

- Main unit..... X 1
- AA alkaline batteries..... X 2
- Owner's Manual (this document) including warranty..... X 1
- TASCAM ID registration guide..... X 1

Precautions for placement and use

- The environmental temperature operating range of this unit is 0–40°C (32–104°F).
- Do not install this unit in the following types of locations. Doing so could degrade the sound quality and/or cause malfunctions.
 - Places with significant vibrations
 - Near windows or other places exposed to direct sunlight

- Near heaters or other extremely hot places
- Extremely cold places
- Places with bad ventilation or high humidity
- Very dusty locations
- Places exposed directly to rain or other water
- If this unit is placed near a power amplifier or other device with a large transformer, it could cause a hum. If this occurs, increase the distance between this unit and the other device.
- This unit could cause color irregularities on a TV screen or noise from a radio if used nearby. If this occurs, use this unit farther away.
- This unit might produce noise if a mobile phone or other wireless device is used nearby to make calls or send or receive signals. If this occurs, increase the distance between this unit and those devices or turn them off.
- To enable good heat dissipation, do not place anything on top of this unit.
- Do not place this unit on top of a power amplifier or other device that generates heat.

Beware of condensation

Condensation could occur if the unit is moved from a cold place to a warm place, it is used immediately after a cold room has been heated or it is otherwise exposed to a sudden temperature change. To prevent this, or if this occurs, let the unit sit for one or two hours at the new room temperature before using it.

Cleaning the unit

Use a dry soft cloth to wipe the unit clean. Do not wipe with chemical cleaning cloths, thinner, alcohol or other chemical agents. Doing so could damage the surface or cause discoloration.

About microSD cards

A list of SD cards that have been confirmed for use with this unit can be found on our web site. Please access to a product page of this product from the TEAC Global Site (<https://teac-global.com>) to find the list or contact the TASCAM customer support service.

Using the TEAC Global Site

You can download updates for this unit from the TEAC Global Site:

<https://teac-global.com/>

In the TASCAM Downloads section, select the desired language to open the Downloads website page for that language.

About TASCAM customer support service


TASCAM products are supported and warranted only in their country/region of purchase.

To receive support after purchase, on the TASCAM Distributors list page of the TEAC Global Site (<https://teac-global.com/>), search for the local company or representative for the region where you purchased the product and contact that organization.

When making inquiries, the address (URL) of the shop or web shop where it was purchased and the purchase date are required. Moreover, the warranty card and proof of purchase might also be necessary.

Names and Functions of Parts

Top panel

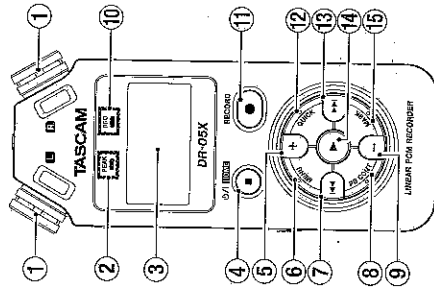

8 PB CONT button

Open Playback Control screen

9 - button

Minus/down

10 REC indicator

Shows recording status

11 RECORD [●] button

Recording

12 QUICK button

Open the quick menu

13 ►► button

Search forward/right/confirm

 
14 ► button

Play/confirm

15 MARK button


Set/clear marks

Front panel



16 Strap attachment

 Rear panel



17 MIC/EXT IN jack

Mic/external input jack

1 Built-in stereo microphone

2 PEAK indicator

Lights when recording level is too high

3 Display

4 ⏻/⏪ (HOME) [■] button

Press to stop, turn the power on/off (⏻/⏪) and open the Home screen HOME

5 + button

Plus/up


6 MENU button

Open Menu screen

7 ◀◀ button

Search backward/left/cancel

Left side panel

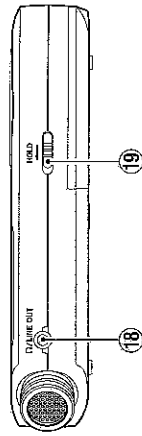


18 LINE OUT jack

Headphone/line output jack

19 HOLD switch

Set hold function


Right side panel

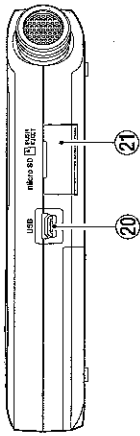

20 USB port

21 microSD card slot

Bottom Panel

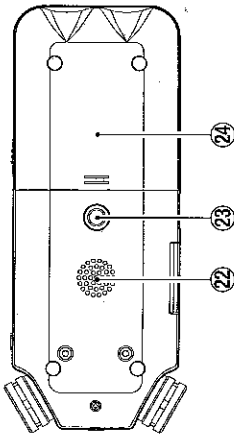

22 Mono speaker


23 Tripod attachment screw thread (1/4-inch)

24 Battery compartment

Making preparations

Installing batteries

While pressing the battery compartment cover on the back of the unit, slide it open. Then, install batteries.

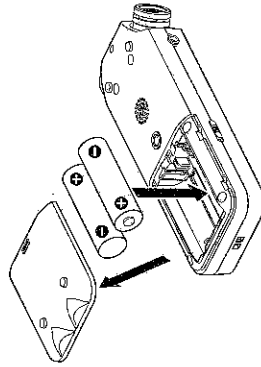

NOTE


The included alkaline batteries are for confirming operation of the unit. For this reason, they might not last very long.

TIP

The TASCAM PS-P520U AC adapter can also be used with this unit.


Inserting microSD cards (sold separately)

1. Open the microSD slot cover on the right side.
2. Insert the microSD Card (sold separately) into the slot as shown in the illustration until it clicks into place.

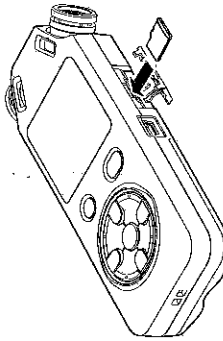

Turning the unit on

 1. Slide the HOLD switch in the direction of the arrow to unlock it.



TIP

By sliding it toward HOLD, button operations can be disabled, preventing misoperation during recording.

2. Press and hold the \odot / (HOME) [\blacksquare] button until the TASCAM DR-05X start-up screen is shown on the display.

 


Start-up screen

The first time the power is turned on after purchase, setting screens like the following will open.

Formatting cards

Press the \blacktriangleright button to execute.



CAUTION

Execution of formatting erases all data currently on the card.

This message will not appear for cards that have already been formatted.

Setting the language

Select the language used for menus and messages.



Use the + and - buttons to select the language, and press the \blacktriangleright button to confirm.

DATE/TIME

Set the date and time.




Use the \blacktriangleleft and \blacktriangleright buttons to move the cursor, and use the + and - buttons to change the date and time. Press the \blacktriangleright button to confirm.

TIP

The language and date/time settings can be changed later from the menu.


Screen overview

When stopped or playing back

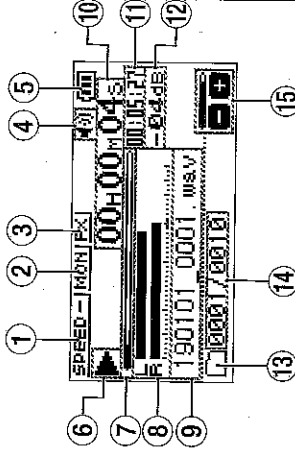

- ① Playback speed status
- ② Input mix function status
- ③ Effect status
- ④ Speaker status
- ⑤ Remaining battery charge/power supply status
- ⑥ Playback status
- ⑦ Playback position
- ⑧ Playback level meters
- ⑨ Playback file name
- ⑩ Elapsed time
- ⑪ Remaining time
- ⑫ Peak value (decibels)
- ⑬ Playback area
- ⑭ Playback file number/total number of files
- ⑮ Output volume status

When recording or in recording standby

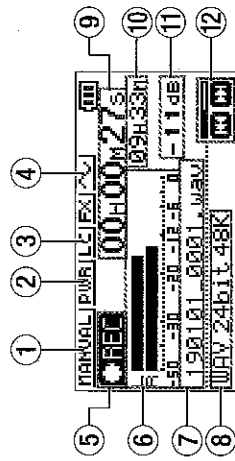


- ① Level mode setting status
- ② Plug-in power status
- ③ Low cut filter status
- ④ Tone output setting status
- ⑤ Recording status
- ⑥ Recording level meters
- ⑦ Recording file name
- ⑧ Recording format
- ⑨ Elapsed recording time
- ⑩ Remaining recording time
- ⑪ Peak value (decibels)
- ⑫ Recording level status


Using the menu

Use the menu to change various settings, including recording, playback and system settings, and to execute various functions.

 
1. Press the **MENU** button.
The MENU screen will open.



 2. Use the **+** and **-** buttons to select the menu item, and press **▶**.
The setting screen will open.



 3. Use the **+** and **-** buttons to select the setting item, and press **▶**.
Settings can now be changed and functions executed.




4. Use the **+** and **-** buttons to change the setting.

NOTE

- Press the **MENU** button to return to the previous screen.
- To return to the Home screen, press the **HOME** button.


Recording

1. Point the built-in mic towards the sound to be recorded.

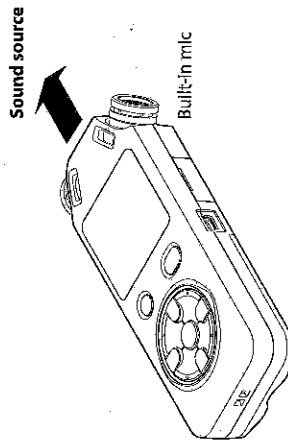

2. Press the **RECORD** button to enter recording standby.
Recording standby will start, the **REC** indicator will appear on the display, and the **REC** indicator will blink.

 -12dB




3. Adjust the recording level.

Adjust the built-in mic orientation and distance from the sound source as well as the input level so that the recording level meters stay near -12 dB at the peak input level.

Use the **◀** and **▶** buttons to adjust the input level.

 4. Press the **RECORD** [] button to start recording. Recording will start, **REC** will appear on the display, and the **REC** indicator will light.



5. Press the $\phi/1$ (HOME) [] button to stop recording. Recording stops, and **■** appears on the display.

Using the low-cut filter

Noise from air conditioning and other sources can be reduced when recording.

1. When in recording standby, press the **QUICK** button. This opens the Quick menu.



2. Use the + and - buttons to select the **LOW CUT**, and press \blacktriangleright . The setting screen for the low-cut filter will open.



- Options: OFF, 40Hz, 80Hz, 120Hz, 220Hz
3. Use the + and - buttons to select the setting, and press \blacktriangleright . This changes the setting and returns to the Quick menu screen.
 4. Press the $\phi/1$ (HOME) [] button. The Home screen will reopen.



Setting the limiter

This can help prevent sound from becoming distorted when loud noises are input suddenly during recording.

 
1. When in recording standby, press the **QUICK** button. This opens the Quick menu.



2. Use the + and - buttons to select **LEVEL MODE**, and press \blacktriangleright . This opens the Level Mode setting screen.



- Options: MANUAL (default), LIMITER, PEAK REDUCTION, AUTO
3. Use the + and - buttons to select the setting, and press \blacktriangleright . This changes the setting and returns to the Quick menu screen.
 4. Press the $\phi/1$ (HOME) [] button. The Home screen will reopen.




Playing recordings

1. Select a file, and press the \blacktriangleright button to start playback. Playback starts, and \blacktriangleright appears on the display.
2. Adjust the volume. Use the + and - buttons to change the output volume.
3. Press the $\phi/1$ (HOME) [] button to stop playback. Playback stops, and \blacktriangleright appears on the display.

Listening with headphones

Connect headphones to the $\phi/1$ LINE OUT jack on this unit.

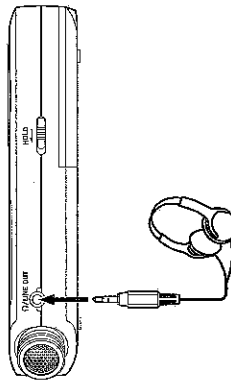


Operations during playback


| | |
|--|--|
| Pause playback | Press the ■ button |
| Search forward | Press and hold the ▶▶ button |
| Search backward | Press and hold the ◀◀ button |
| Skip to start of playing file briefly | Press the ◀◀◀ button once |
| Skip to start of file before playing file briefly | Press the ◀◀◀ button twice |
| Skip to start of file after playing file briefly | Press the ▶▶▶ button once |
| Go back the set amount of time (options: OFF, 1 sec, 3 sec, 5 sec, 10 sec, 30 sec, 1 min, 5 min, 10 min) | Press the ▶ button during playback |
| Add a mark | Press the MARK button during playback |

Selecting files

 1. Press the **MENU** button. The **MENU** screen will open.



 2. Use the **+** and **-** buttons to select **BROWSE**, and press **▶▶**. The Browse screen will open.




3. Use the **+** and **-** buttons to select a file, and press **▶▶**. The Home screen will reopen.

TIP


Press the **▶** button to start playback and return to the Home screen.

Deleting files

 1. To delete a file, select it using the **◀◀** or **▶▶** button or the **BROWSE** screen.
2. While the Home Screen is open when stopped, press the **QUICK** button to open the Quick menu.



 
3. Use the **+** or **-** button to select **DELETE**.
4. Press the **▶** button to open a confirmation screen for file deletion.



To delete the file, press the **▶▶** button. To cancel deletion, press the **◀◀** button.

Changing the playback speed

 1. Press the **PB CONT** button. The Playback Control screen will open.



2. Use the **+** and **-** buttons to change the playback speed.

 
The playback speed can be adjusted in a range from 50% (0.5) to 200% (2.0).

Using I/O loop playback

Use this function to repeat playback between two set points (IN and OUT).

1. Press the **PB CONT** button.

The Playback Control screen will open.



2. Press the **▶** button to start playback.
3. Press the **MARK** button to set the **IN** (starting) point.

4. Press the **MARK** button to set the **OUT** (ending) point.

When the **OUT** point is set, I/O loop playback will start.

TIP

During I/O loop playback, press the **MENU** button to end I/O loop playback while retaining the set **IN** and **OUT** points.


5. Press the **MARK** button to clear the **IN** and **OUT** points.

Using as an audio interface


By connecting this unit to a computer (Windows/Mac) or iOS device, you can use it as an audio interface.

Preparation

1. Use a USB cable to connect the unit to a computer, and turn the unit on.

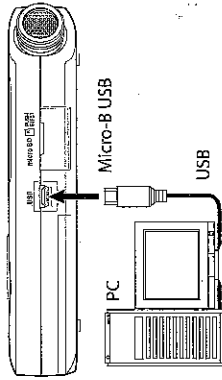

The USB CONNECT screen will open.

 


NOTE

- With Windows, an ASIO driver for the DR-X series can be used. Check the page for this product on the TASCAM website (<https://tascam.com/us/>) for details.
- With a Mac, the standard OS driver will be used, so there is no need to install any software.
- Lightning to USB Camera Adapter, for example, is necessary to connect to an iOS device.


2. Use the + and - buttons to select AUDIO I/F, and press ►.

 The AUDIO I/F screen will open.



Connection

 1. Select the type of connected device.



Options: PC/Mac (default), iOS

NOTE

 
- When PC/Mac is selected, the unit will operate on bus power from the computer.
- If the connected device type is iOS, this unit will operate on batteries.

2. Set the sampling rate.




Options: 44.1k, 48k (default)

3. Select Exec at the CONNECT item.




 When the unit connects with the external device, the USB AUDIO I/F screen will open.



Monitoring

 1. Press the MENU button.
The MENU screen will open.
2. Selecting the monitored signal.



Options

PC/Mac (default): Monitor the playback sound from PC or Mac.

 
DIRECT: Monitor the input sound without latency.

NOTE

- The meters can be used to check the playback sound from the external device.
- Sound will not be output from the speaker.
- Use headphones to hear the sound.

Disconnecting

1. Press the MENU button.
The MENU screen will open.
2. Select Exec at the DISCONNECT item.



The recorder disconnects from the external device, and Home screen opens.

Troubleshooting

If you are having trouble with the operation of this unit, please try the following before seeking repair. If these measures do not solve the problem, please contact the store where you purchased this unit or TASCAM customer support service.

Power will not turn ON.

- Confirm that batteries are installed correctly.
- Confirm that the HOLD switch is not set.

The unit turns off automatically.

- Check the automatic power saving function setting. Set it to "Off" to prevent the power from turning off automatically. See "Setting the automatic power saving function" in "13 - Settings and Information" of the Reference Manual.

The microSD card is not recognized.

- Confirm that the microSD card is inserted completely.

No sound is output or sound is not output from the speaker.

- Confirm that the output volume is not lowered too much.
- Confirm that the speaker setting is on. Even if the speaker setting is on, sound will not be output from the speaker when headphones are connected or when the unit is recording or in recording standby.

Recording is not possible.

- Confirm that the REC indicator is lit. If the REC indicator is blinking, the unit is in recording standby.
- Check the remaining available recording time shown on the Recording screen.

The recorded sound is quiet or distorted.

- Check the input level setting.

The unit is not recognized by a computer connected using a USB cable.

- Confirm that the connected computer uses a compatible operating system.
- The USB function used must be selected from the menu to enable a computer to recognize this unit.
- Confirm that the USB cable is not designed only for charging.
- Confirm that the connection is not being made through a USB hub.

Sound skips or noise occurs when in USB audio interface mode.

For Windows

- Performance options
Select "Adjust for best performance".
- Power options
Select "High performance".
- Use an ASIO driver for the DR-X series.
Check the page for this product on the TASCAM website (<https://tascam.com/us/>) for details.

The wrong language was set accidentally.

- After pressing the ϕ /1 (HOME) [\blacksquare] button to turn the unit off, press the ϕ /1 (HOME) [\blacksquare] button while pressing and holding the MENU button.
The language selection menu will appear, and you will be able to select the language.

Specifications

Ratings

Recording media

- microSD card (64 MB - 2 GB)
- microSDHC card (4 GB - 32 GB)
- microSDXC card (48GB - 128GB)

Recording/playback formats

- WAV: 44,1/48/96 kHz, 16/24 bit
- MP3: 44,1/48 kHz, 32/64/96/128/192/256/320 kbps

Number of channels

- 2 channels (stereo)

Inputs and outputs

MIC/EXT IN Jack (can provide plug-in power)

- Connector: 1/8" (3.5mm) stereo mini jack

ϕ /LINE OUT Jack

- Connector: 1/8" (3.5mm) stereo mini jack

Built-in speaker

- 0.3W (mono)

Control input/output ratings

USB port

- Connector type: Micro-B
- Format: USB 2.0 HIGH SPEED mass storage class

Dimensions (W x H x D)
61 x 141 x 26mm (2.4" x 5.55" x 1.02")

Weight
119 g (4.2 oz) (not including batteries)
165 g (5.82 oz) (including batteries)

Operating temperature range
0°C - 40°C (32°F - 104°F)
• Illustrations in this manual might differ in part from the actual product.
• Specifications and external appearance might be changed without notification to improve the product.
• Detailed specifications are provided in the Reference Manual.

Other specifications

Power
2 AA batteries (alkaline or NiMH)
USB bus power from a computer
AC adapter (TASCAM PS-P520U, sold separately)

Power consumption
1.7 W (maximum)

Battery operation time (continuous operation)

• Using alkaline batteries (EVOLTA)

| Format | Operation time | Note |
|--------------------------------------|------------------|--------------------------------|
| Recording WAV, 44.1kHz, 16-bit | About 17.5 hours | With built-in stereo mic input |
| Playback WAV, 44.1kHz, 16-bit | About 16.5 hours | Using built-in speaker |

Recording: JETA recording time
Playback: JETA music playback time
• Using NiMH battery (eneloop)

| Format | Operation time | Note |
|--------------------------------------|------------------|--------------------------------|
| Recording WAV, 44.1kHz, 16-bit | About 14.5 hours | With built-in stereo mic input |
| Playback WAV, 44.1kHz, 16-bit | About 15 hours | Using built-in speaker |

Recording: JETA recording time
Playback: JETA music playback time

NOTE
The battery operation times (during continuous operation) could vary depending on the media being used.

Audio performance

Frequency response
20 Hz - 20 kHz +0/-1 dB
(MIC/EXT IN to LINE OUT, 44.1 kHz sampling frequency, JETA)
20 Hz - 22 kHz +0/-1 dB
(MIC/EXT IN to LINE OUT, 48 kHz sampling frequency, JETA)
20 Hz - 40 kHz +0/-1.5 dB
(MIC/EXT IN to LINE OUT, 96 kHz sampling frequency, JETA)

Total harmonic distortion

0.01% or less
(MIC/EXT IN to LINE OUT, 44.1/48/96 kHz sampling frequency, JETA*)

S/N ratio

94 dB or higher
(MIC/EXT IN to LINE OUT, 44.1/48/96 kHz sampling frequency, JETA*)
(Note) JETA: Conforming to JETA CP-2150

Recording times

| File format (recording setting) | Capacity |
|---------------------------------|--------------------------------|
| | 4 GB |
| WAV 16-bit (STEREO) | 44.1 kHz 6:44:00 |
| WAV 24-bit (STEREO) | 96 kHz 2:04:00 |
| MP3 (STEREO/MONO) | 44.1 kHz 48 kHz 29:48:00 |

• The recording times shown above are estimates. They might differ depending on the microSD/microSDHC/microSDXC card in use.
• The recording times shown above are not continuous recording times, but rather they are the total possible recording times for the microSD/microSDHC/microSDXC card.