

Kundendienst

Wenden Sie sich bei Problemen mit Ihrer Waage an unseren Kundendienst. Detaillierte Hinweise zu Service, Reparatur, Garantie und der Produktregistrierung finden Sie unter www.zwilling.com/service.

Zubehör

Ein geeignetes abnehmbares Netzteil kann unter www.zwilling.com bestellt werden.

Entsorgung



Das Symbol „durchgestrichene Mülltonne“ erfordert die separate Entsorgung von Elektro- und Elektronik-Altgeräten (WEEE). Solche Geräte können gefährliche und umweltgefährdende Stoffe enthalten. Dieses Gerät und seine Verpackung nicht im unsortierten Hausmüll sondern an einer ausgewiesenen Sammelstelle für Elektro- und Elektronik-Altgeräte entsorgen. Dadurch tragen Sie zum Schutz der Ressourcen und der Umwelt bei. Für weitere Informationen wenden Sie sich bitte an Ihren Händler, an ZWILLING (www.zwilling.com/service) oder an die örtlichen Behörden.

Kinder dürfen auf keinen Fall mit Kunststoffteilen und Verpackungsmaterial spielen, da Verletzungs- bzw. Erstickengefahr besteht. Solches Material sicher lagern oder auf umweltfreundliche Weise entsorgen.

Safety

Read these operating instructions in their entirety and with care before using the kitchen scales. Keep these operating instructions in a safe place. If you pass the kitchen scales on to a third party, make sure to include the operating instructions.

Failure to observe these operating instructions can lead to personal injury or damage to the

appliance. Zwilling does not accept any liability for damage caused by a failure to observe these operating instructions.

Information that is important to your safety is specially marked. Make sure to observe this information in order to avoid accidents and damage to the appliance.

Safety information

The kitchen scales (hereinafter referred to as the "appliance") are designed exclusively for weighing food and small objects of 10 kg or less in the home.

Any other use is considered improper and may result in property damage.

The appliance is intended for domestic use. It is not intended for commercial use.

Certain persons are at greater risk:

This appliance may be used by children 8 years of age and older and by persons with reduced physical, sensory or mental capacity or with a lack of experience and knowledge, providing such children and persons are supervised or have been instructed in the safe use of the appliance and understand the hazards resulting from using the appliance.

Children must not be allowed to play with the appliance. Cleaning and maintenance must not be car-

ried out by children without supervision.

Keep children away from the packaging material. It poses a risk of suffocation.

A faulty appliance can cause damage and injuries:

Always check the appliance for damage before use. If you detect any transport damage, contact the dealer from whom you purchased the appliance immediately. Never use an appliance that is defective.

If the appliance is defective, it must be repaired. The appliance does not contain any parts that you are able to repair yourself.

Incorrect handling of the appliance can result in damage.

Place the appliance on a dry, even, non-slip surface.

Do not place the appliance on hot surfaces or in close proximity to strong sources of heat.

Always switch the appliance off before cleaning it.

Safety

Never immerse the appliance in water or other liquids.
Never leave the charger cable hanging down off an edge while charging the appliance, and always disconnect the charger cable as soon as the appliance is fully charged.

Store the appliance in a dry place, away from direct sunlight.

Never use the appliance as a place to set down other objects when it is not in use.

The device contains a permanent battery. Improper use will cause a fire hazard.

WARNING: For recharging the battery only use the detachable supply unit specified in the technical specifications.

This device contains battery that is non-replaceable.

Charge the battery only within the

device and with the delivered USB charger cable. Never attempt to remove the battery from the device. Never leave the device unattended while charging.

Never short-circuit the device or expose it to naked flames.

Never open the device or take any other action that may destroy it.

Never dispose of a battery into fire or a hot oven, or by mechanically crushing or cutting it. This can result in an explosion!

Never expose a battery to an extremely high temperature surrounding environment. This can result in an explosion or in the leakage of flammable liquid or gas.

Never subject a battery to extremely low air pressure. This can result in an explosion or in the leakage of flammable liquid or gas.

GB

Technical data

Technical data

Battery specification	200 mAh/3.7 V (Li-ion)
Supply input	12 V \approx 2.5 A powered by SELV
Mains connection (power in socket)	USB type C
Power consumption (switched on/off)	\leq 20 mA / \leq 30 μ A
USB charger cable	USB 2.0 Type A / Type C connector, 1 m length
Load capacity	max. 10 kg / 22 lb
Measurement resolution	1 g / 0.1 oz
Dimensions (L x W x H)	245 x 189 x 20 mm
Weight	Approx. 600 g
Max. operating altitude	2,000 m



Read this user manual carefully and keep it for further reference.



Protection class III

Markings



Detachable supply unit:

 
EU: Input: 230V 50Hz, 0.8A; Output: 12V DC 2.5A

US: Input: 120V 60Hz 0.8A; Output: 12V DC 2.5A



The appliance complies with the directives for CE and UKCA marking.

Overview

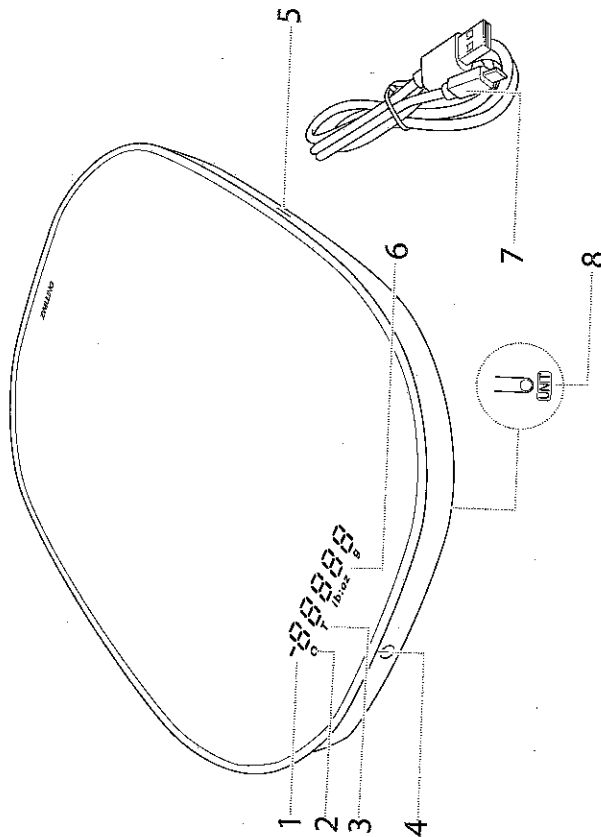


- 1 Weight display
- 2 Zero weight display
- 3 Tare display (400 g or over)
- 4 Control panel (power on/off, select function)
- 5 USB charging socket
- 6 Unit of measurement (g, lb, oz)
- 7 USB charger cable
- 8 Unit selection button (on underside)

Operation

1 Before first use/Charging the battery

 Before using the scales for the first time and when their battery is empty, you will need to charge the battery using the USB charger cable supplied. To do this, connect the charger cable to a power source (e.g. computer, USB charger) via a USB port. When the display flashes, charging is complete.

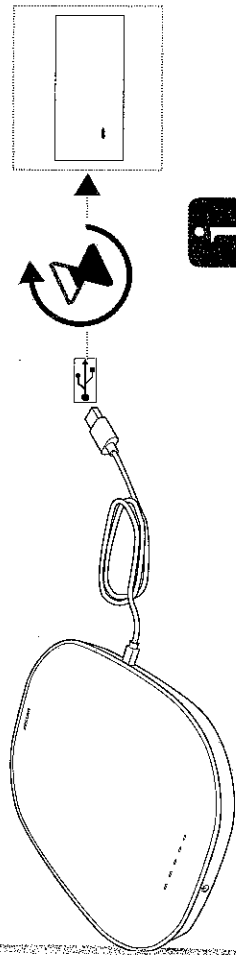


Scales not usable while charging. After 1 minute of charging, the scales can be used for 20 minutes.



While the appliance is charging, a dash on the display will move from right to left.


2 Switching on and using the appliance

To switch on the scales, place them on an even surface and press on the control panel. As soon as the weight on the display reads zero, the scales are ready for use. If you want to weigh items in a bowl or other container, you must either place the container on the scales before switching them on or tap the control panel before weighing to reset it to zero.

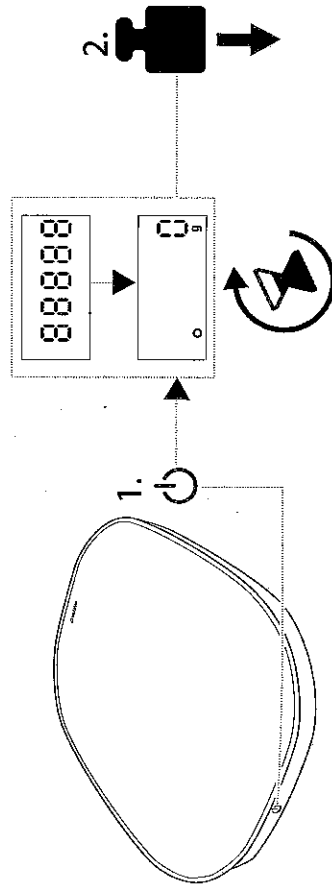

3 Weighing multiple ingredients (tare function)


To weigh multiple ingredients in succession, weigh the first ingredient as normal and then tap on the control panel. When you add your next ingredient, the weight of this ingredient will be shown on the display. Tap the control panel before adding each new ingredient to reset the display to zero. As long as the "O" symbol is still shown on the display, you can add up to 10 kg in weight.

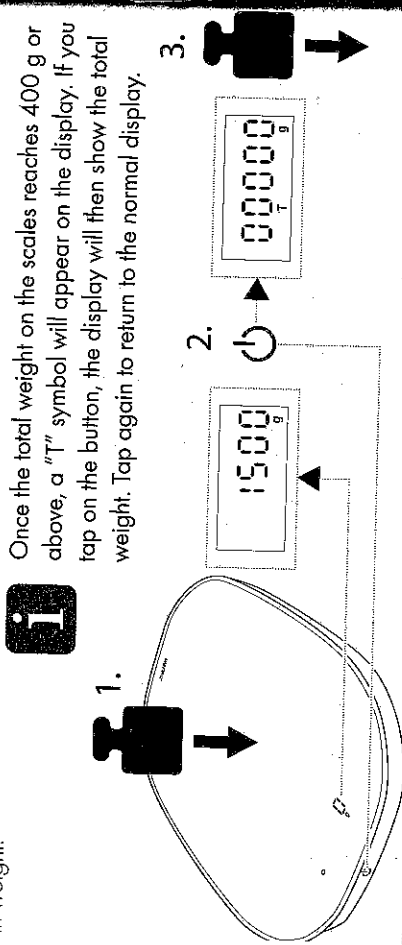

Once the total weight on the scales reaches 400 g or above, a "T" symbol will appear on the display. If you tap on the button, the display will then show the total weight. Tap again to return to the normal display.

5 Switching off

To switch off the scales, keep your finger pressed on the control panel for 3 seconds until the display goes off. The scales are now switched off.

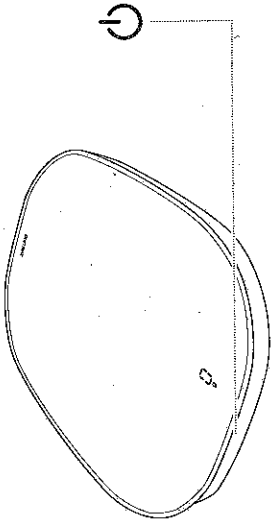


The scales will switch off automatically if not used for 8 minutes.

4 Switching the weight display

To switch the weight display from grams to pounds or vice-versa, press the unit select button on the bottom of the scales after switching them on. The selected unit of measurement will be shown on the display.





The appliance will remember the last unit of measurement you used after you have switched it off.

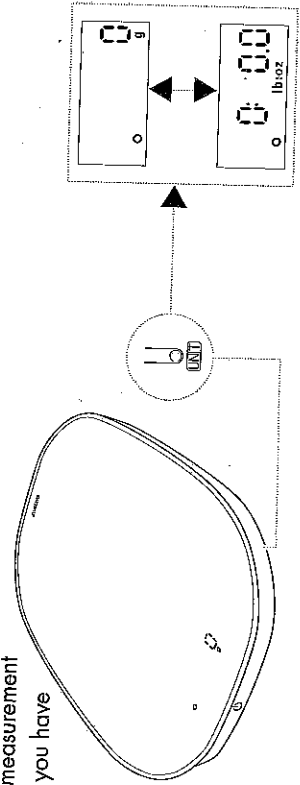

Maintenance

1 Cleaning the scales

Clean the scales using a damp cloth. Do not use micro-fibre cloths.

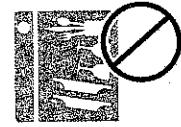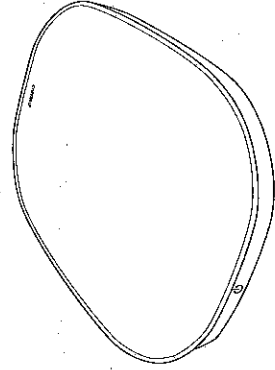

Fault

Fault

Problem

Possible cause

Remedy

The display has been reset to zero for a container or to weigh additional ingredients, and the object not included in the weight has been taken off the scales.

Tap on the control panel to reset the display to zero again.

The display is not showing the expected unit of measurement.

Switch the display to the required unit of measurement.

The scales are including the container in the weight on the display.

Before weighing, place the container on the scales and tap on the control panel to reset the display to zero.

The display is only showing the additional weight, not the total weight.

The total weight is only shown once it exceeds 400 g (tare display) and you tap on the control panel after adding an additional weight.

The message "Err" appears on the display.

The load on the scales is too heavy.

Do not place more than a total of 10 kg on the scales.

The message "Lo" appears on the display.

The battery is empty.

Charge the battery using the USB connection on the scales.

Unable to switch on scales.

The battery is charging.

Wait until charging is complete or disconnect the USB charger cable to abort the charging procedure.

 
Customer Service

Please contact our Customer Service team if you encounter any problems with your scales. Detailed information on service, repairs, warranty and product registration can be found at www.zwilling.com/service.

Accessories

A suitable detachable supply unit can be ordered on www.zwilling.com.

Disposal

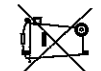

The "crossed-out refuse bin" symbol demands separate disposal of decommissioned electrical and electronic devices (WEEE). Such devices can contain hazardous substances that are harmful to the environment. Do not dispose of this device and its packaging as unsorted domestic waste; instead, return it to a designated collection point for the recycling of end-of-life electrical and electronic equipment. In this way, you can help to conserve resources and protect the environment. For further information, please contact your retailer, ZWILLING (www.zwilling.com/service) or the local authorities.

Children must not play with plastic bags and packaging material, due to possible injury or danger of suffocation. Store such material safely or dispose of environmentally friendly.

Address

ZWILLING J.A. HENCKELS (UK) LTD

Unit 4 Bardon Hill
 Coalville
 Leicestershire LE67 1TD
 UNITED KINGDOM