 


VACLIFE

TIRE INFLATOR

USER MANUAL

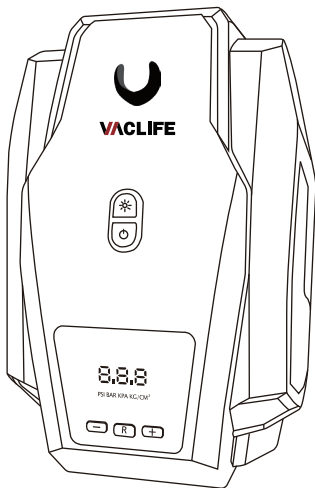

// VL701

THANK YOU FOR YOUR PREFERENCE FOR VACLIFE

If you have any problems with our product, please feel free to contact us.

 [**support@vaclife.com**](mailto:support@vaclife.com)

// CAUTIONS

Note: Please read carefully and **SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE**. Misuse may lead to product damage and physical injury.

i Precautions

- Do not disassemble, repair, or modify the appliance by yourself.
- Keep the appliance out of the reach of children and pets. Close supervision is necessary when the appliance is used around children.
- Keep the appliance away from fire, flammable gases, liquids, and strong magnetic fields. Or it may increase the risk of fire and burst.
- This product contains small accessories which might cause suffocation of children.
- The appliance is applicable to cars with tire pressure ≤ 50 psi and tire width ≤ 245 mm. It's not suitable for large vehicles like trucks, vans, or off road vehicles.

i Safety Instructions

 
- Do not use this appliance in the rain, snow, or where there are liquids.
- Do not use the appliance if it is damaged or the cable is broken, it might cause electric shock.
- Check if the nozzle and preset pressure are suitable for the inflatable before inflation, or it may impose hazard.
- Use the accessories included in the package ONLY.
- It is normal that the air hose and the cigarette lighter may get hot during and after use. Avoid long-time physical contact with these parts.
- It is recommended that the continuous working time of this appliance should be less than 10 minutes. Let it cool down for 10 minutes between every 10-minute use.
- Please do not over-inflate, or personal injury might be triggered due to high pressure.
- Please do not pull the cable or the hose violently.
- Experiments show that the gas of the car tire will escape when the air nozzle has been removed, leading to a decrease of 0.5-2.0 PSI in tire pressure. VacLife considers this case, so we make a unique design that the tire pressure would exceed 0.5-2.0 PSI over the preset pressure. This allows it to achieve proper tire pressure after the removal of the air nozzle.

i Storage and Cleaning

- Let it cool down before storage.
- Please keep the appliance in a dry and cool place when not used for a long time.
- Do not use chemical detergent to clean the appliance. Use mild soap and a damp cloth to wipe the body only.



// PRODUCT DETAILS

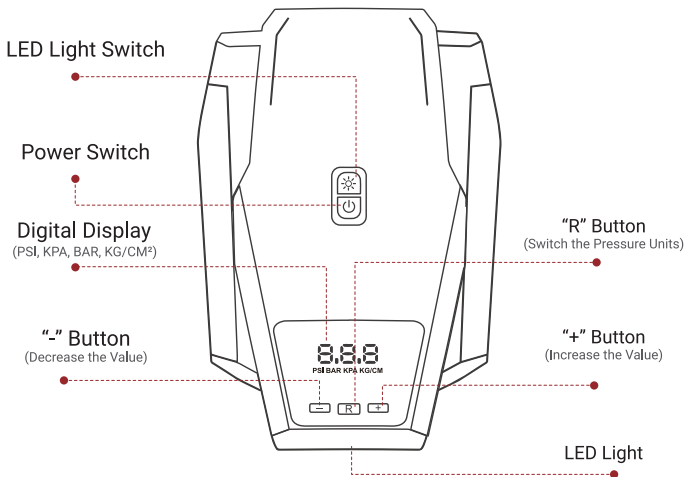

// PRODUCT PARAMETERS

Power: 120W

Working Voltage: DC 12V

Maximum Operating Current: 10A

Maximum Working Pressure: For Tire Pressure ≤ 50 PSI

Pressure Measurement Accuracy: ± 0.5 PSI

Pressure Unit: PSI, KPA, BAR, KG/CM²

Continuous Working Time: ≤ 10 Mins

Material: ABS + Metal

// DISPOSAL INFORMATION



- This appliance is made of environment-friendly and recyclable material. Recycle where possible.

 


- Do not dispose of the appliance in the normal domestic waste! Dispose of the appliance and accessories in accordance with local regulations.




// PRODUCT OPERATION

HOW TO USE

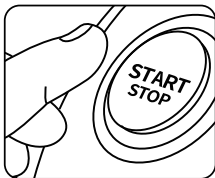


Step 1

 Start the car engine.

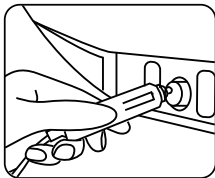

Step 2

 Insert the power cord into the 12V cigarette lighter socket.

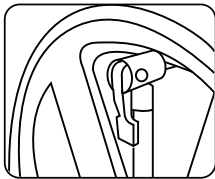

Step 3

 
Remove the dust cap of the valve, and then connect the air hose to the valve. Make sure the hose and valve of the inflatable are connected tightly.



Step 4


Check the current pressure of the inflatable first. Then, press the "R" button to choose the pressure unit, and then press "+" or "-" to set your desired pressure. When the number stops flashing, the pressure is set.

// PRODUCT OPERATION

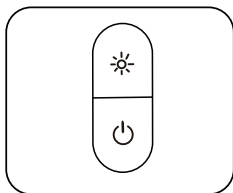

Step 5

 
Press the power switch to start inflating. When the preset pressure is reached, the inflator will automatically stop.

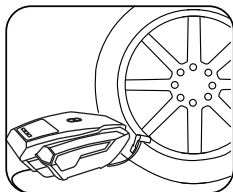

Step 6

Press the power switch again to turn off the appliance after inflation. Disconnect the power cord and the nozzle.

 LIGHTING FUNCTION

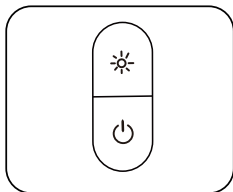

Press the LED light switch to turn on/off the light when using the appliance at night or in dark environments.



// TROUBLESHOOTING

Problems	Possible Reasons and Solutions
The inflator does not work.	• Check if the preset pressure is lower than the current pressure. • Check if the power cord is connected tightly. • Check if the car engine has been started. • Check if the glass fuse is damaged.
The inflation is slow.	• Check if the air hose and the inflatable are connected tightly. • Check if the air hose leaks.
There is air leakage.	• Check if the inflatable leaks. • Check if all connecting parts are connected tightly and ensure the nozzle is screwed tightly.
The appliance works normally, but the current pressure shows 0.	• Check if the hose is damaged. • Low-pressure inflatables like balloons are not measurable by this appliance. • When the tire is flat, it takes a little time for the tire pressure to be measurable.
Accessories are missing or damaged.	• Please contact our customer service team.

If you have any other problems, please feel free to contact our customer service team.

 support@vaclife.com

// WARRANTY

ABOUT WARRANTY

Q: Do you have a warranty for this product?

A: We strictly abide by the Amazon regulations which cover a full refund or a free replacement within 30 days after your purchase. Additionally, we offer a 2-year warranty, if there are any problems with this product, please always feel free to contact us at **support@vaclife.com**. We promise our team always stands behind our product and we will try our best to offer you a better user experience.