

CARE AND USE GUIDE

UNDER ARMOUR® VACUUM INSULATED BEVERAGE BOTTLES

GENERAL CARE

- Before first use, wash all parts with warm, soapy water. Rinse all parts thoroughly and allow time to dry.
- Contents should not be left in the container for longer than 24 hours. As soon as possible after each and every use, wash all parts with warm, soapy water. Rinse all parts thoroughly with clean water. Allow all parts to dry completely prior to next use or storage.
- DO NOT use abrasive cleaners or scrubbers since they may dull the finish.
- DO NOT use bleach or cleaners containing chlorine on any parts of the product.
- This product is top-rack dishwasher safe; however, hand washing is recommended as the
 dishwasher uses harsher detergents and hot water that may affect the appearance of your
 product.
- Residual liquids, foods, or other contents may become trapped between product components, such as lid parts, container parts, gaskets (flexible band around lid and/or stopper), or straws (if present in the product). Although this product is top-rack dishwasher safe, hand washing is recommended to ensure that all parts of the product are thoroughly cleaned.
- For maximum insulation efficiency, prechill the product just prior to use. Fill with cold tap water, attach lid, let stand 5 to 10 minutes and empty water. After filling with contents, cover product with lid to increase thermal efficiency.

ASSEMBLY & USE

Outdoor Beverage Bottle with Carry Loop:

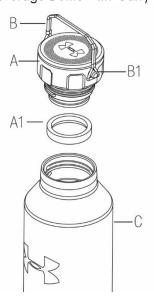


Image for reference only: actual product may vary

- 1. Remove lid (A) by twisting counterclockwise.
- 2. Remove gasket (A1).
- 3. Wash all parts separately and re-assemble.
 - a. Ensure gasket (A1) is properly seated to minimize leaking.
- 4. Fill bottle (C) with beverage. Do not overfill: Leave space for lid (A) to avoid overflow.
- 5. Replace the lid (A) by twisting it clockwise.
- 6. Raise carry loop (B) to transport bottle.
- 7. If attaching bottle to equipment, make sure lid is fully tightened on bottle. Pull carry loop (B) outward to release from carry loop pin (B1). Once hooked to equipment, push down on carry loop (B) until it locks securely to carry loop pin (B1).
 - a. Note: Bottle must be secured to equipment meant to withstand the weight of the bottle when filled. Misuse of the bottle may result in breakage or injury.
- 8. If desired, the carry loop (B) can be removed entirely by releasing from the carry loop pin (B1) and pulling on the carry loop (B) until it is fully removed.
 - a. Note: Removing carry loop (B) entirely from the lid (A) may result in loss of components.
- 9. To replace the carry loop (B), locate the hole for the carry loop pin (B1). Slide the carry loop pin (B1) through the lid and close.

WARNINGS

- DO NOT use product in microwave, on stove top, or in any type of oven.
- NOT RECOMMENDED FOR USE BY CHILDREN: Keep out of the reach of children, especially when product contains hot contents, which may burn or scald user.
- Always test temperature of contents before consuming.
- DO NOT overfill the container: Leave space at top of container for lid and stopper (if present), to avoid overflow. Hot contents may burn or scald user if overflow occurs.
- Check periodically to make sure any gasket (flexible band around lid and/or stopper) is present and properly positioned to prevent contents from passing through stopper when stopper is closed (if applicable to product). Missing, worn or misaligned gaskets may cause product to leak. Leakage of hot contents may burn or scald user.
- In general, contents should not be left in container for longer than 24 hours. However, the rate at which contents spoil depends on several factors. Certain contents that include, for example, dairy and/or tomato may start to spoil sooner. Proceed with caution when using the product with quick spoiling contents.
- If contents are left in container longer than 24 hours, or you suspect spoilage, use caution
 when opening container. Contents spoilage can cause pressure inside container to build,
 possibly leading to forceful ejection of stopper or contents. In such circumstances, before
 attempting to open container, ENSURE THE OPENING IS POINTED AWAY FROM THE USER
 OR OTHER PERSONS TO AVOID INJURY.
- DO NOT use tools or devices to force container to open.
- If you are unable to open container by hand, do not open it and dispose of it at your local waste facility.
- DO NOT use to store or carry dry ice. This may cause lid/stopper and contents to eject forcefully or leak.

LIMITED WARRANTY

Thermos L.L.C. warrants this Genuine Thermos Brand product to be free from defects in material or workmanship for five years from date of purchase. This warranty does not cover ordinary wear and tear or color fading, or any condition affected by abuse, neglect, alteration, accident or improper use or maintenance.

We will, at our option, repair or replace any product component part that fails to conform to this warranty within 30 days after its receipt by our factory service department. IN NO EVENT WILL THERMOS BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES.

Some jurisdictions do not allow the exclusion of incidental, consequential or special damages, so the preceding exclusion may not apply to you.

This is a factory guarantee.

Please do not return this product to the retailer.

Send defective unit or component along with written explanation of defect directly to: Thermos L.L.C. - Warranty Service

355 Thermos Road

Batesville, MS 38606, USA
1-800-831-9242

www.thermos.com

In Canada: 1-800-669-7065 www.thermosbrand.ca

This warranty gives you specific legal rights and you may also have other rights, which vary from state to state or province to province.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REPRESENTATIONS OR CONDITIONS OF QUALITY AND PERFORMANCE, WHETHER WRITTEN, ORAL OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SUCH IMPLIED WARRANTIES, REPRESENTATIONS AND CONDITIONS ARE HEREBY DISCLAIMED. THE REMEDIES STATED HEREIN CONSTITUTE PURCHASER'S EXCLUSIVE REMEDIES AND THERMOS'S ENTIRE LIABILITY FOR ANY BREACH OF WARRANTY.

Thermos L.L.C. is an exclusive licensee of Under Armour.

THERMOS is a registered trademark in over 115 countries.