

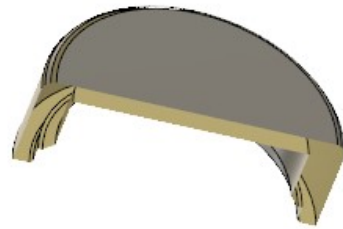


# AONIC Pen – Disassembly and Components Guide

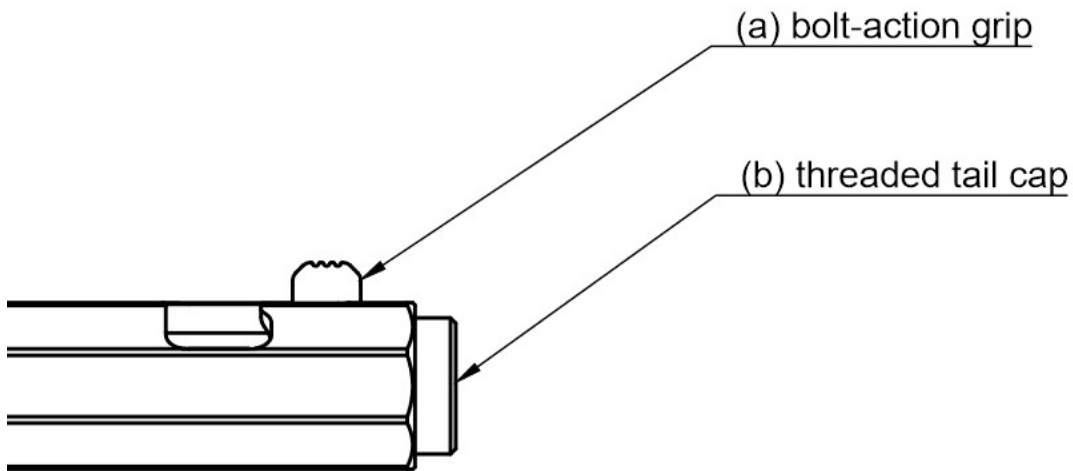

USE THE PROVIDED L-SHAPED HEX KEY TO LOOSEN THE HIGHLIGHTED GRUB SCREW THROUGH THE PEN TAIL OPENING

REMOVE THE THREADED TAIL CAP BY TWISTING COUNTER CLOCKWISE

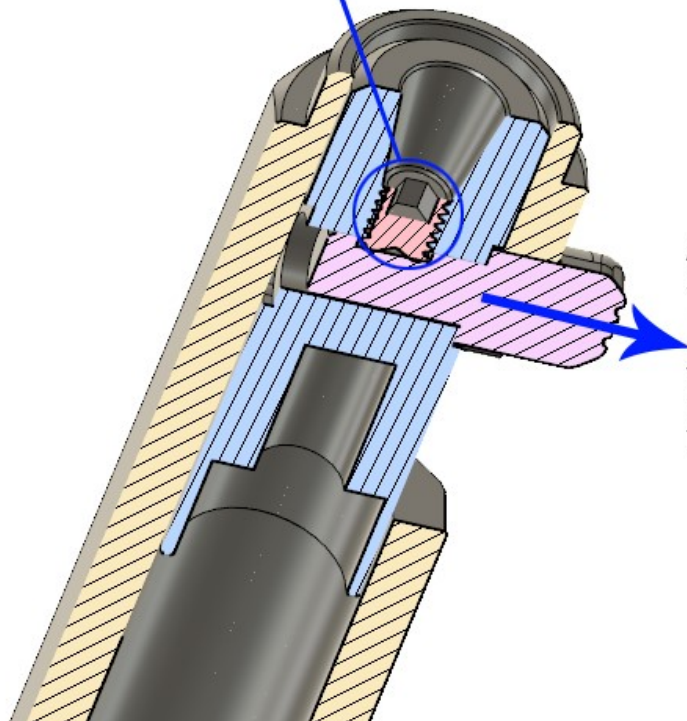

AFTER LOOSENING THE GRUB SCREW REMOVE THE BOLT-ACTION GRIP BY PULLING IT OUT.

YOU MAY NEED TO WIGGLE AND ROTATE THE GRIP SOMETIMES TO CLEAR ANY DEBRIS IN THE WAY

After you have removed the bolt-action grip, the entire pen assembly components should now freely slide out from the rear of the pen by tilting it down.

Below is a representation of all the components you will have in front of you after they are removed from the pen body. The picture below also shows the correct order of components to insert back into the pen during RE-ASSEMBLY.

1. Ink Refill
2. Bolt Action
3. Bolt Action Grip
4. Pen Tail Cap



If you have any questions, or need any kind of support with your AONIC Pen, please feel free to reach out to us over email on [info@aonicinc.com](mailto:info@aonicinc.com)

Thank you for your support!  
- Raja, AONIC Inc