


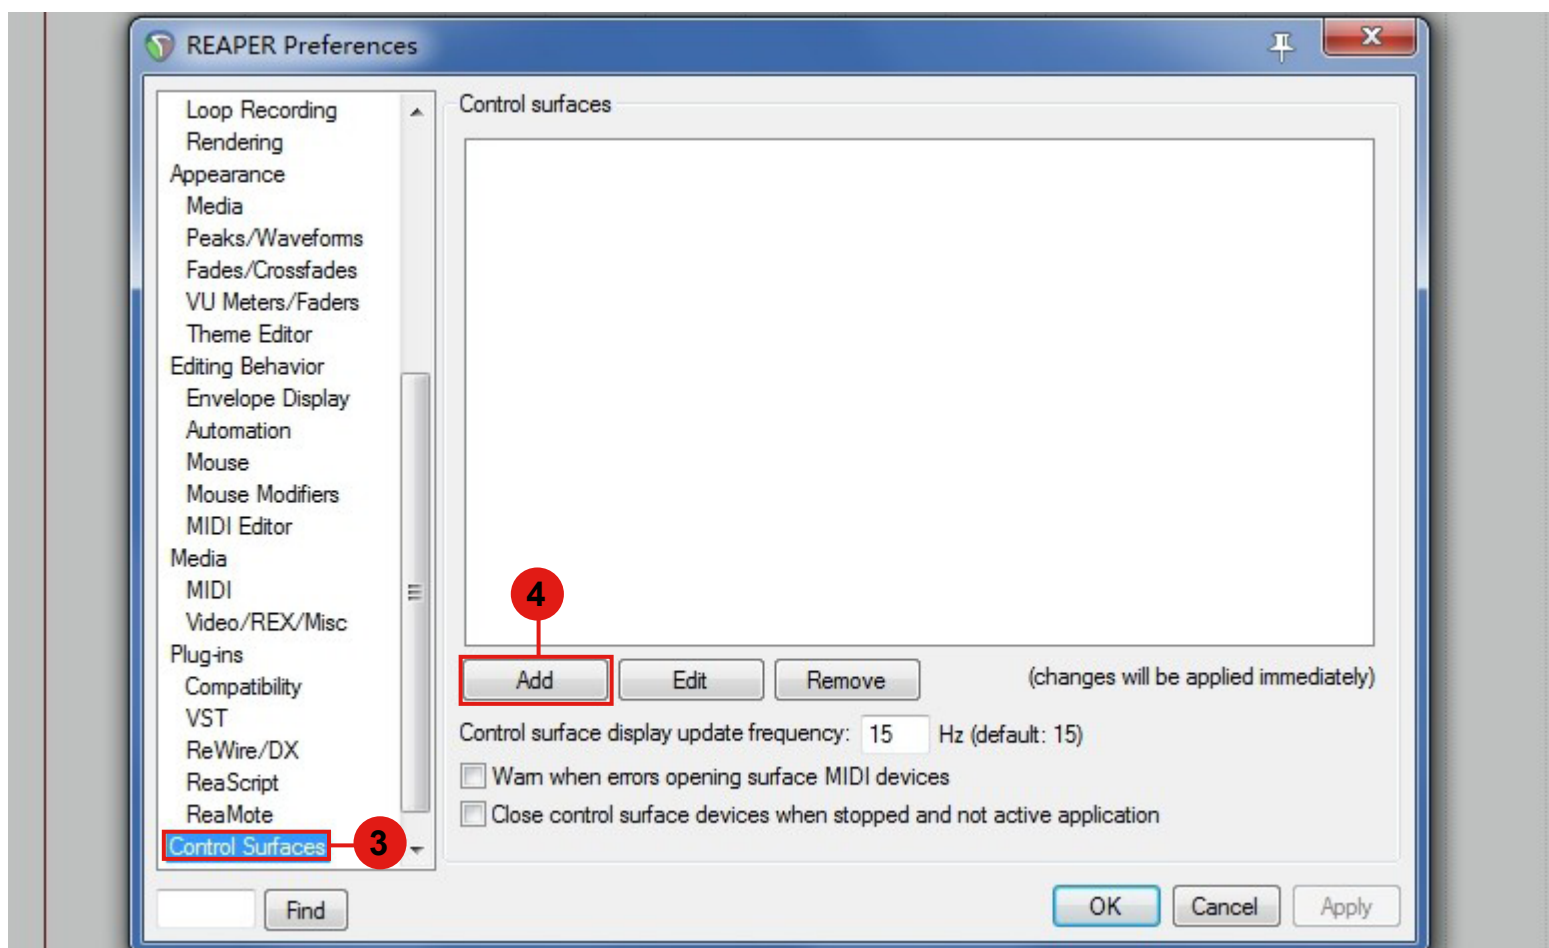
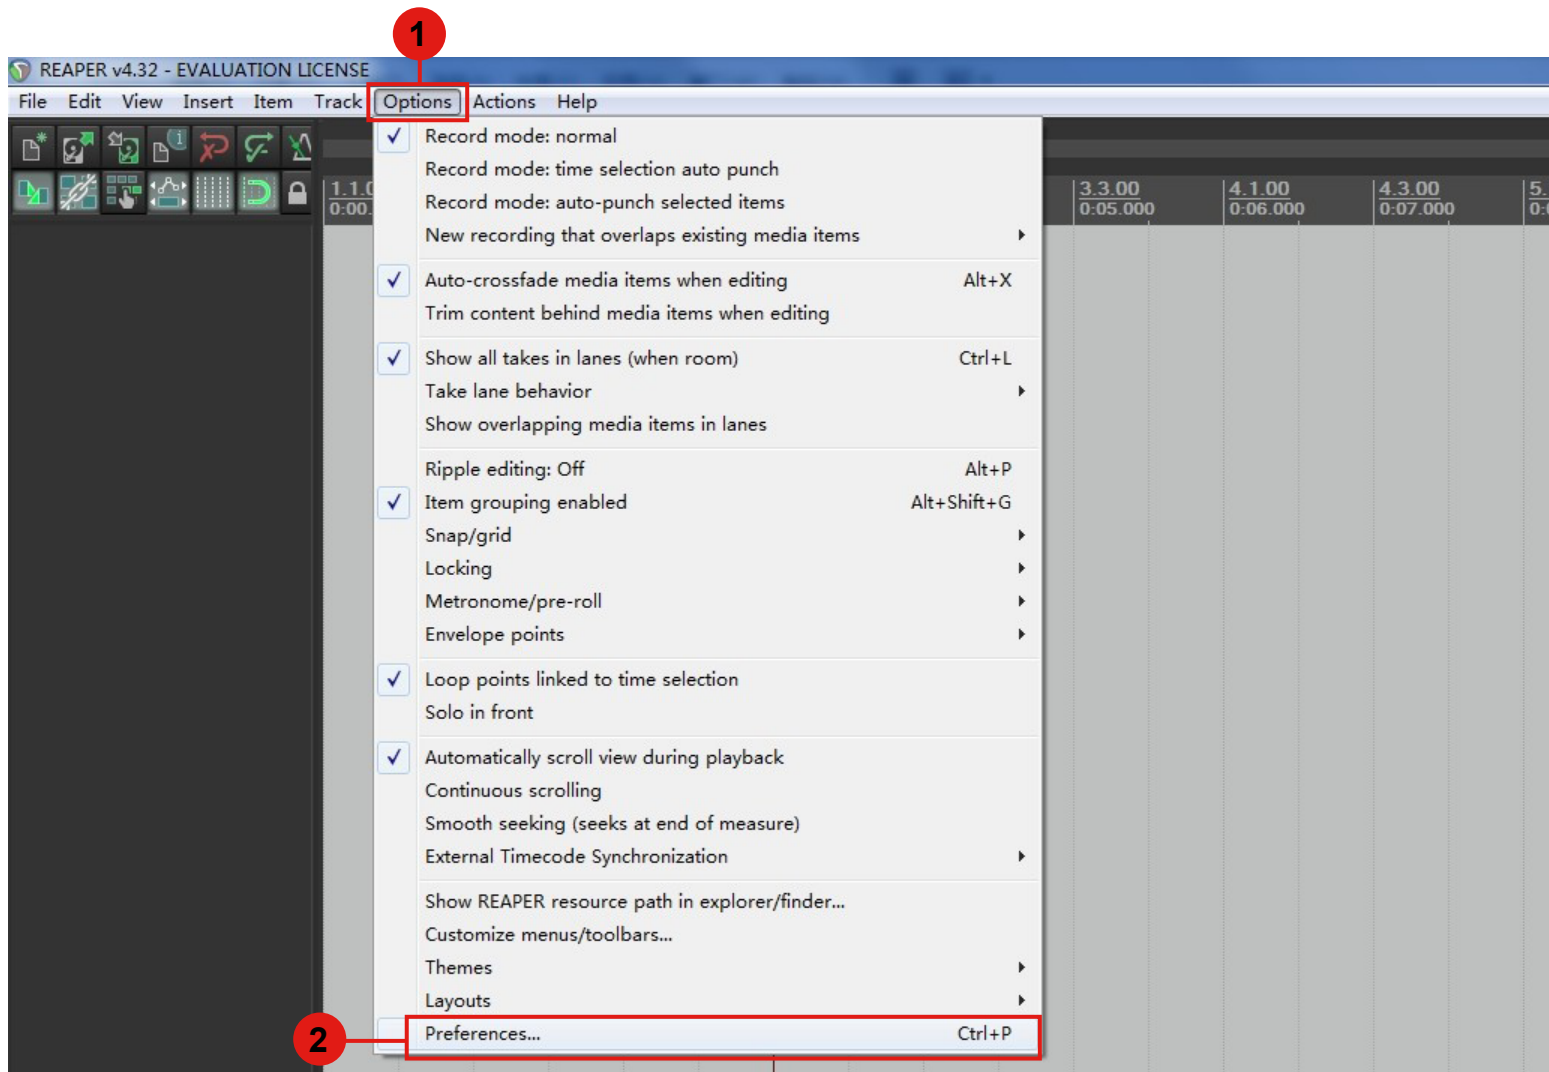




Setup up for your Inspire 5G2 controller section



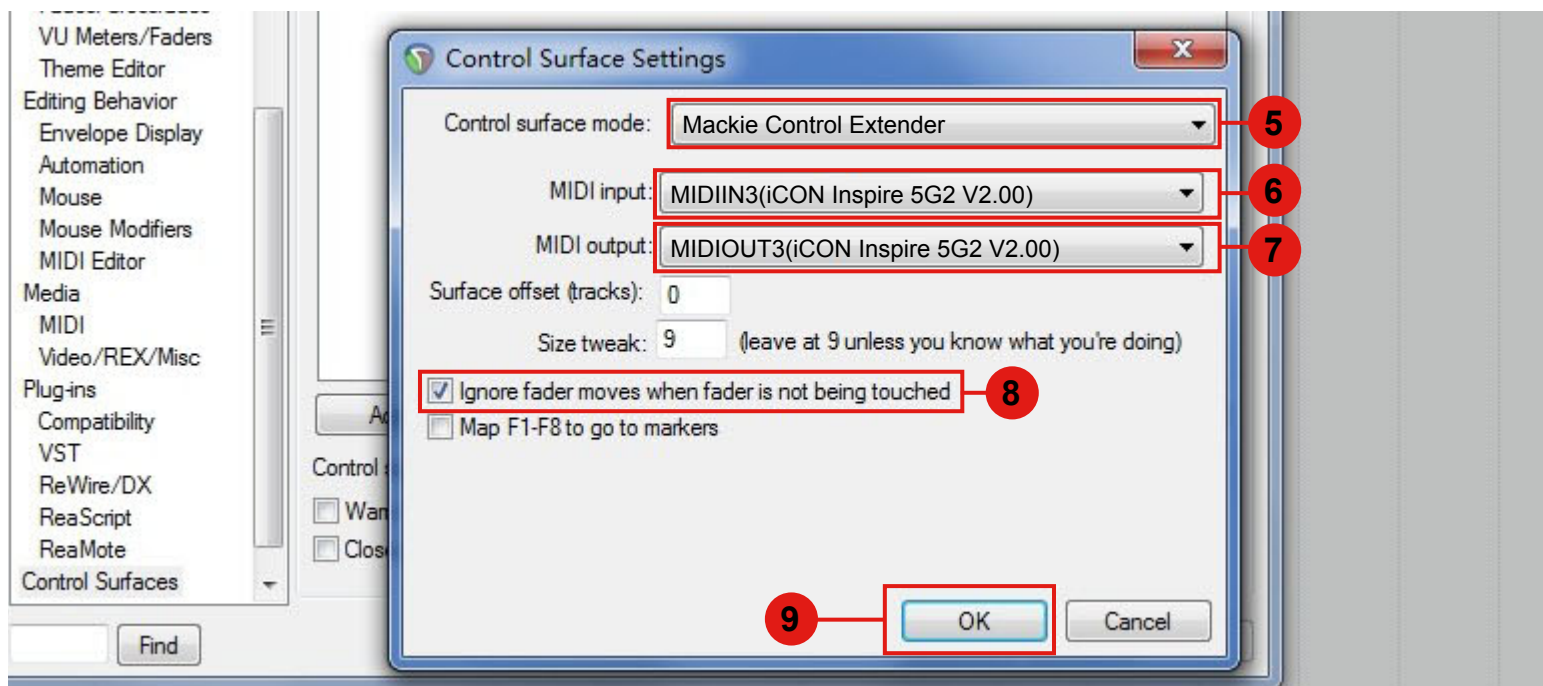




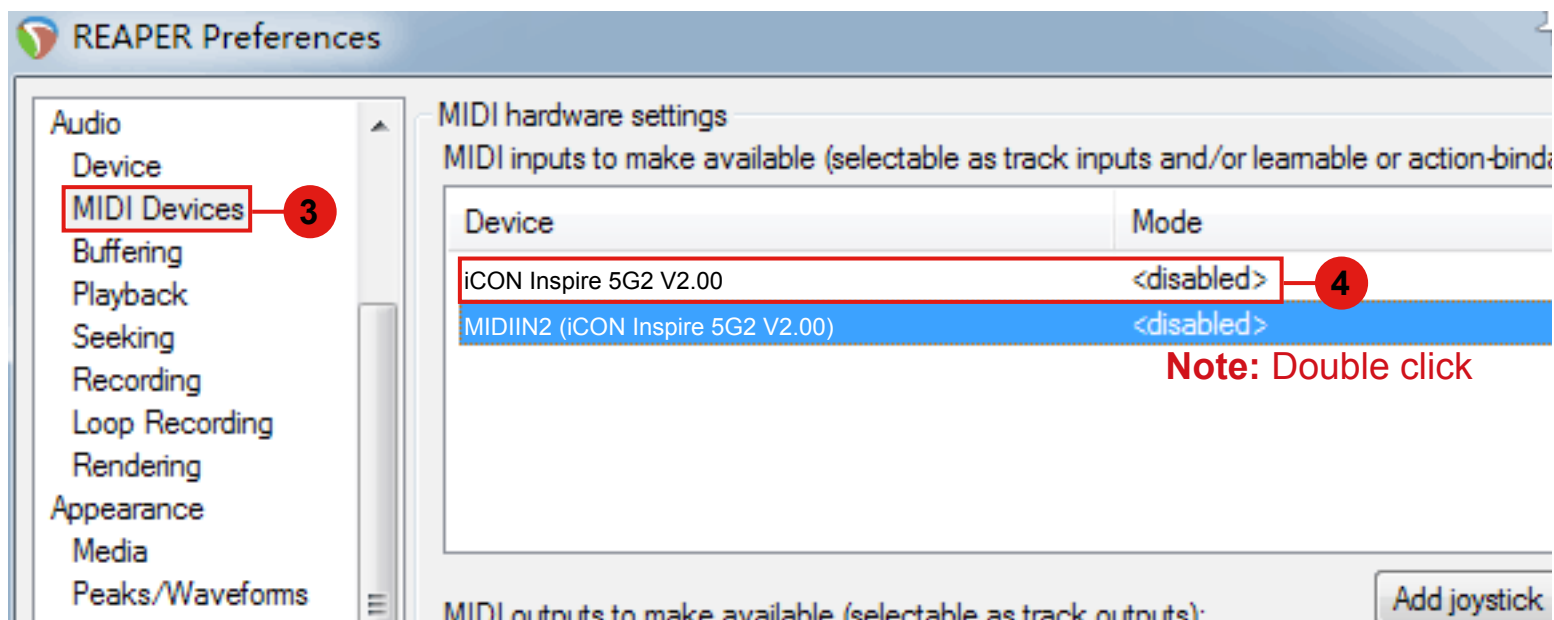


Setup for your Inspire 5G2 Keyswitch instrument input section


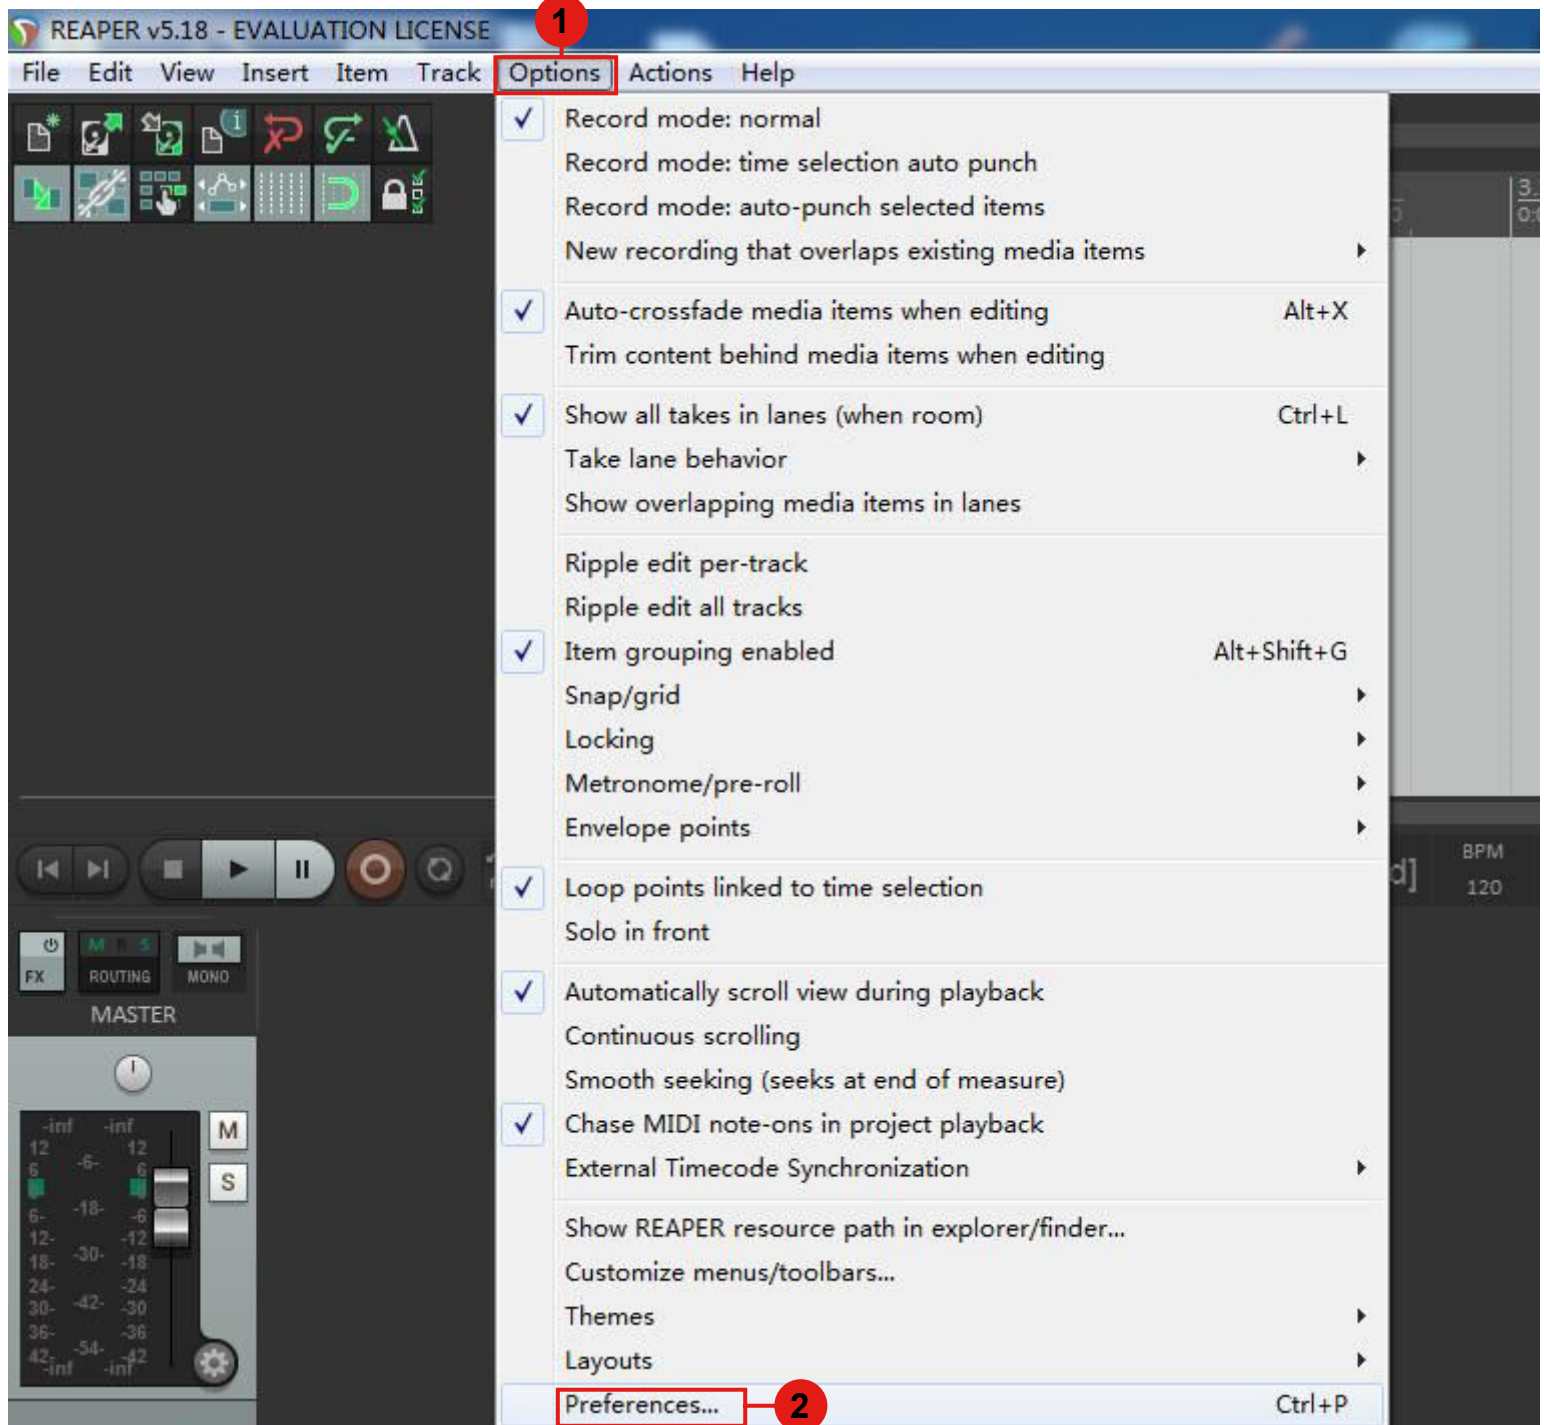


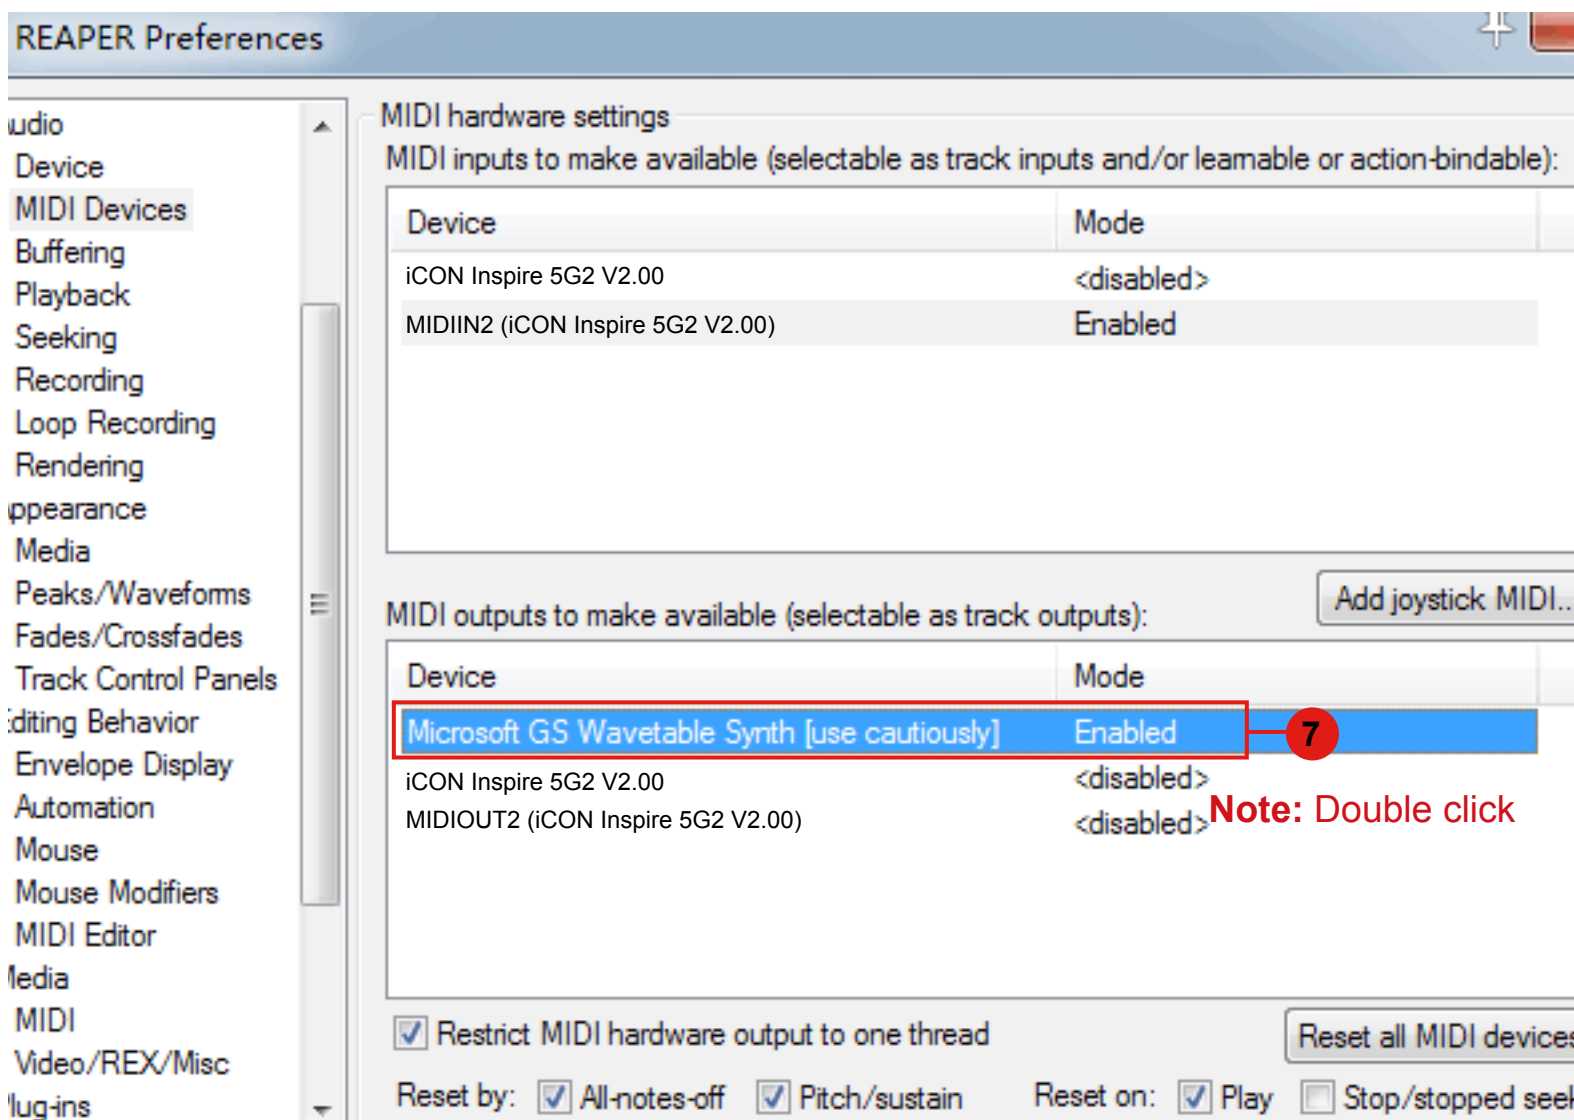
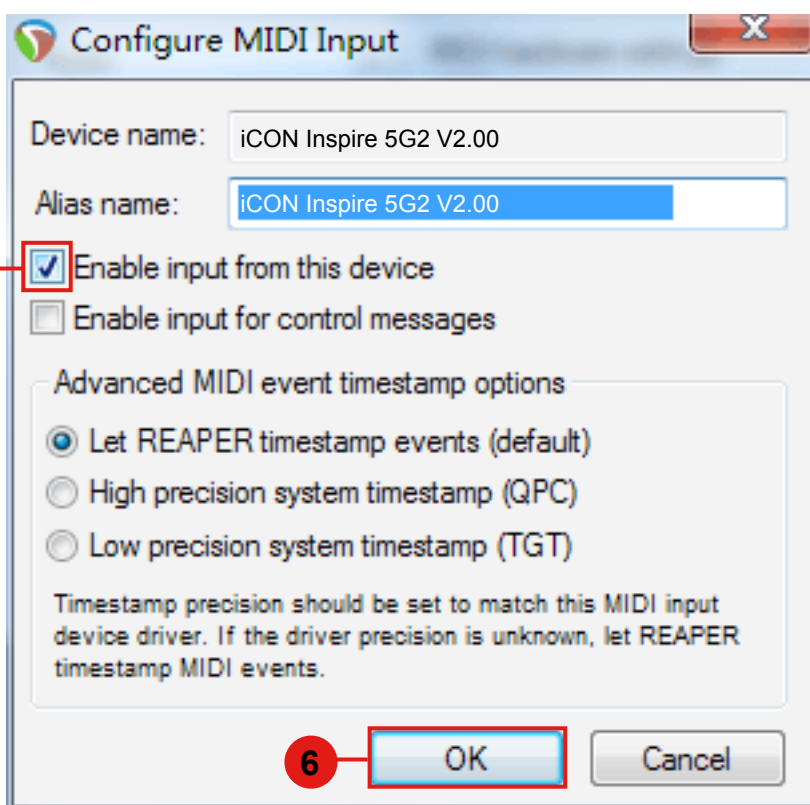


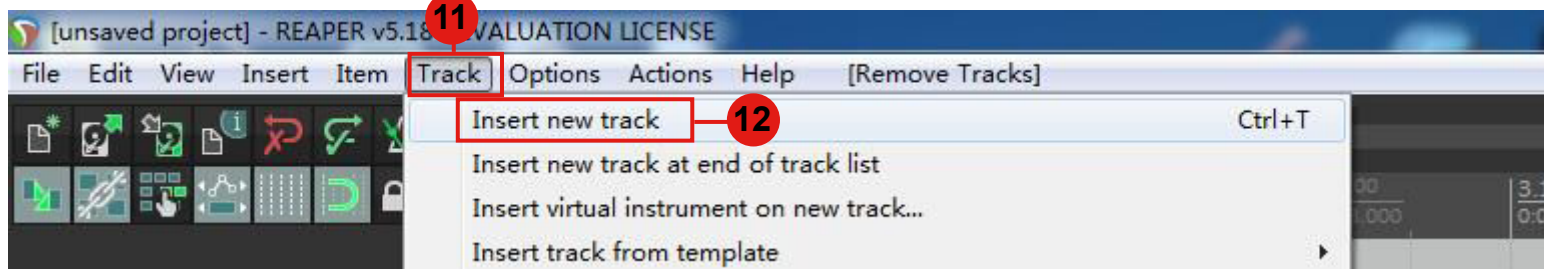
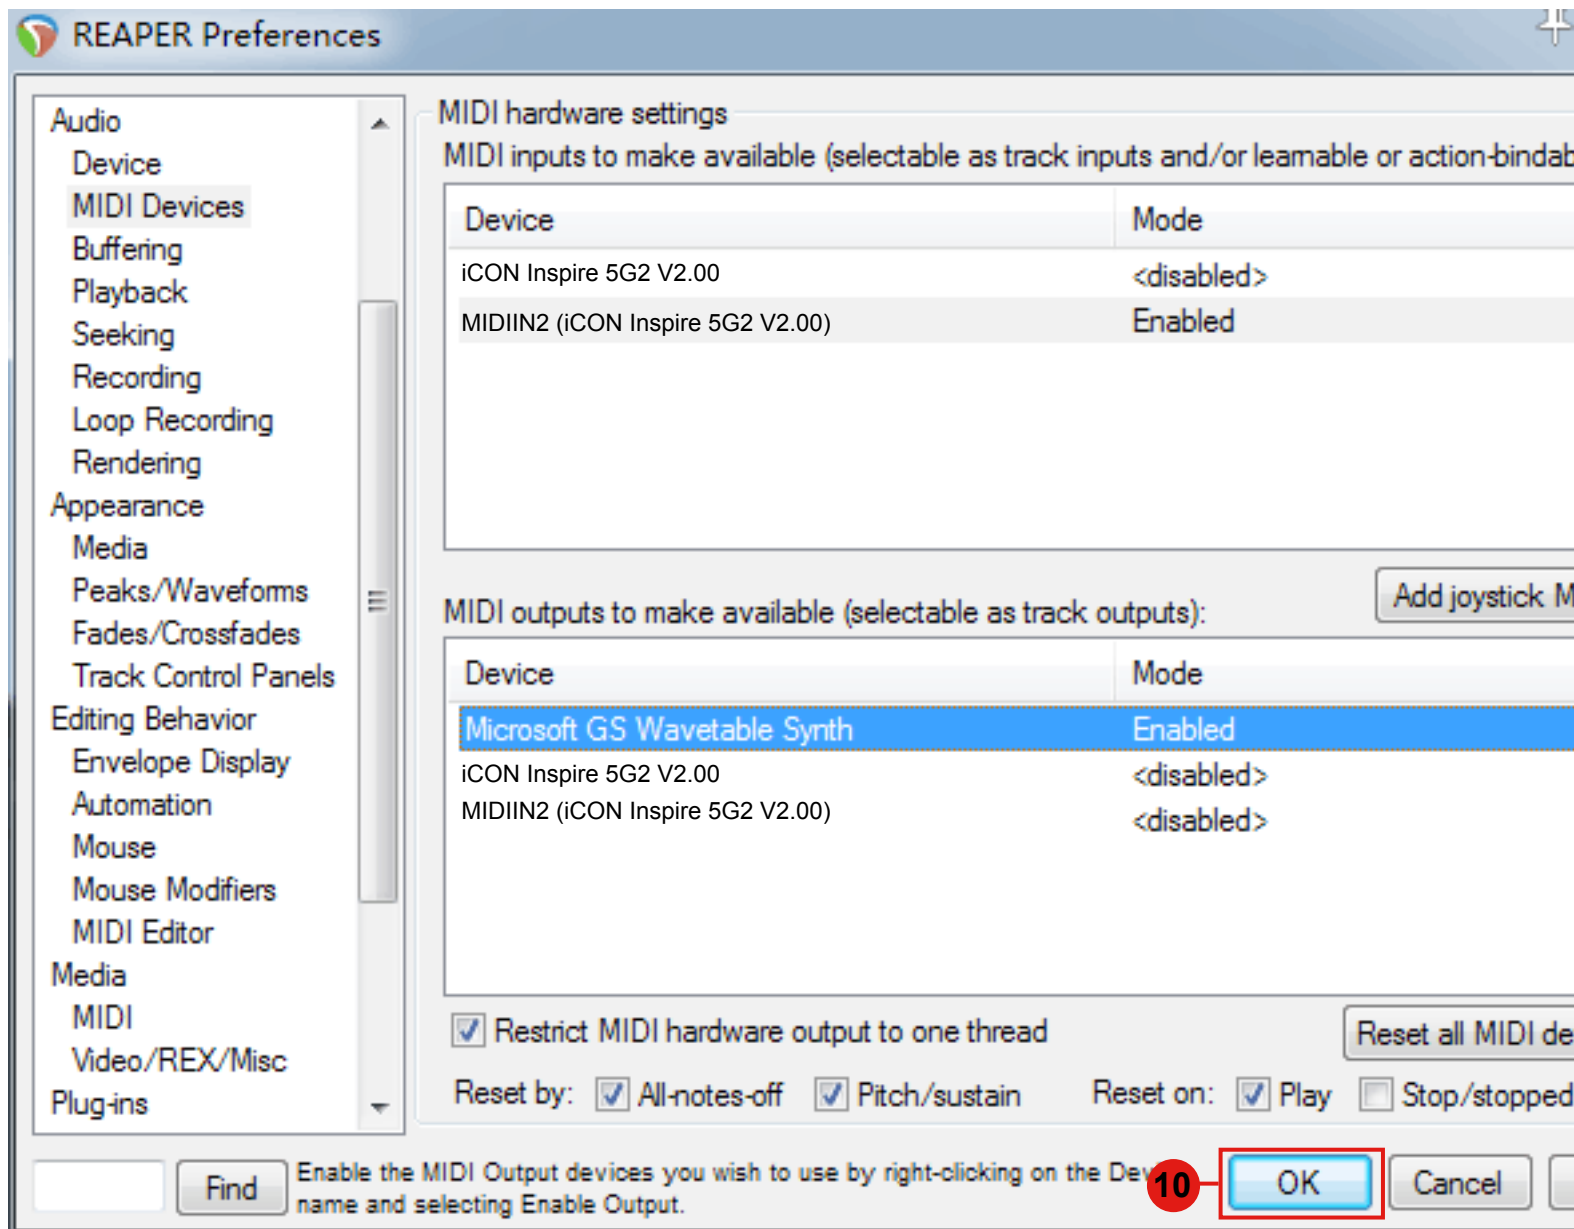
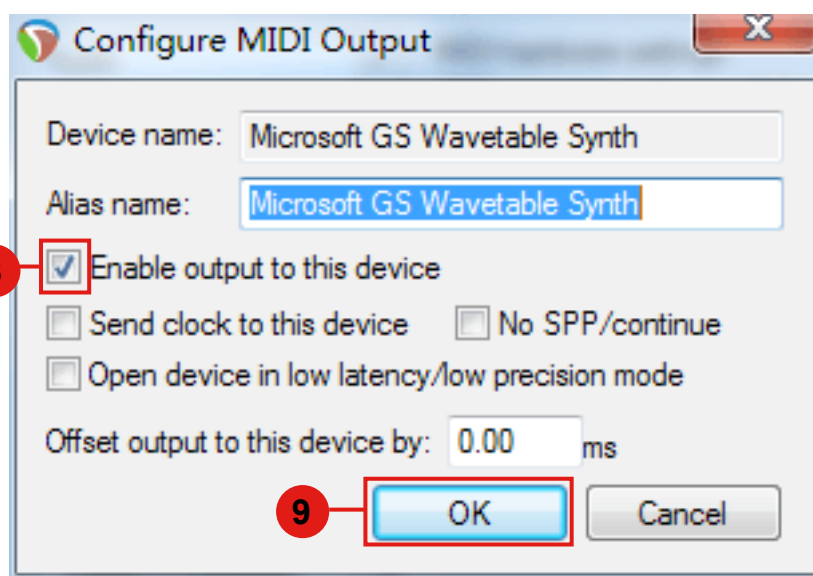


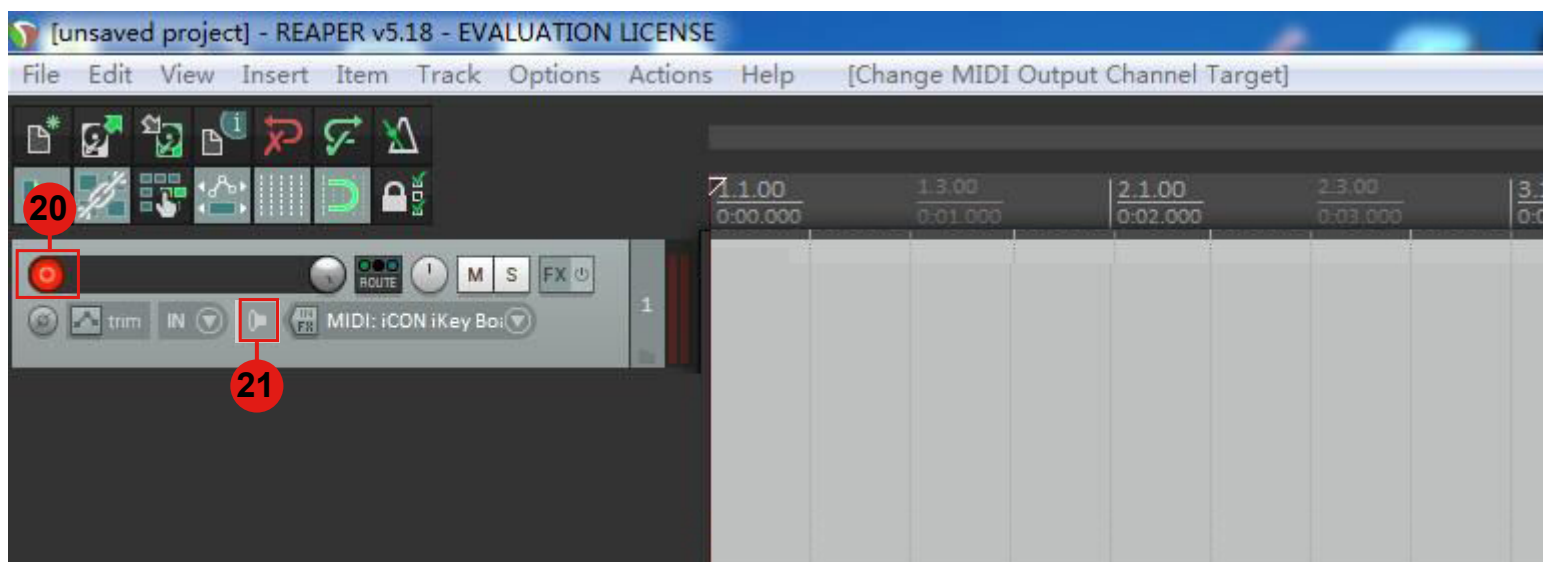
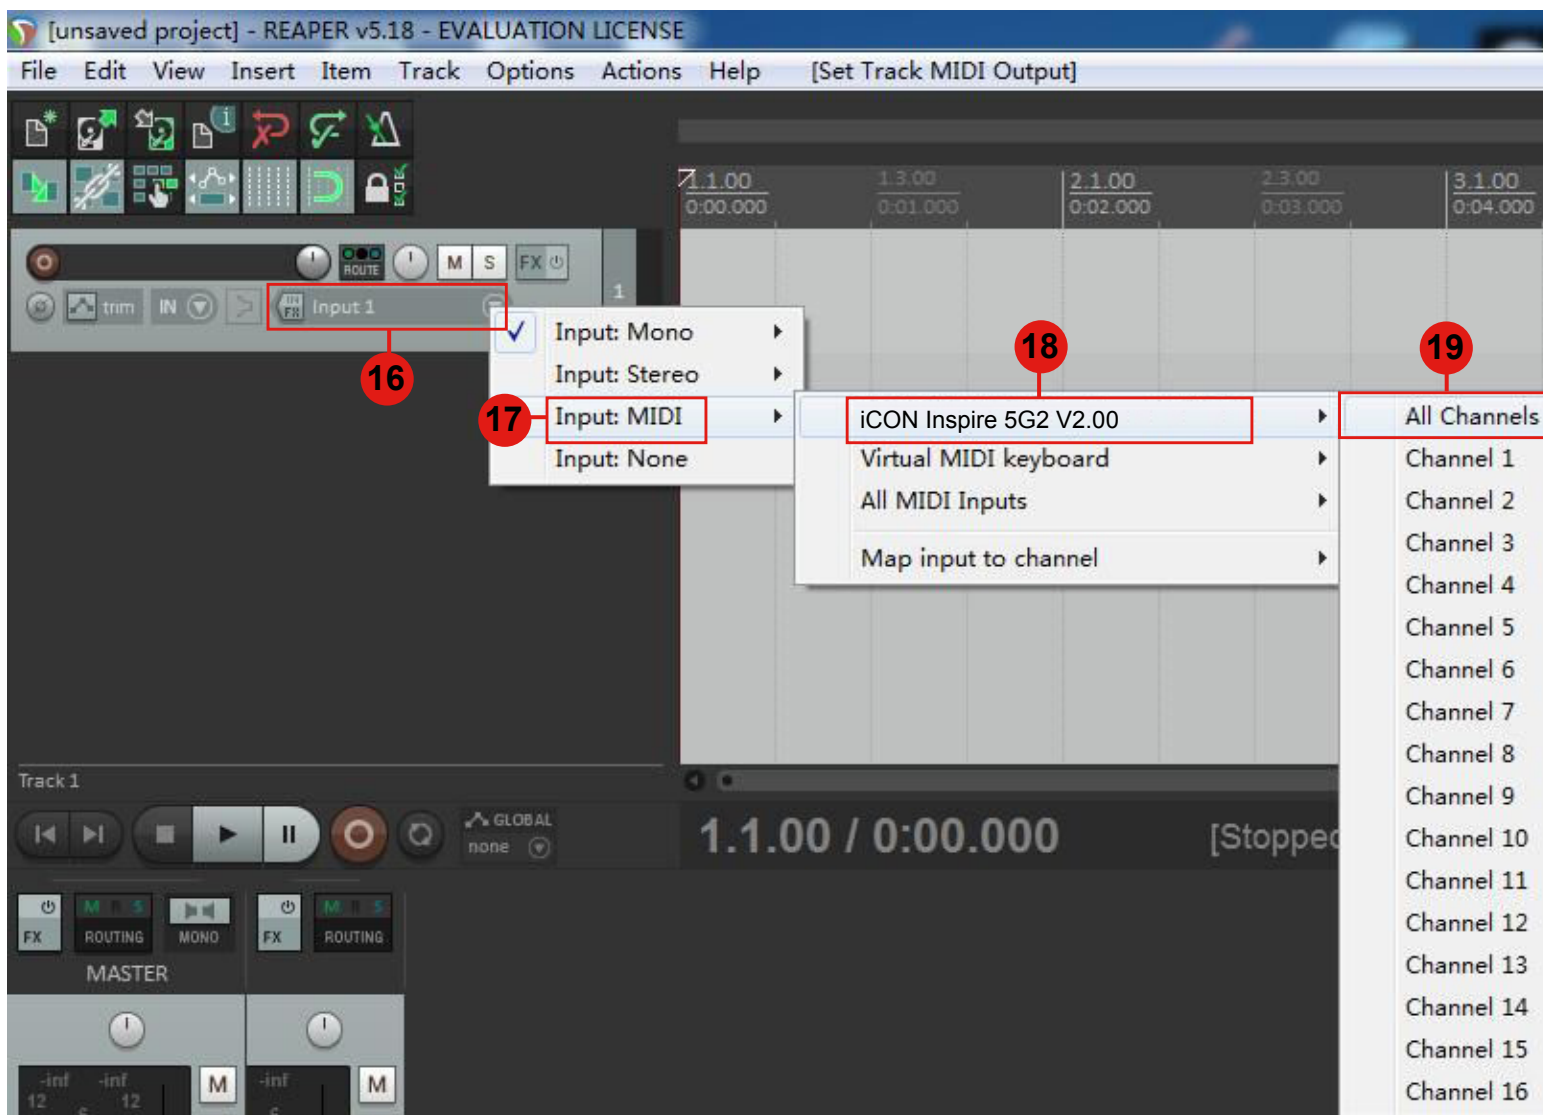
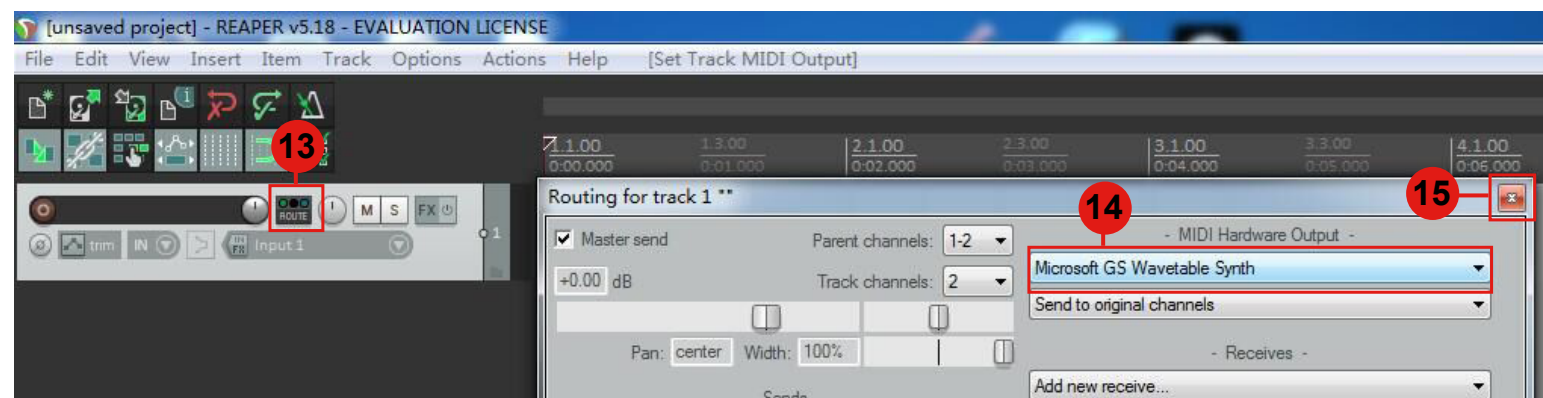


Setup for your Inspire 5G2 DrumPad instrument input section

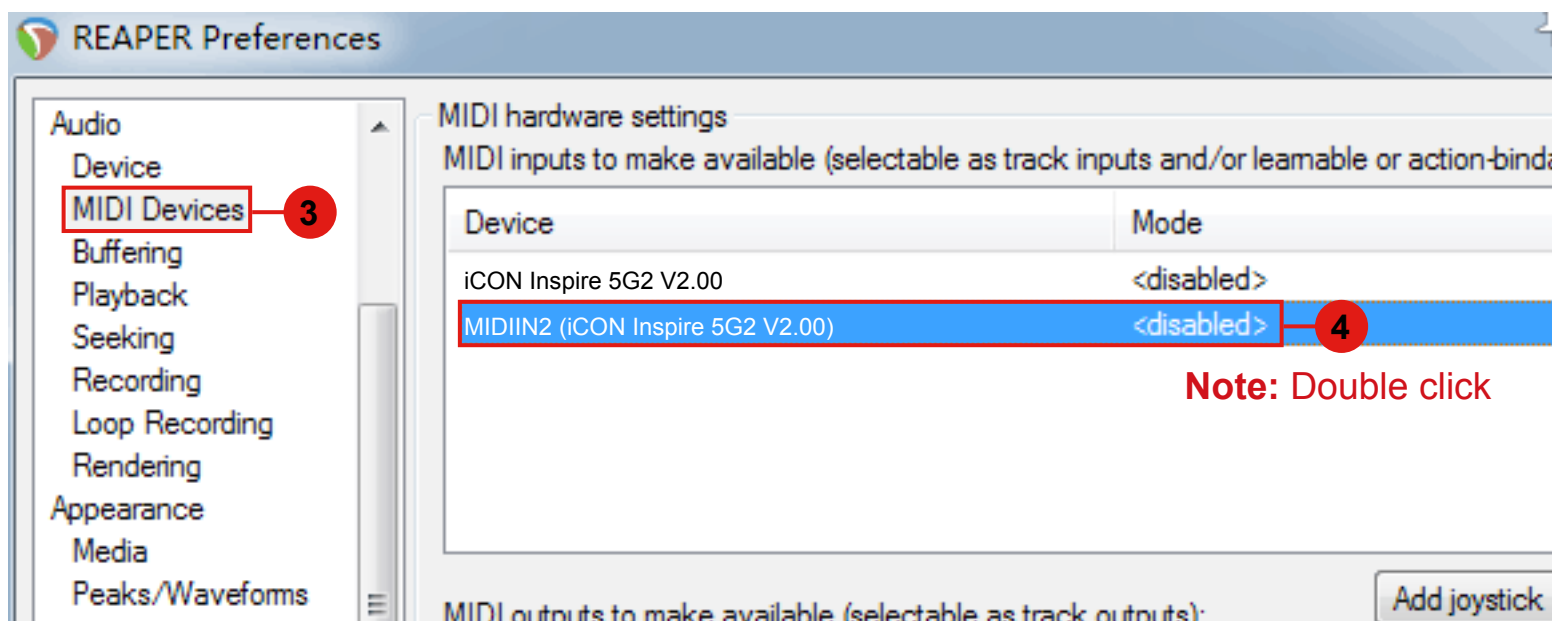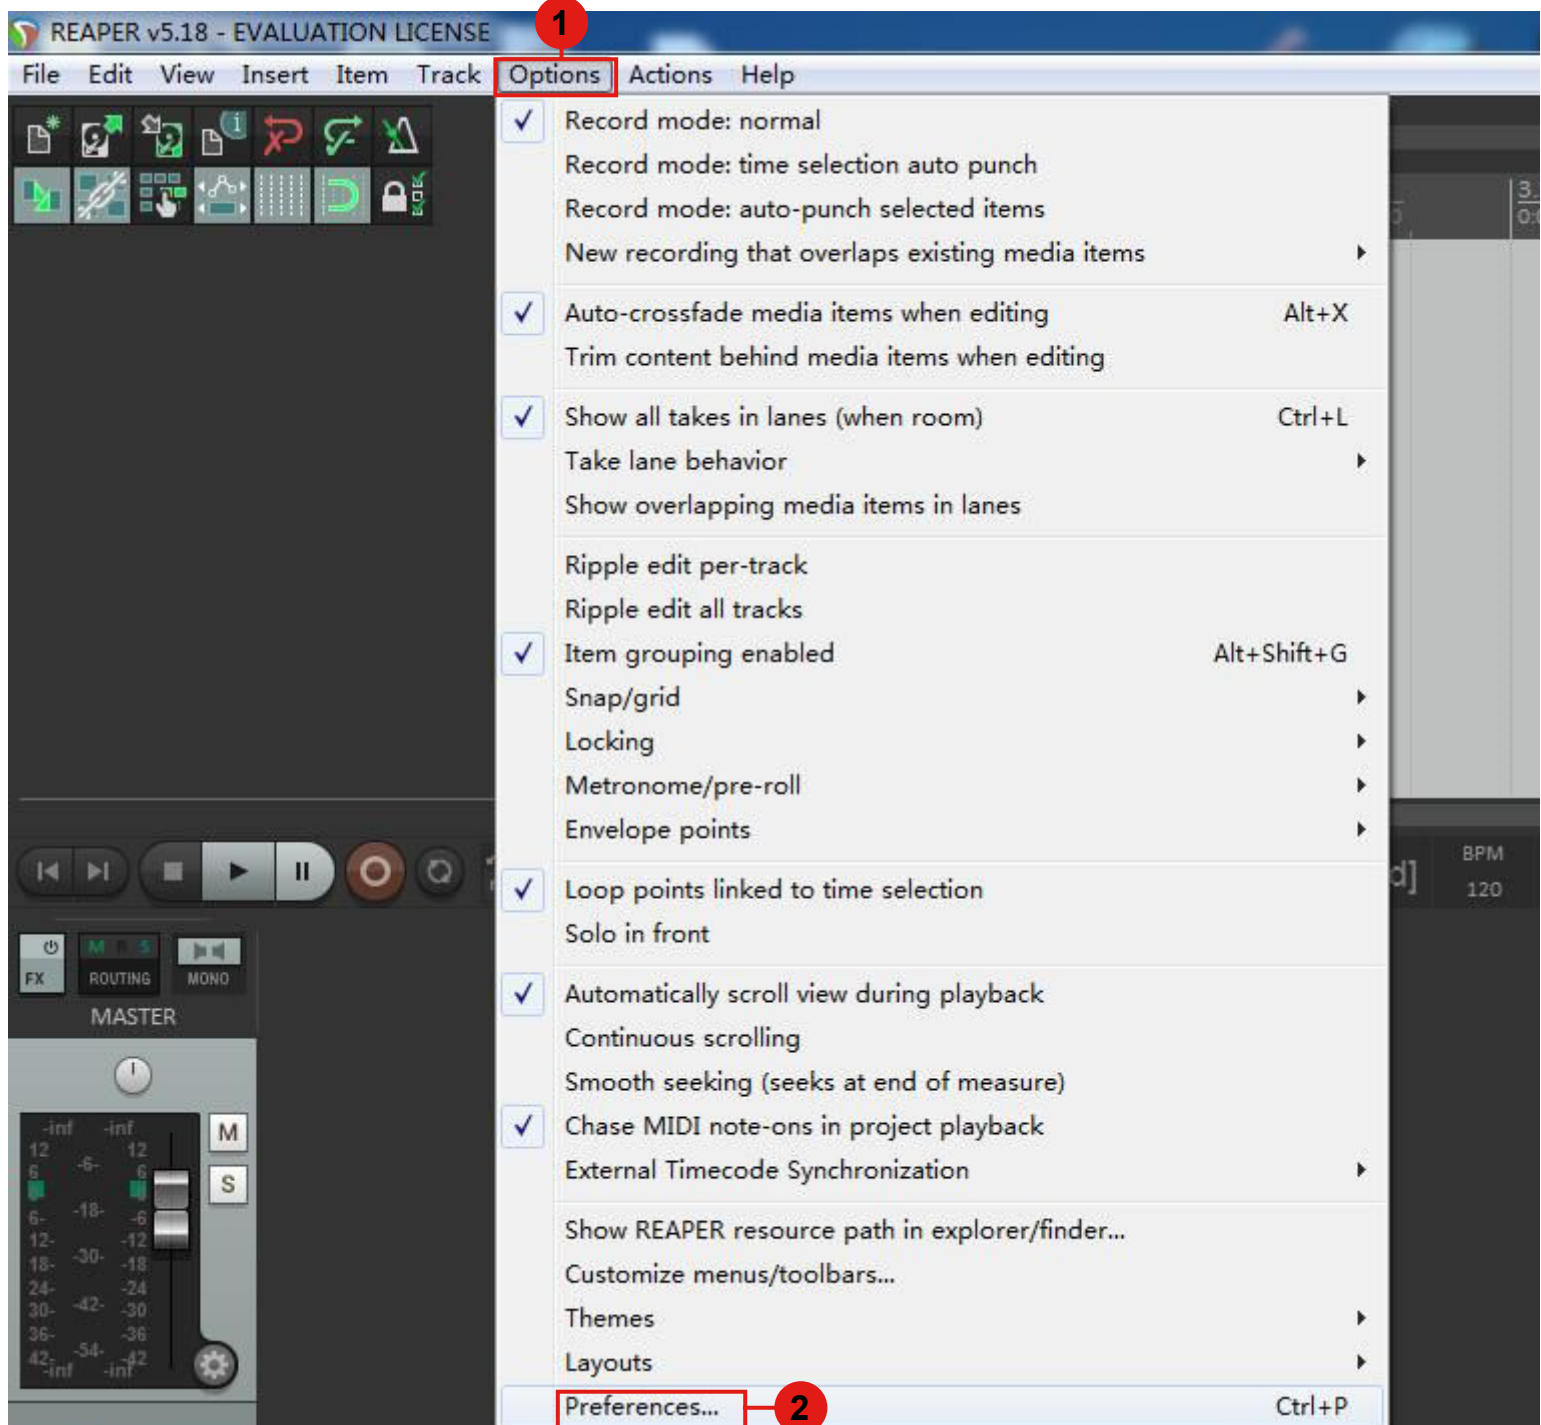

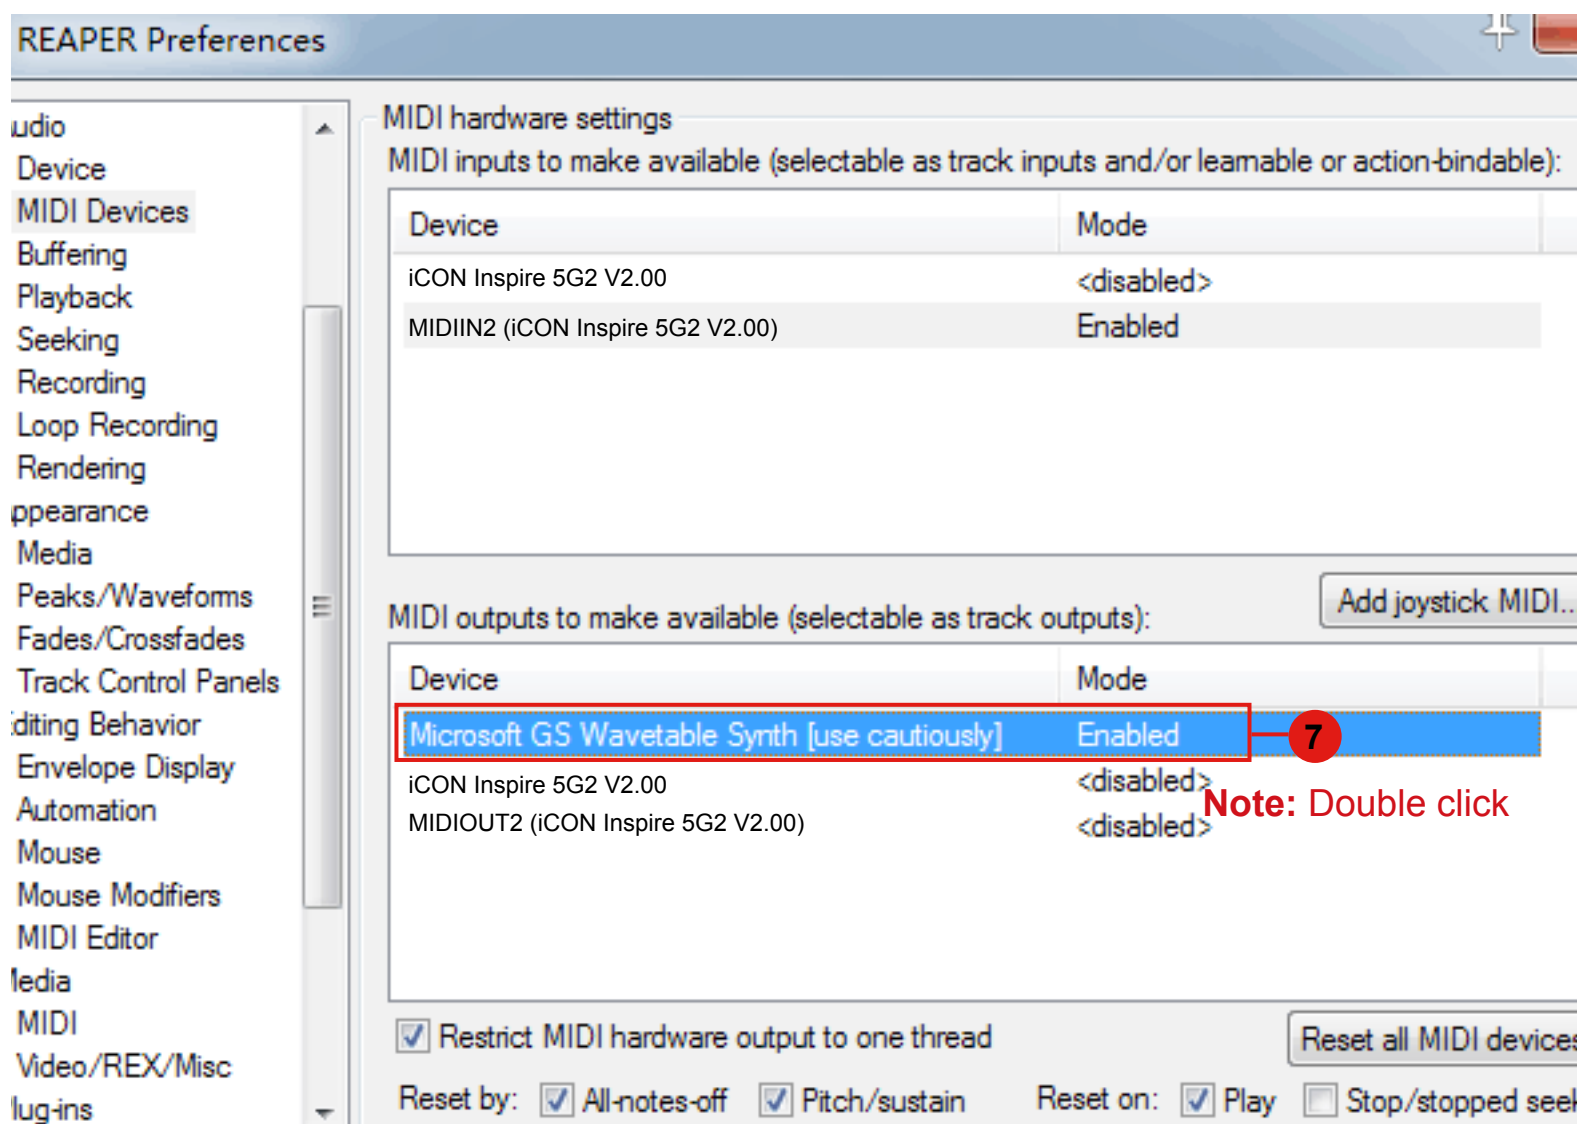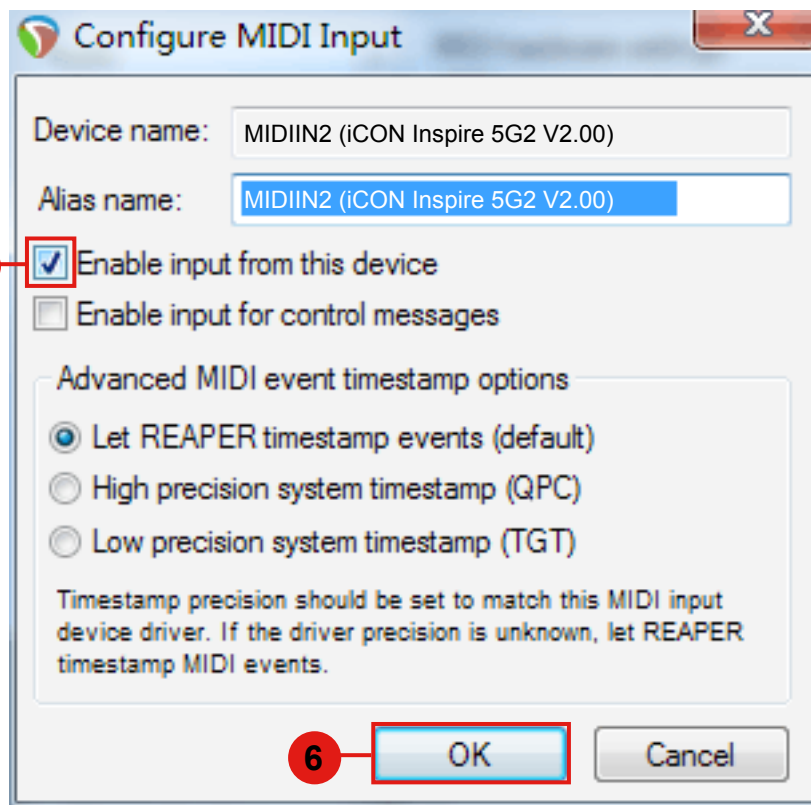

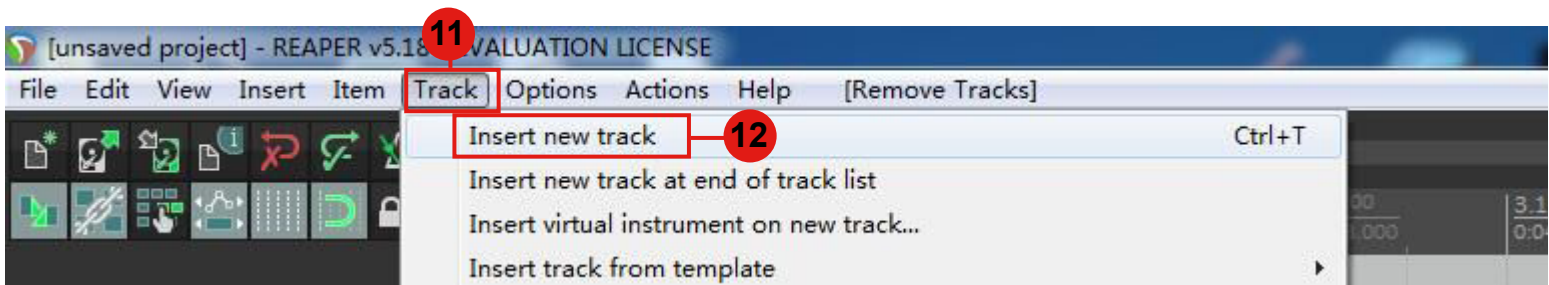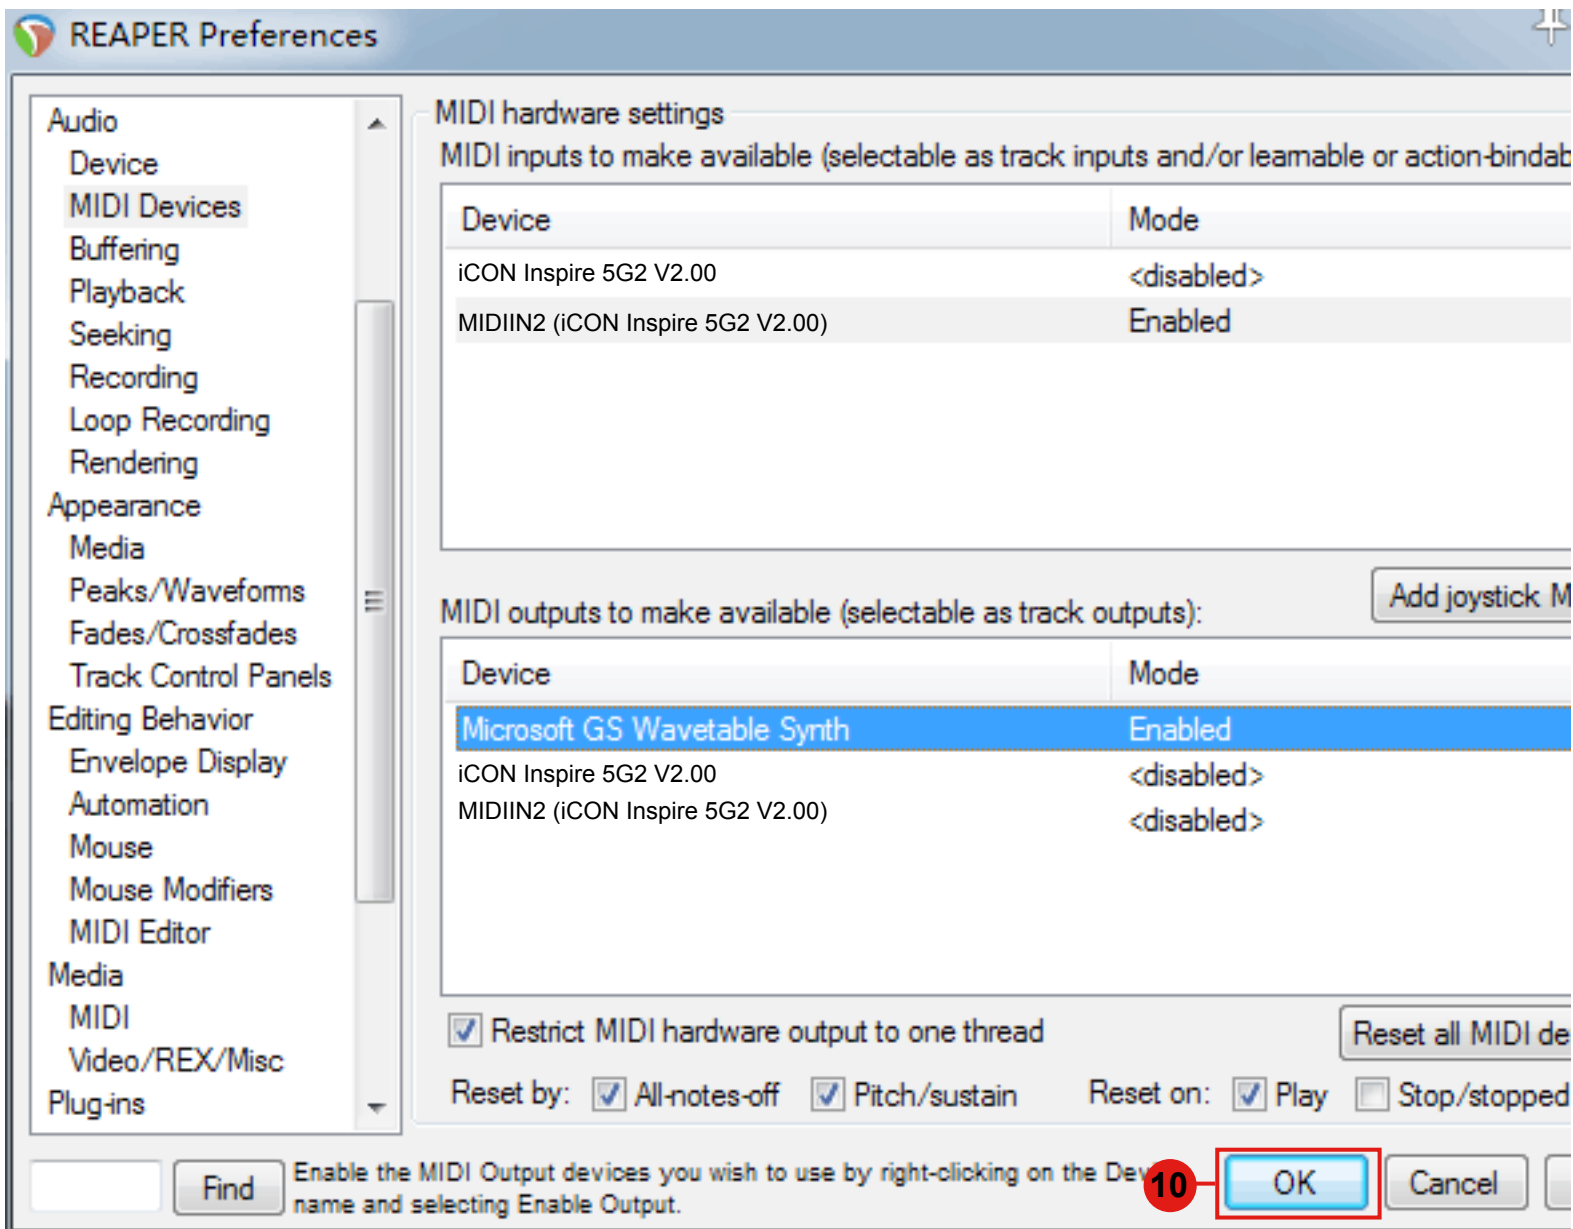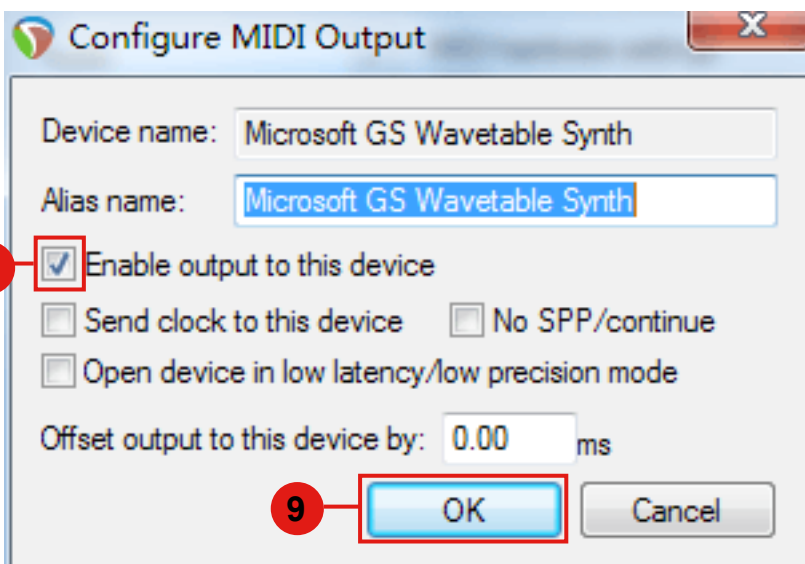

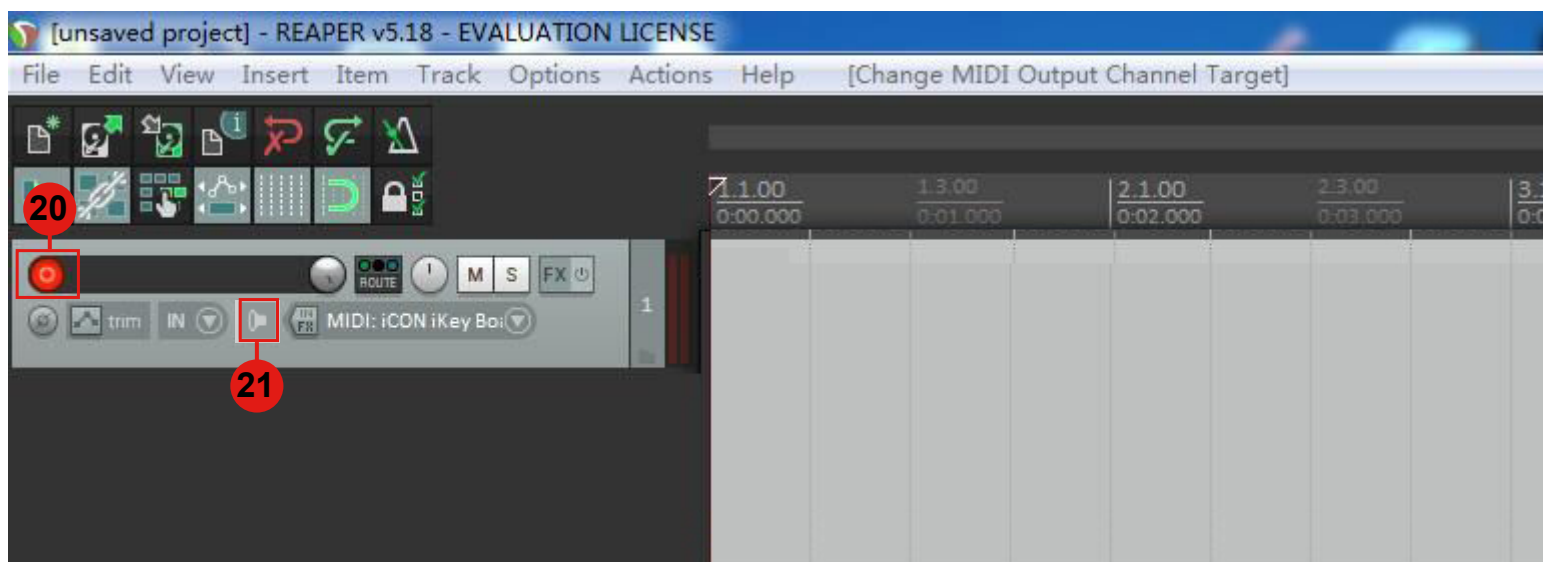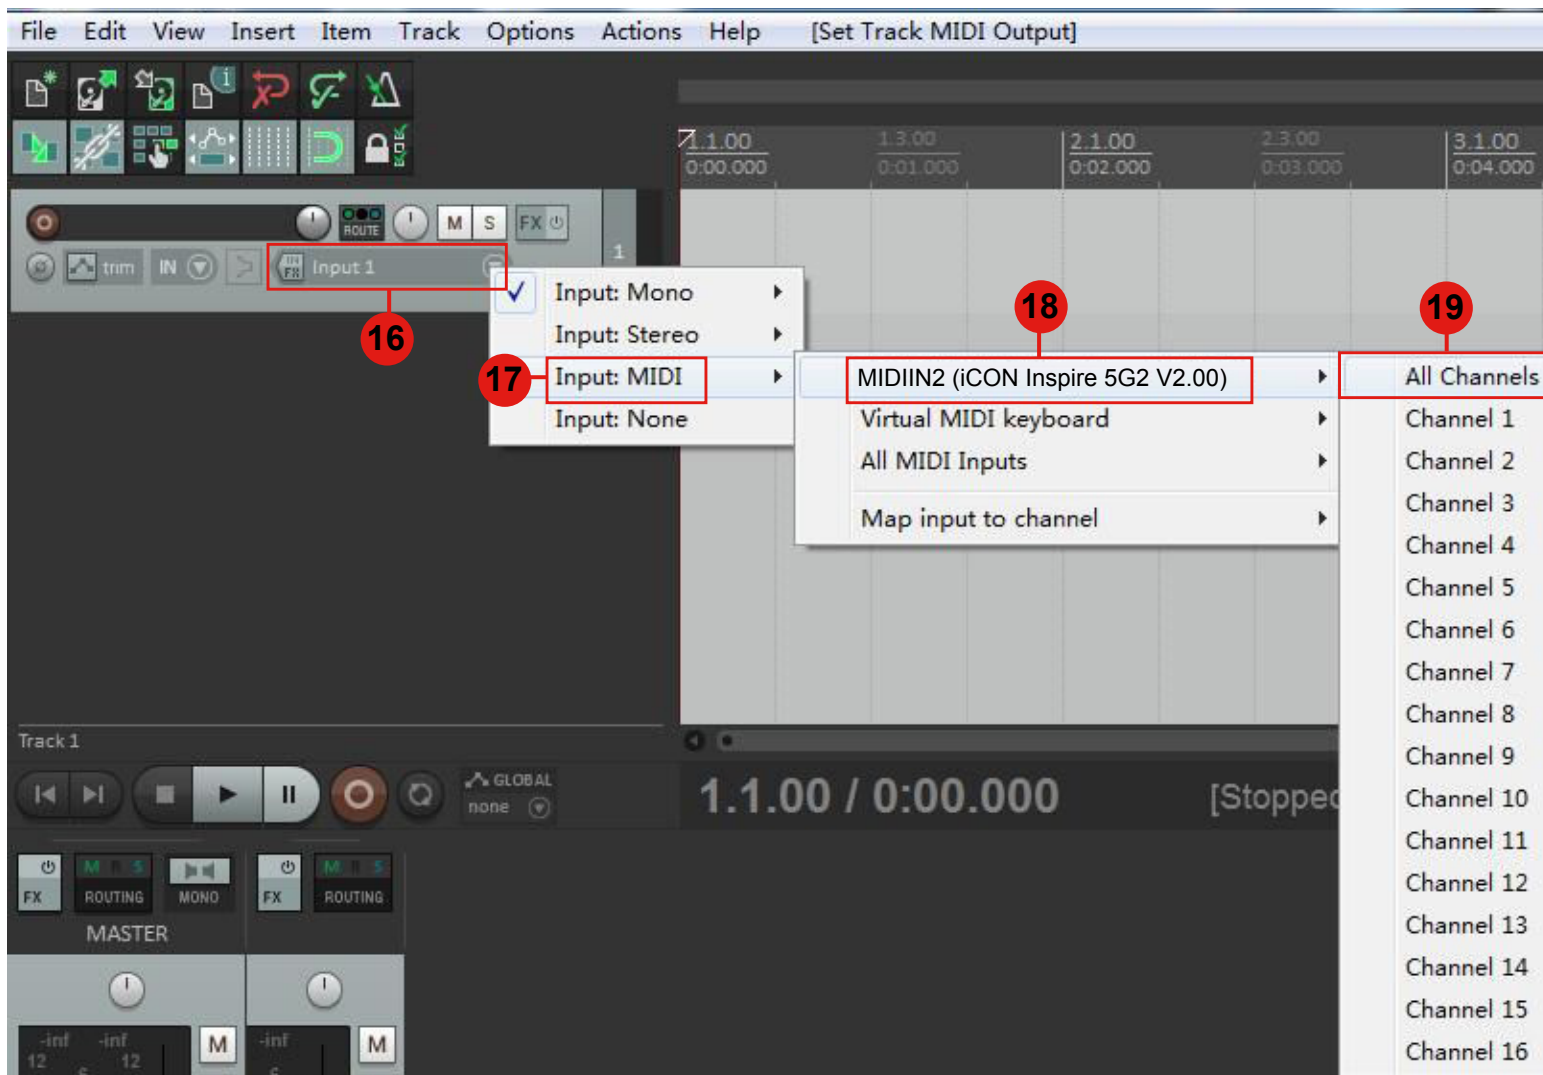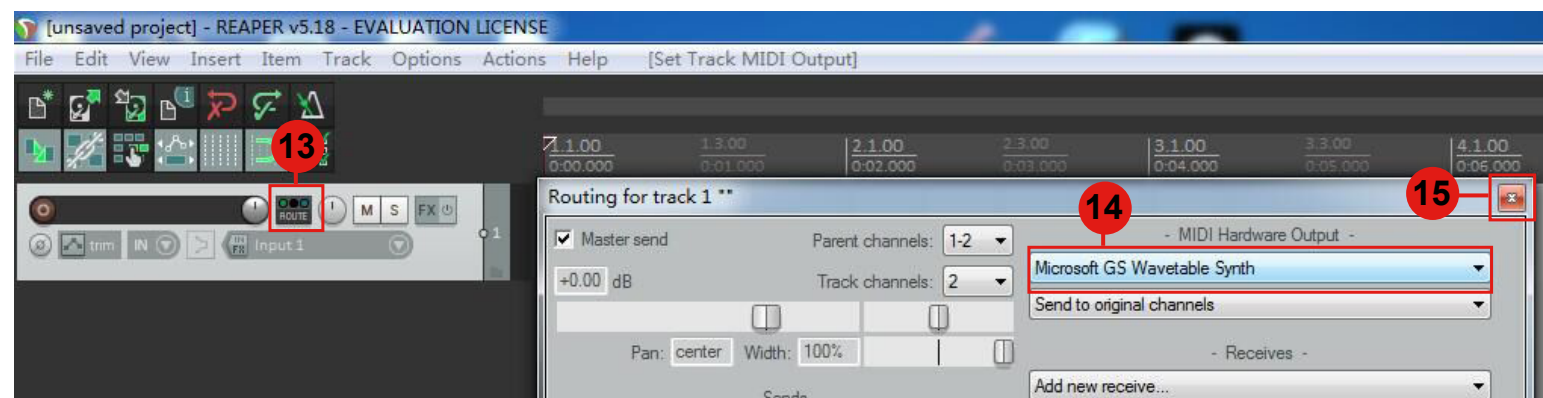

ItemTrackOptionsActionsHelp[Change MIDI Output Channel Target]

22

ROUTE

M

S

FX

MIDI: iCON iKey Boi

1.1.000:00.0001.3.000:01.0002.1.000:02.0002.3.000:03.0003.1.000:04.0003.3.000:05.0004.1.000:06.000

Routing for track 1 "

☒ Master send

Parent channels: 1-2

- MIDI Hardware Output -

12.00 dB

Track channels: 2

Microsoft GS Wavetable Synth

Pan: center

Width: 100%

Send to channel 10

- Sends -

Add new send...

- Audio Hardware Outputs -

Add new hardware output...

- Lives -

Add new receive...

1.1.00 / 0:00.000

[Stopped]

BPM 1204/4Rate: 1.0