


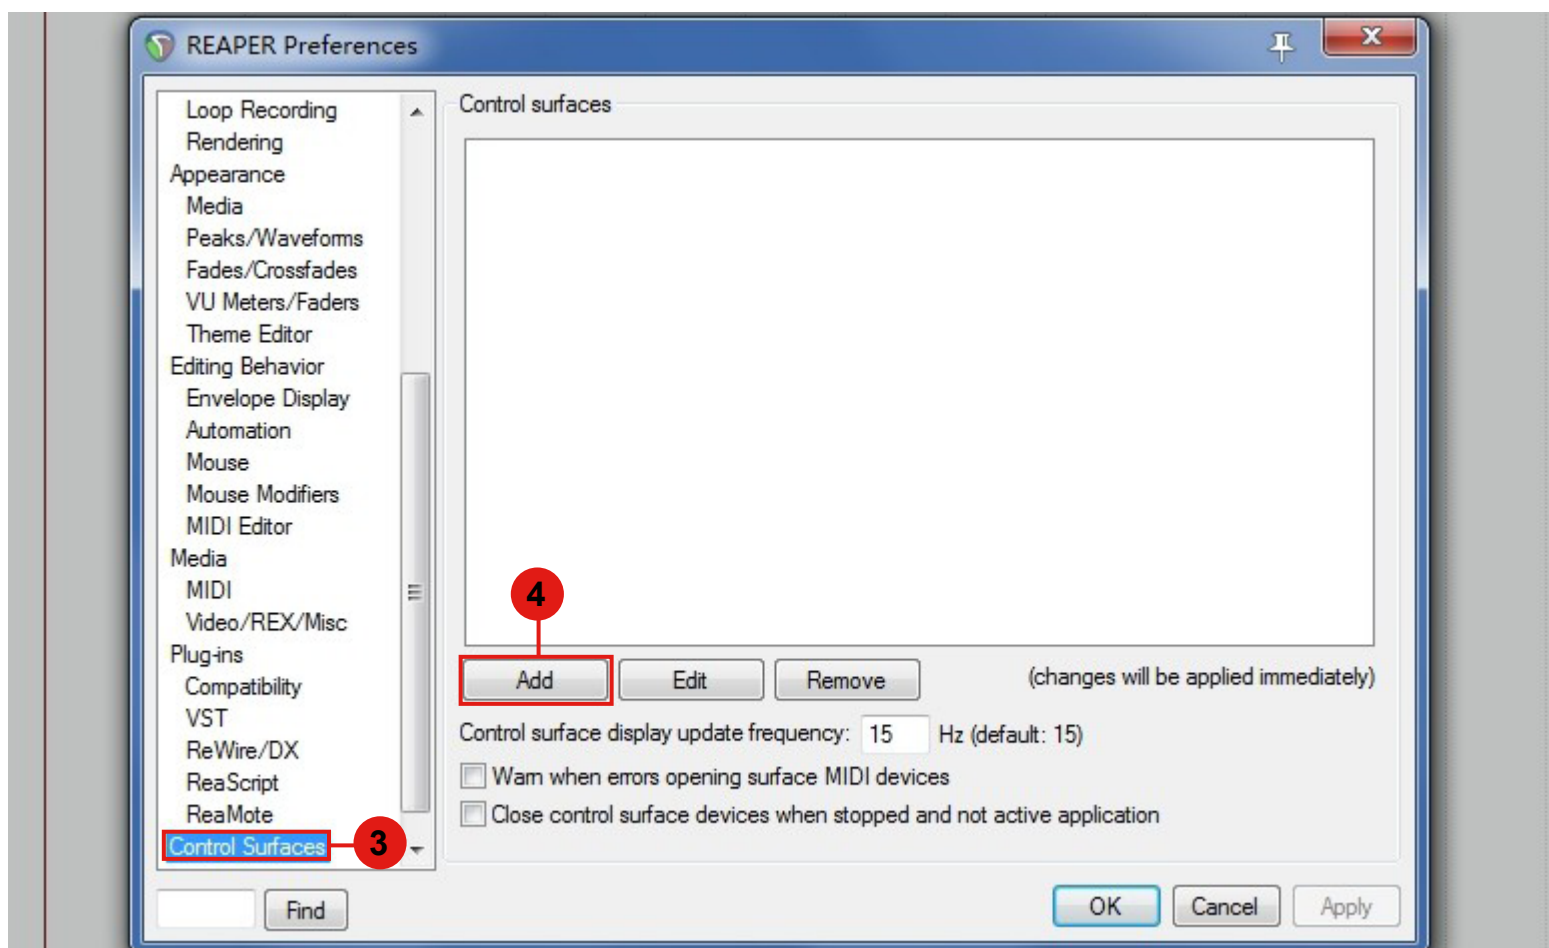
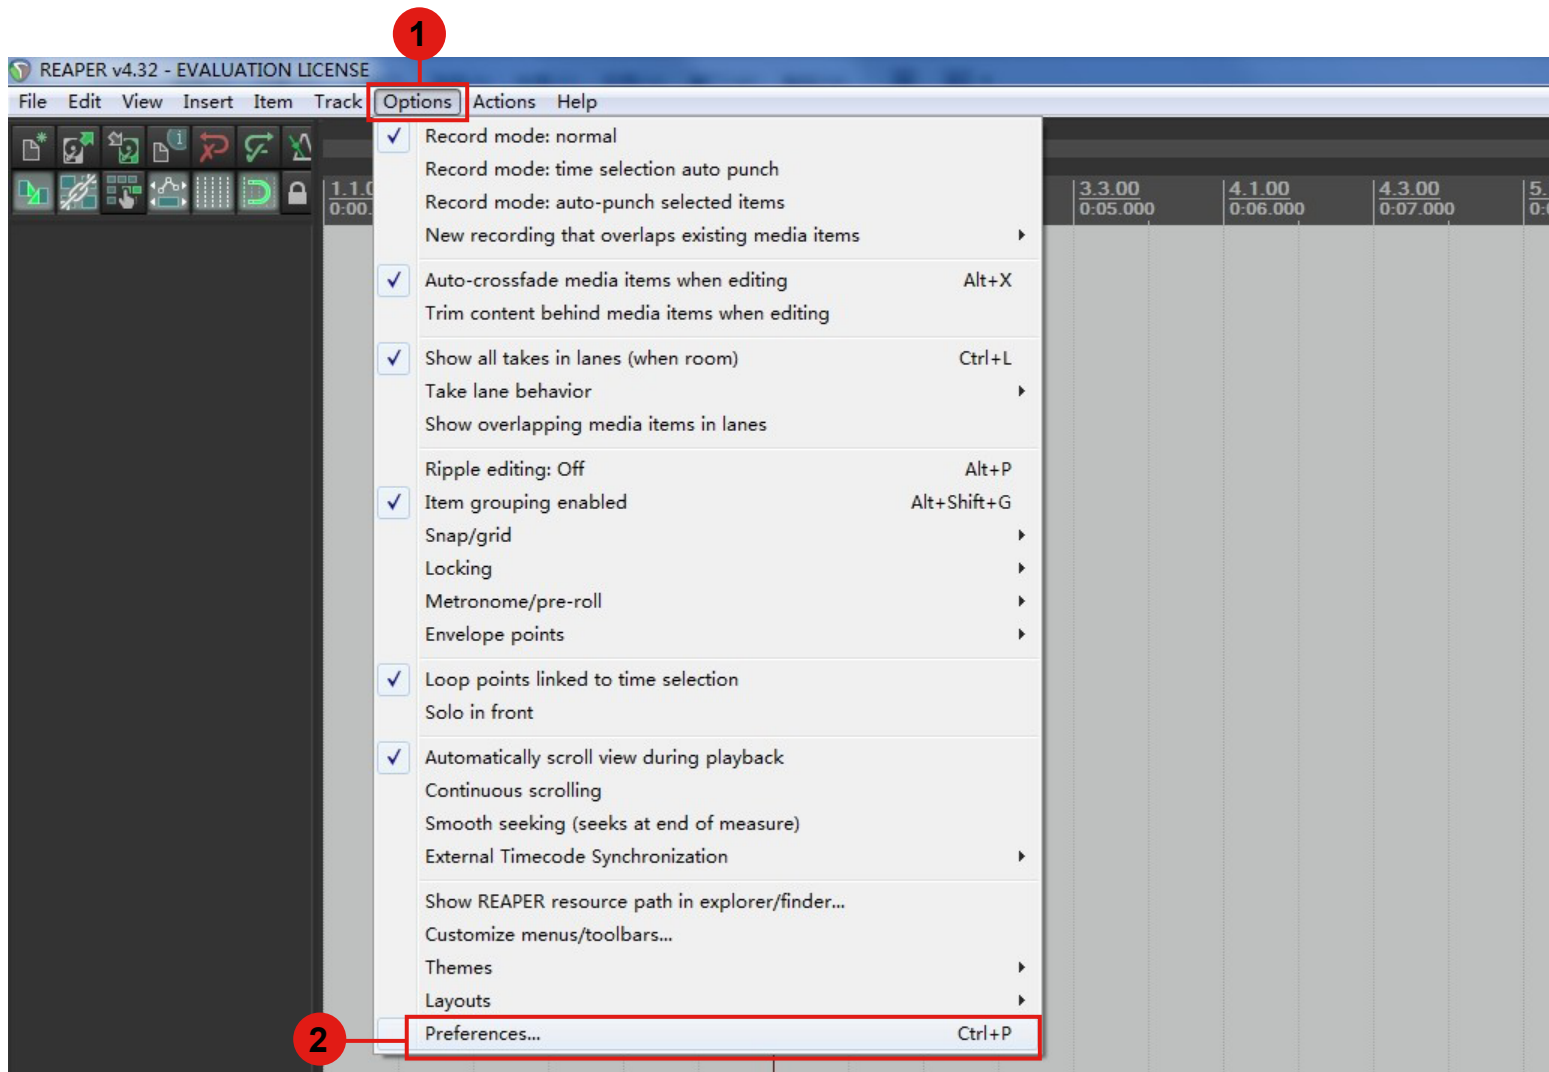




Setup up for your Inspire 6G2 controller section



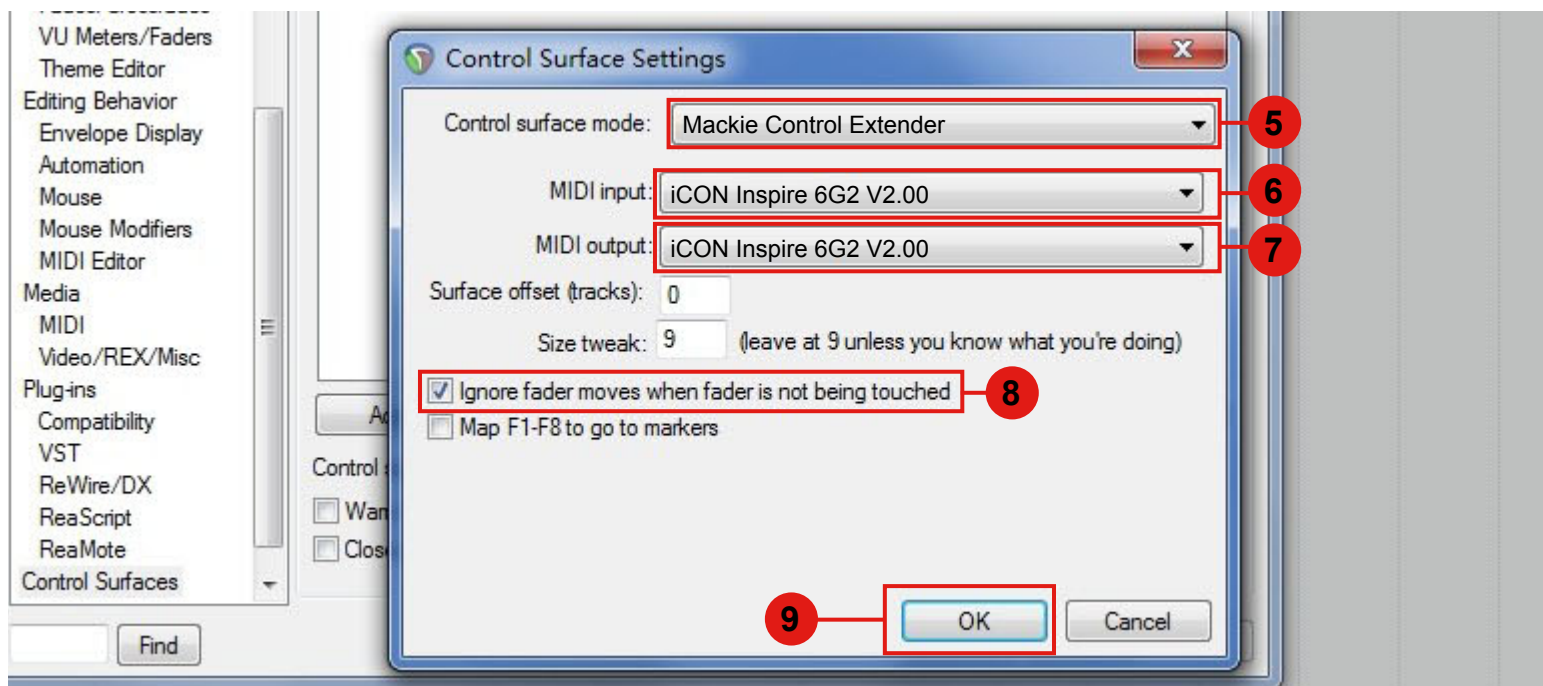




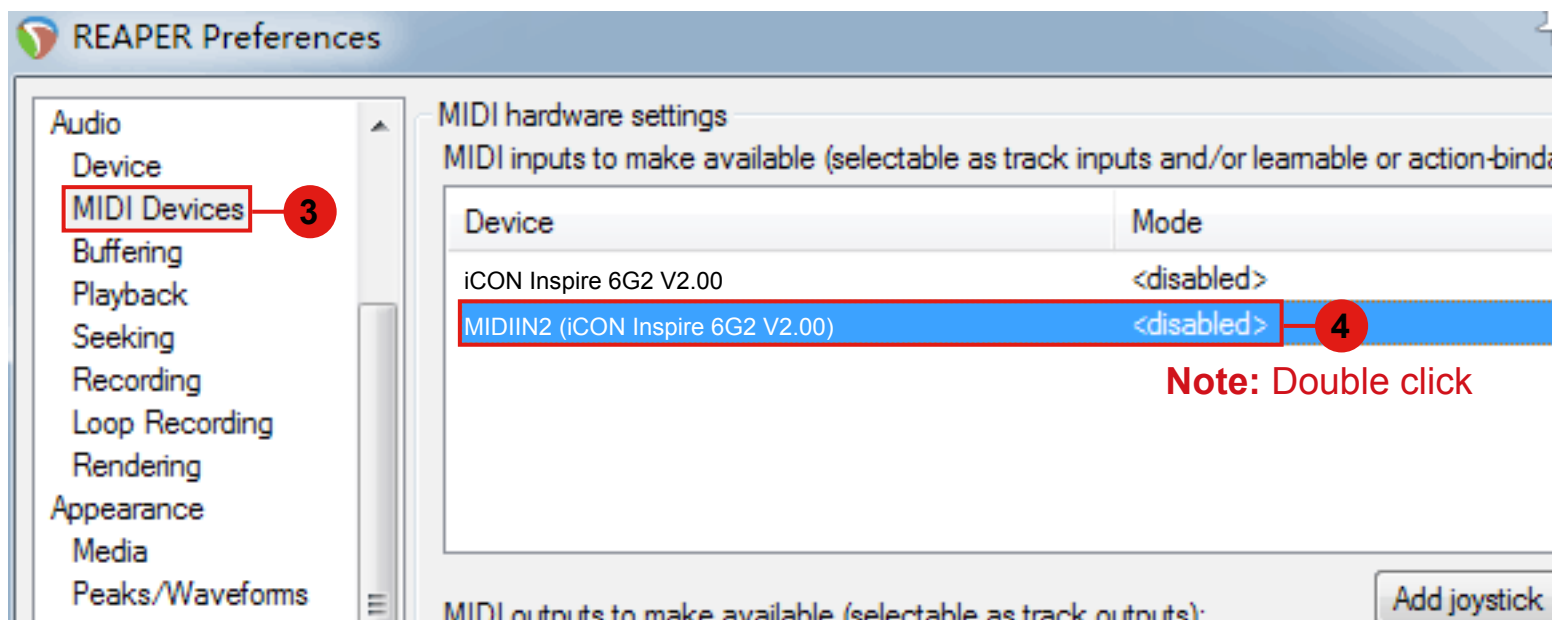


Setup for your Inspire 6G2 Keyswitch instrument input section


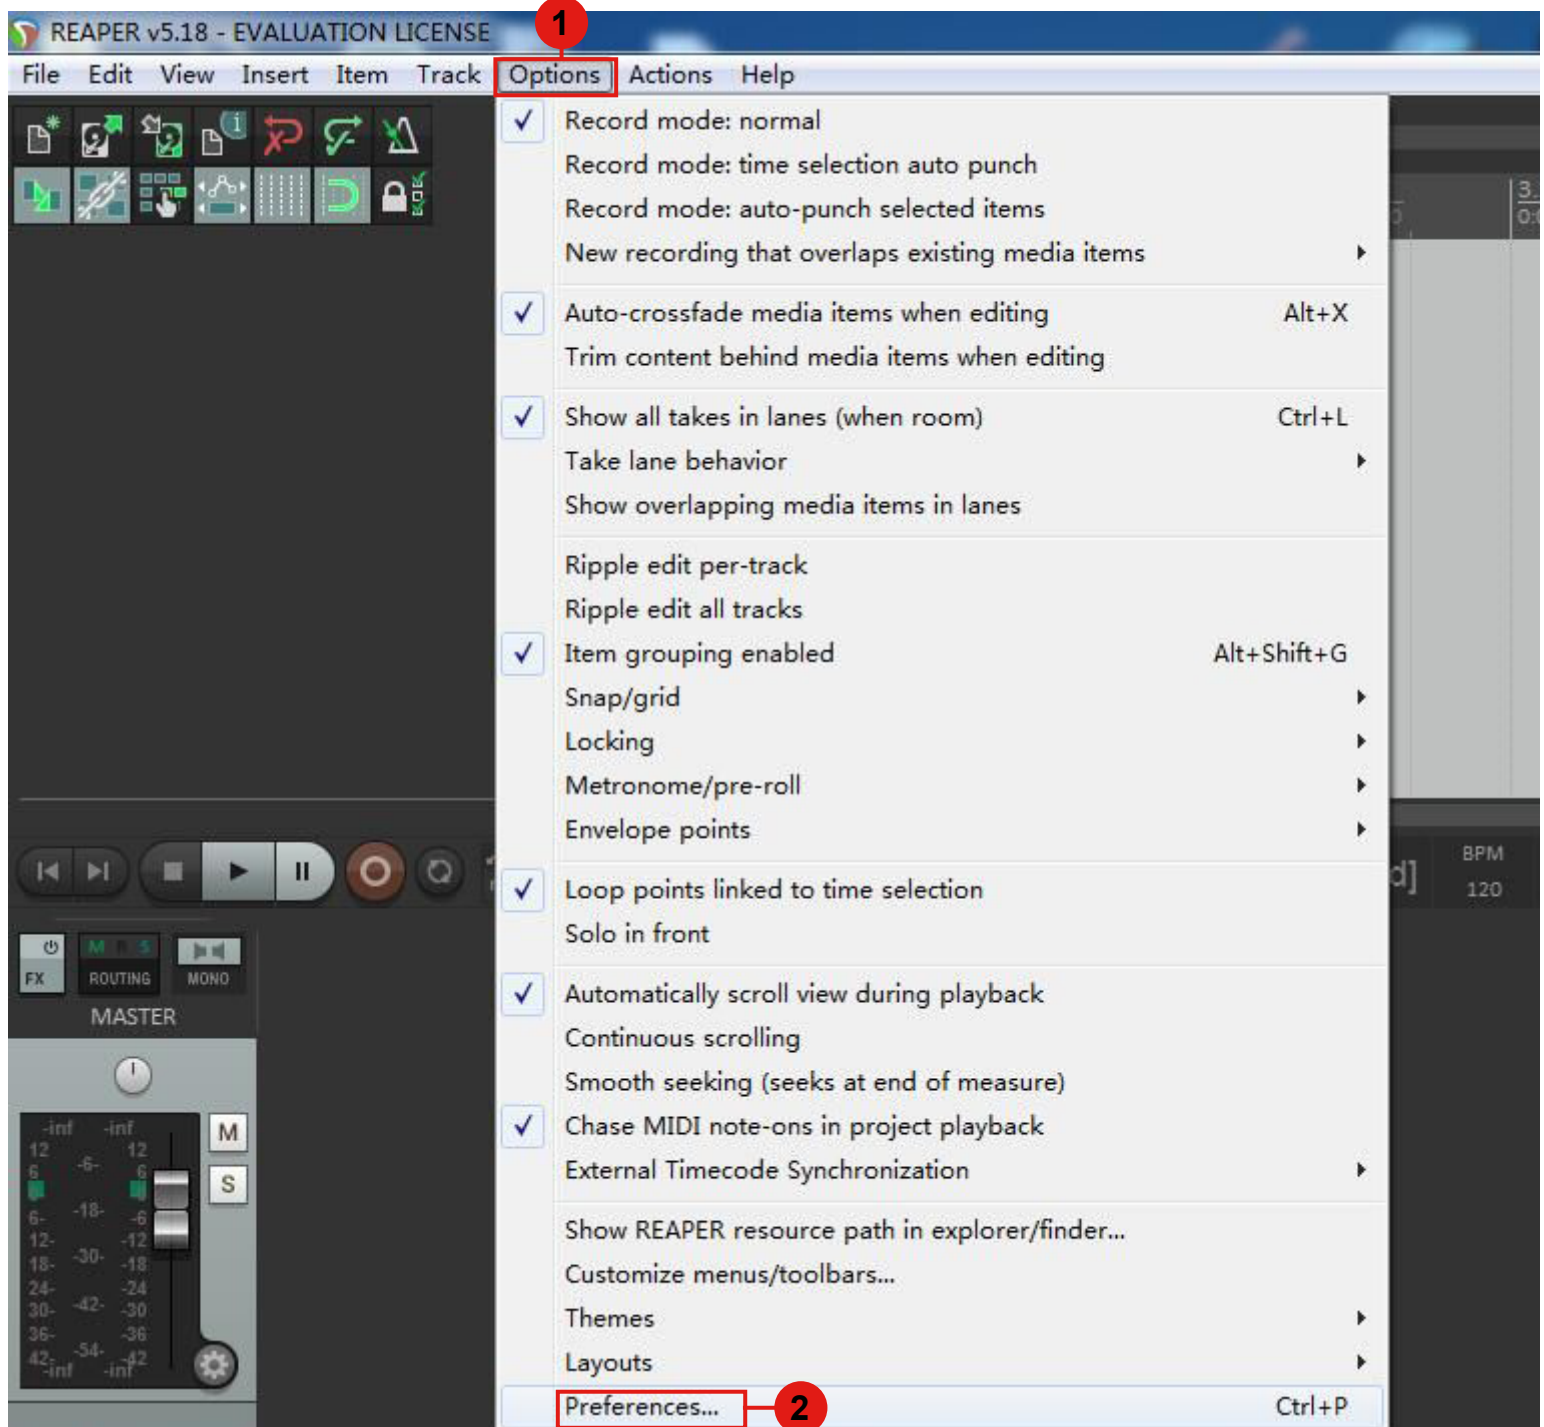


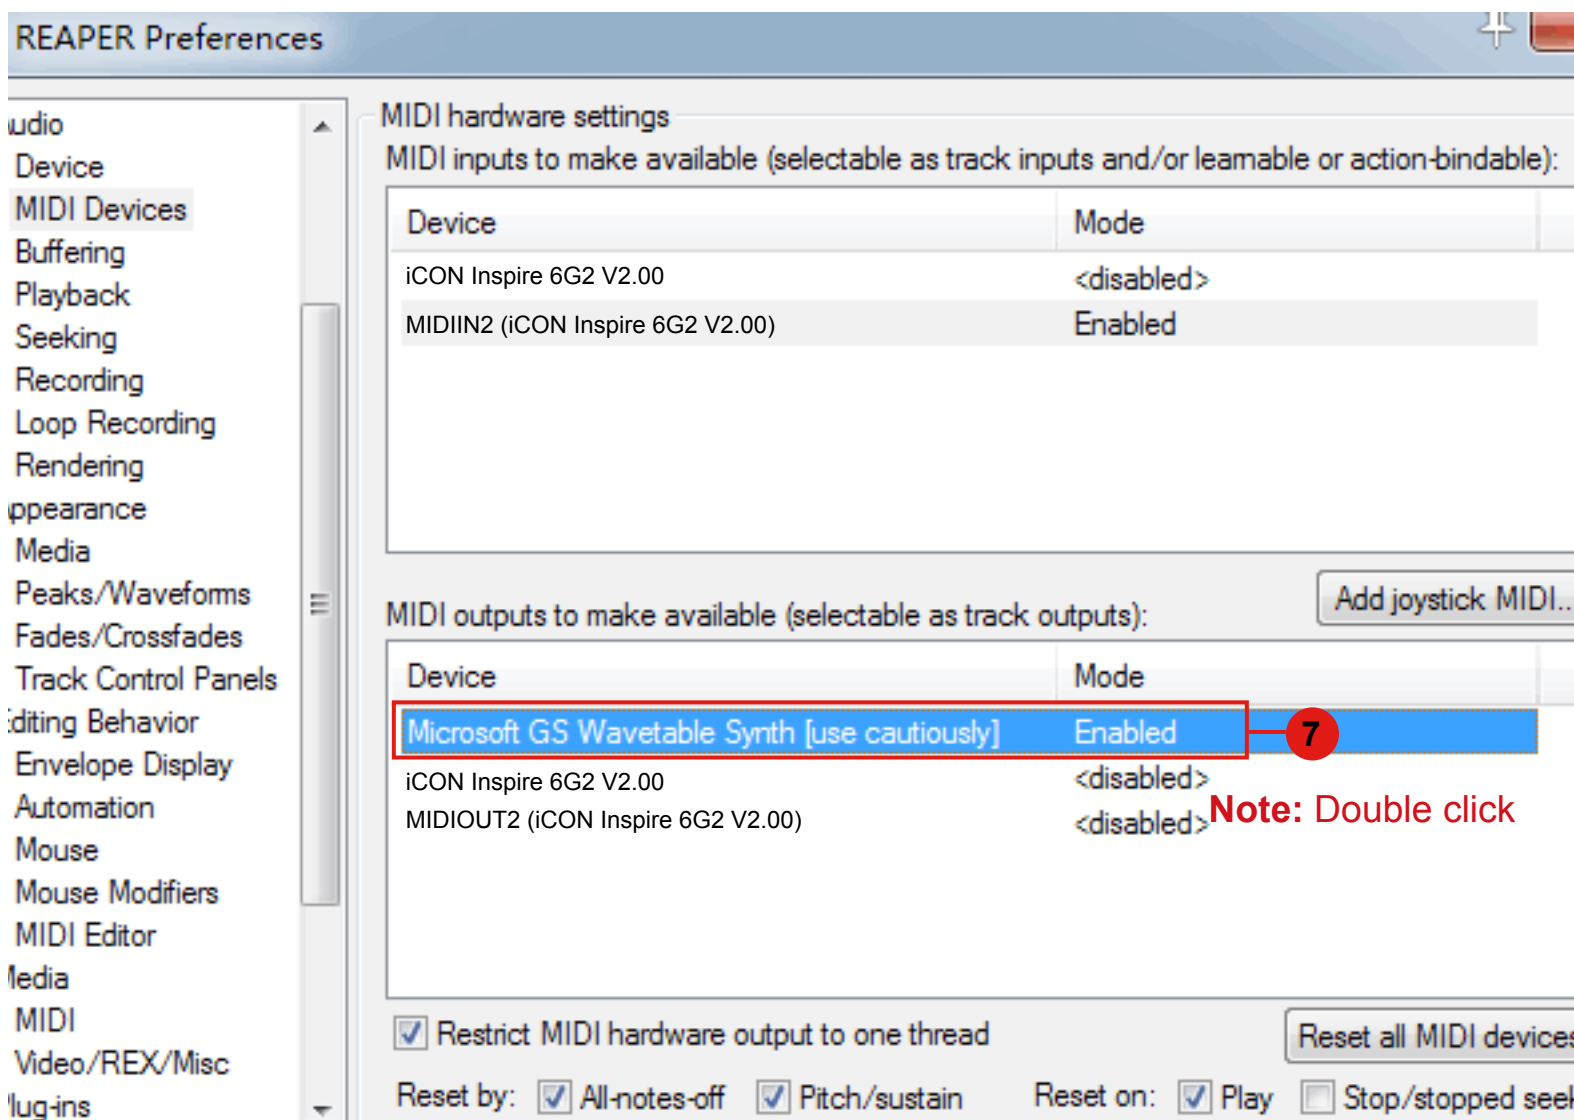
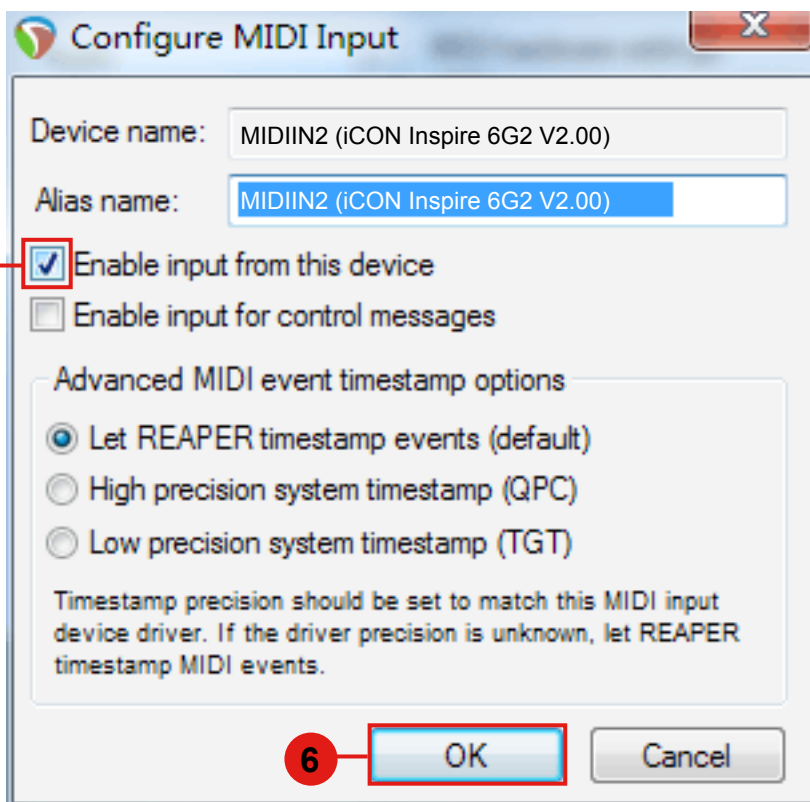


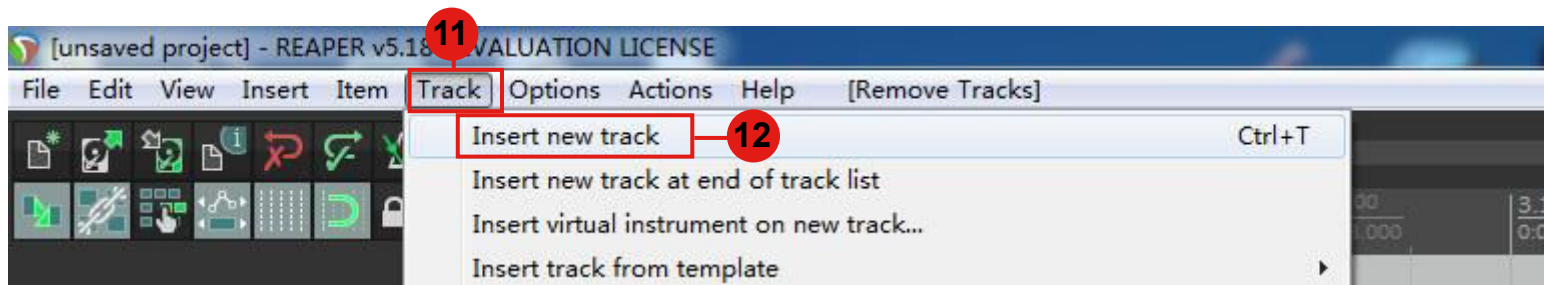
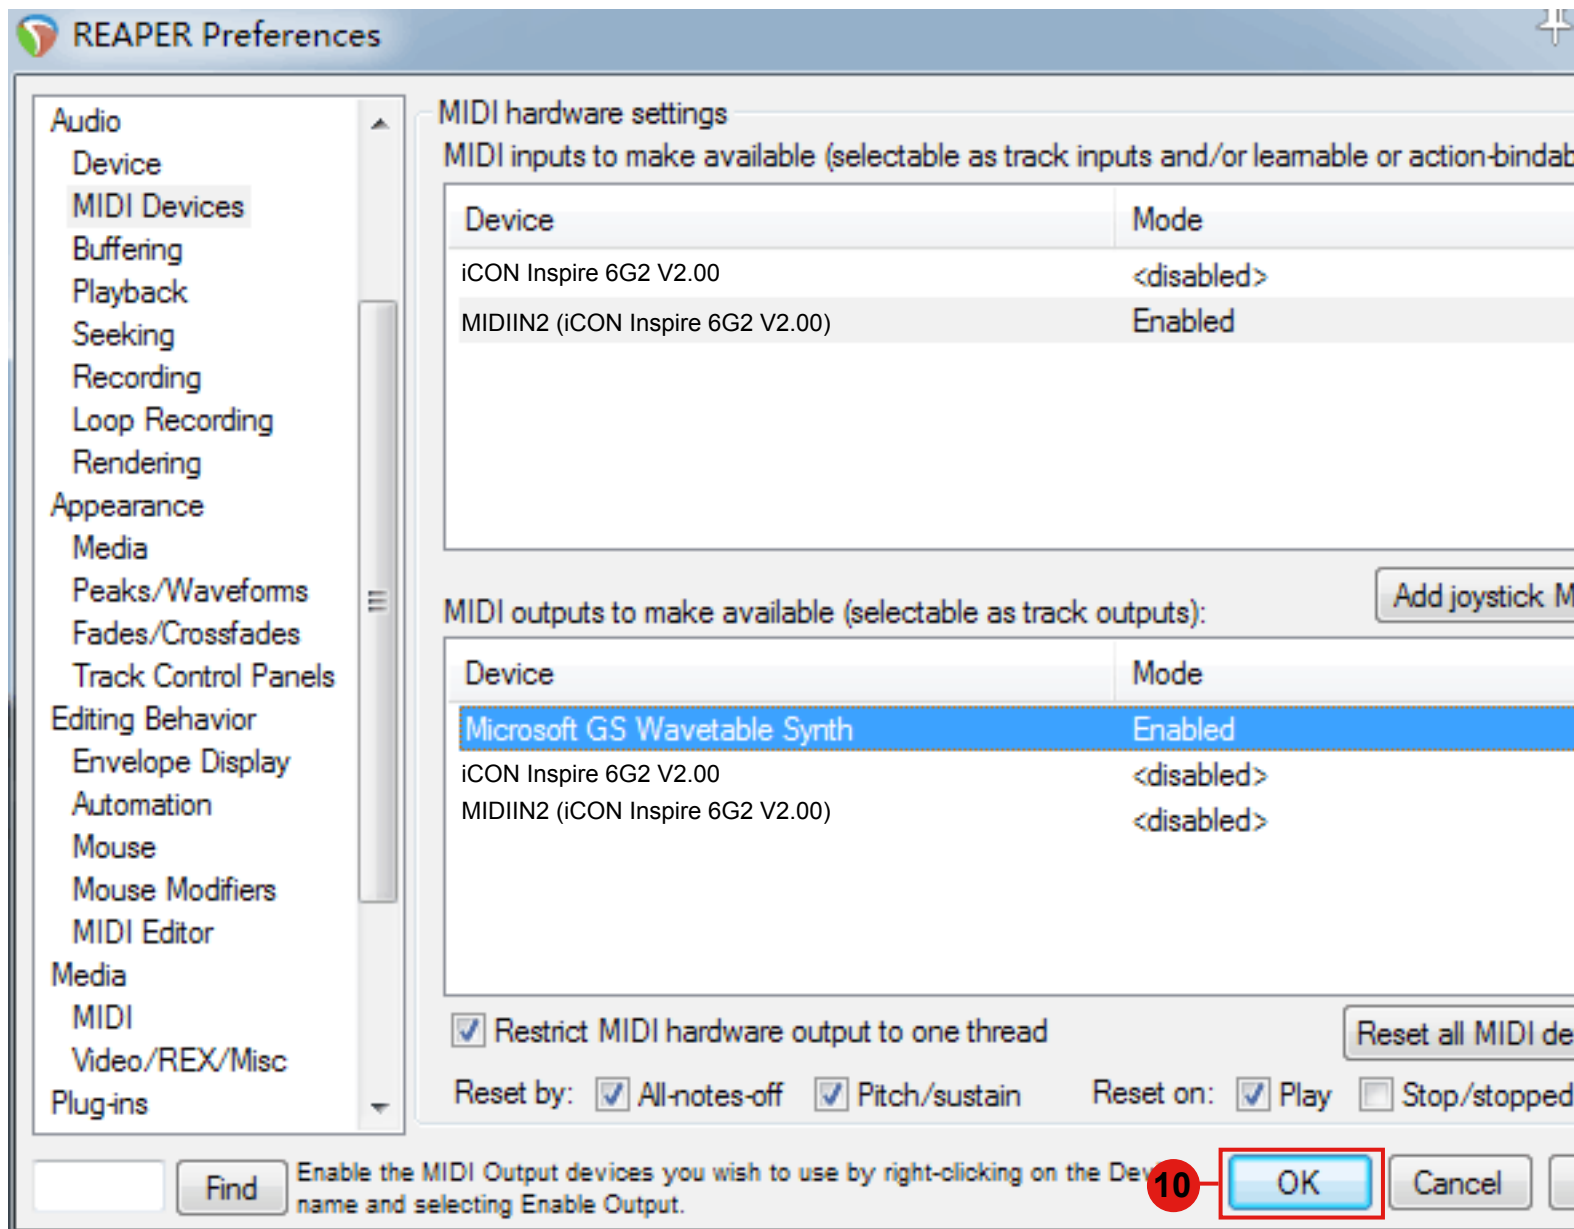
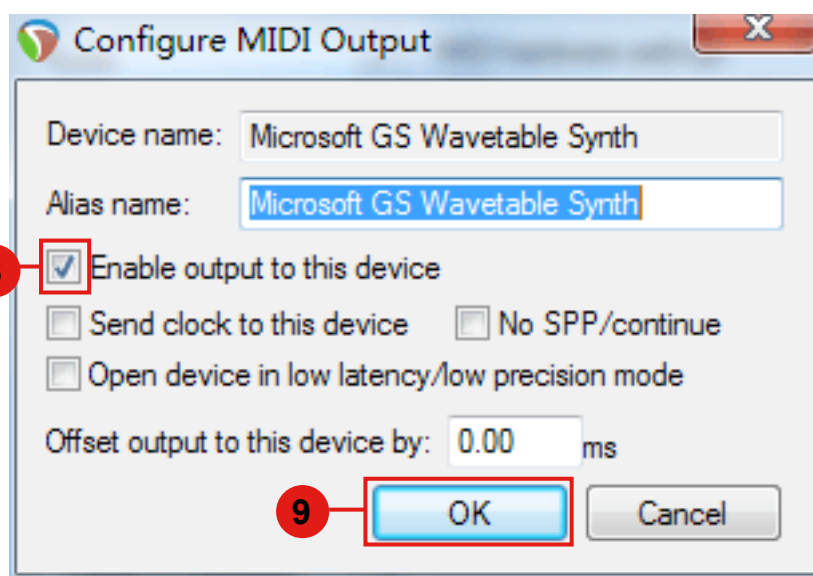


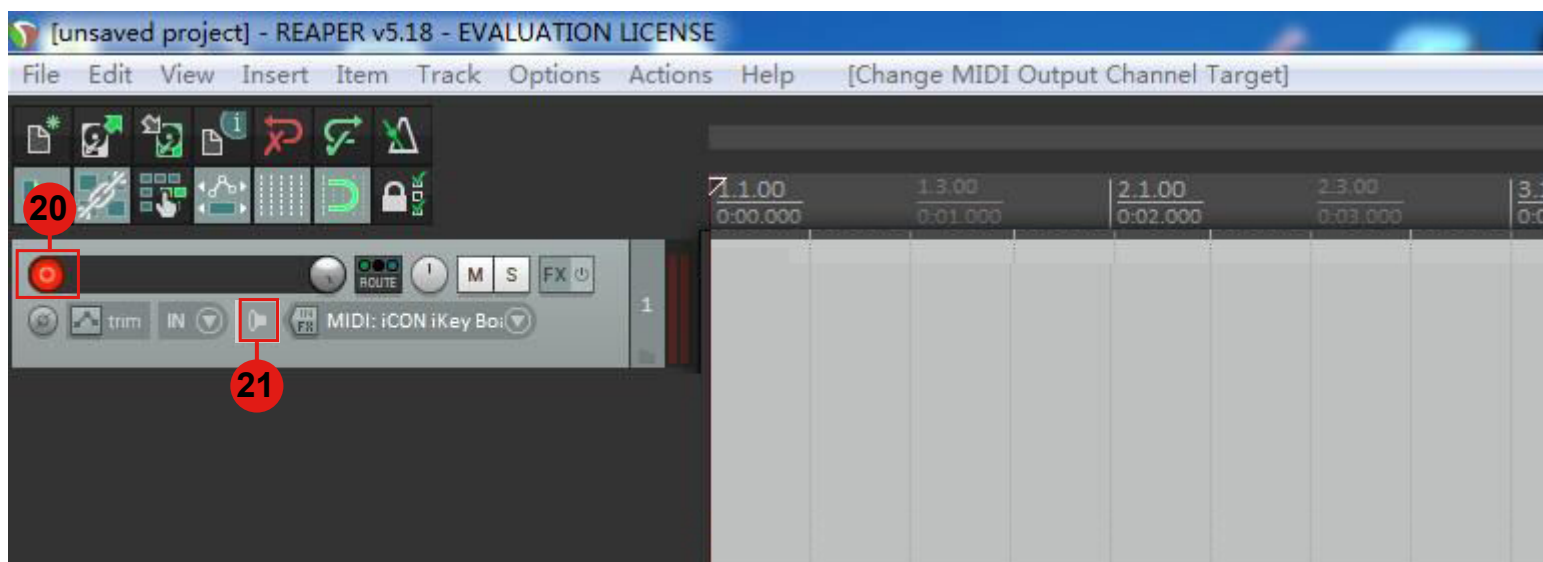
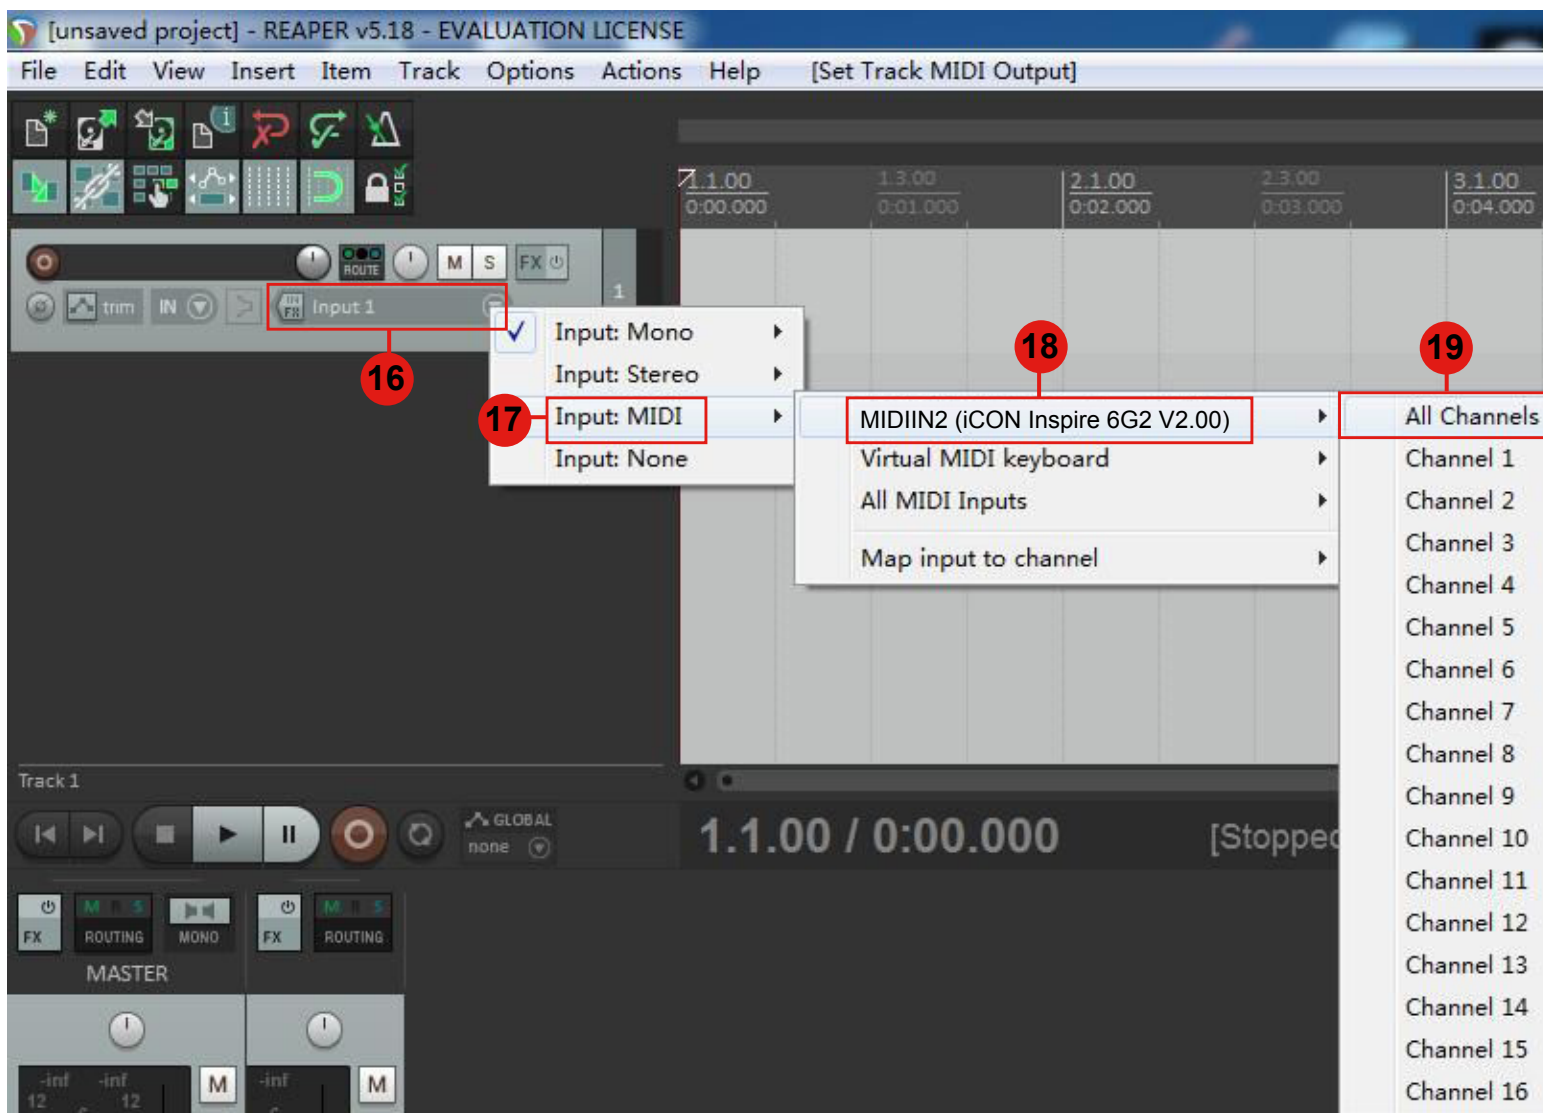
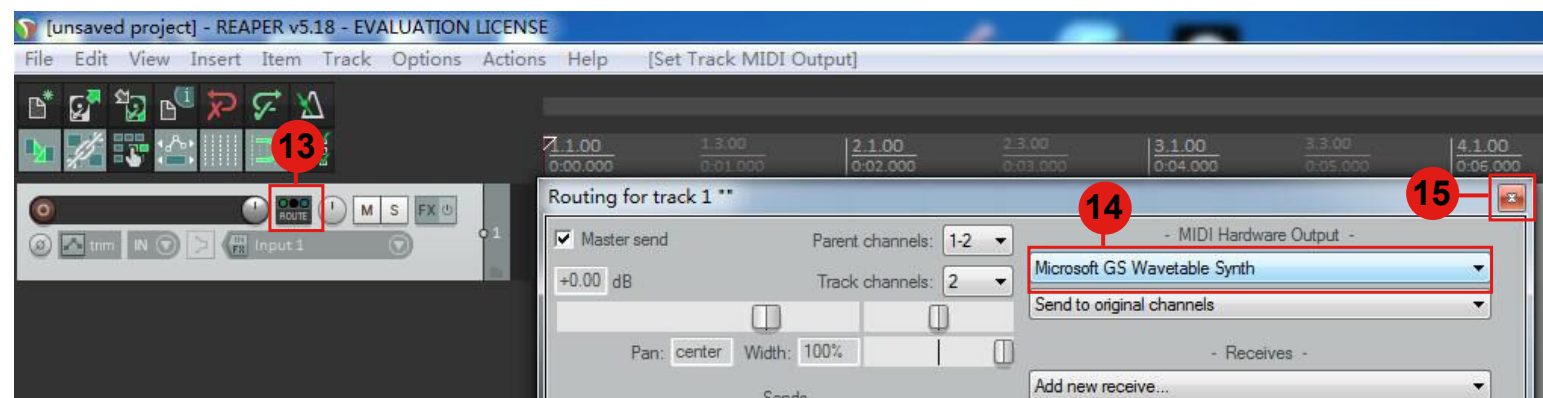


Setup for your Inspire 6G2 DrumPad instrument input section

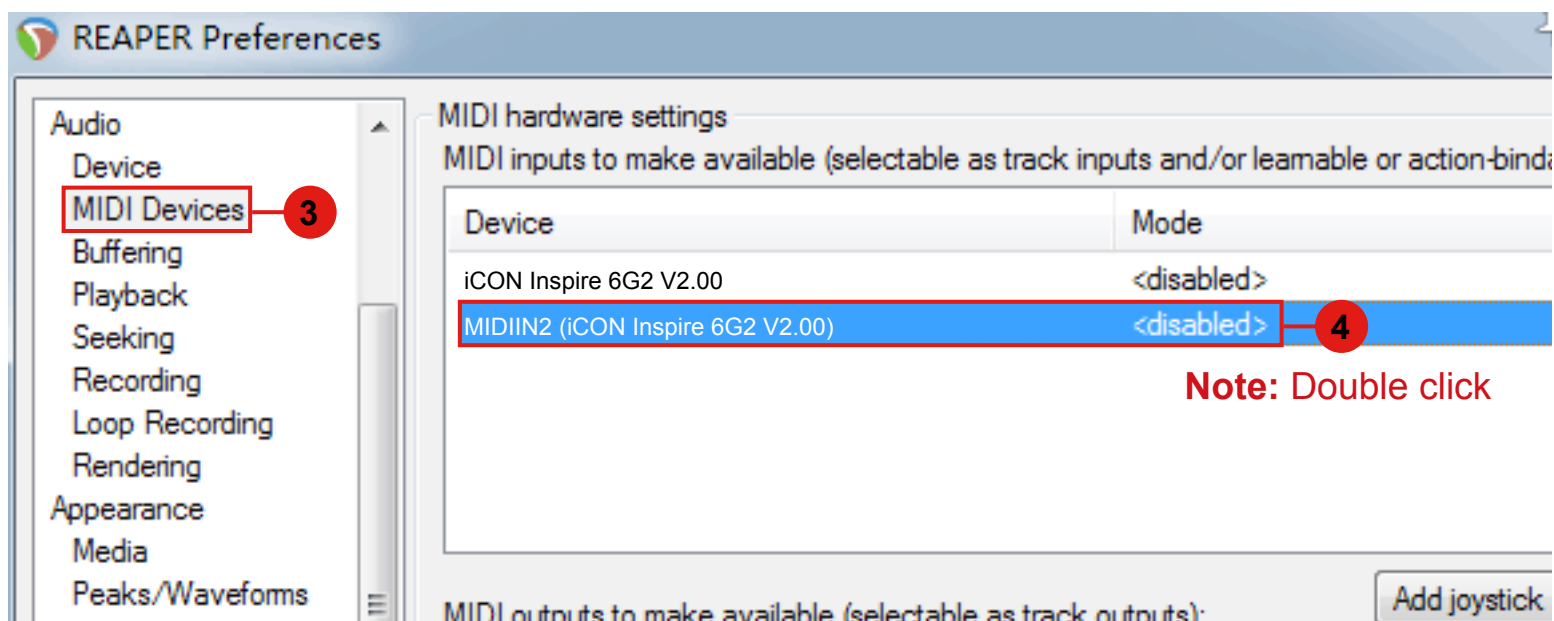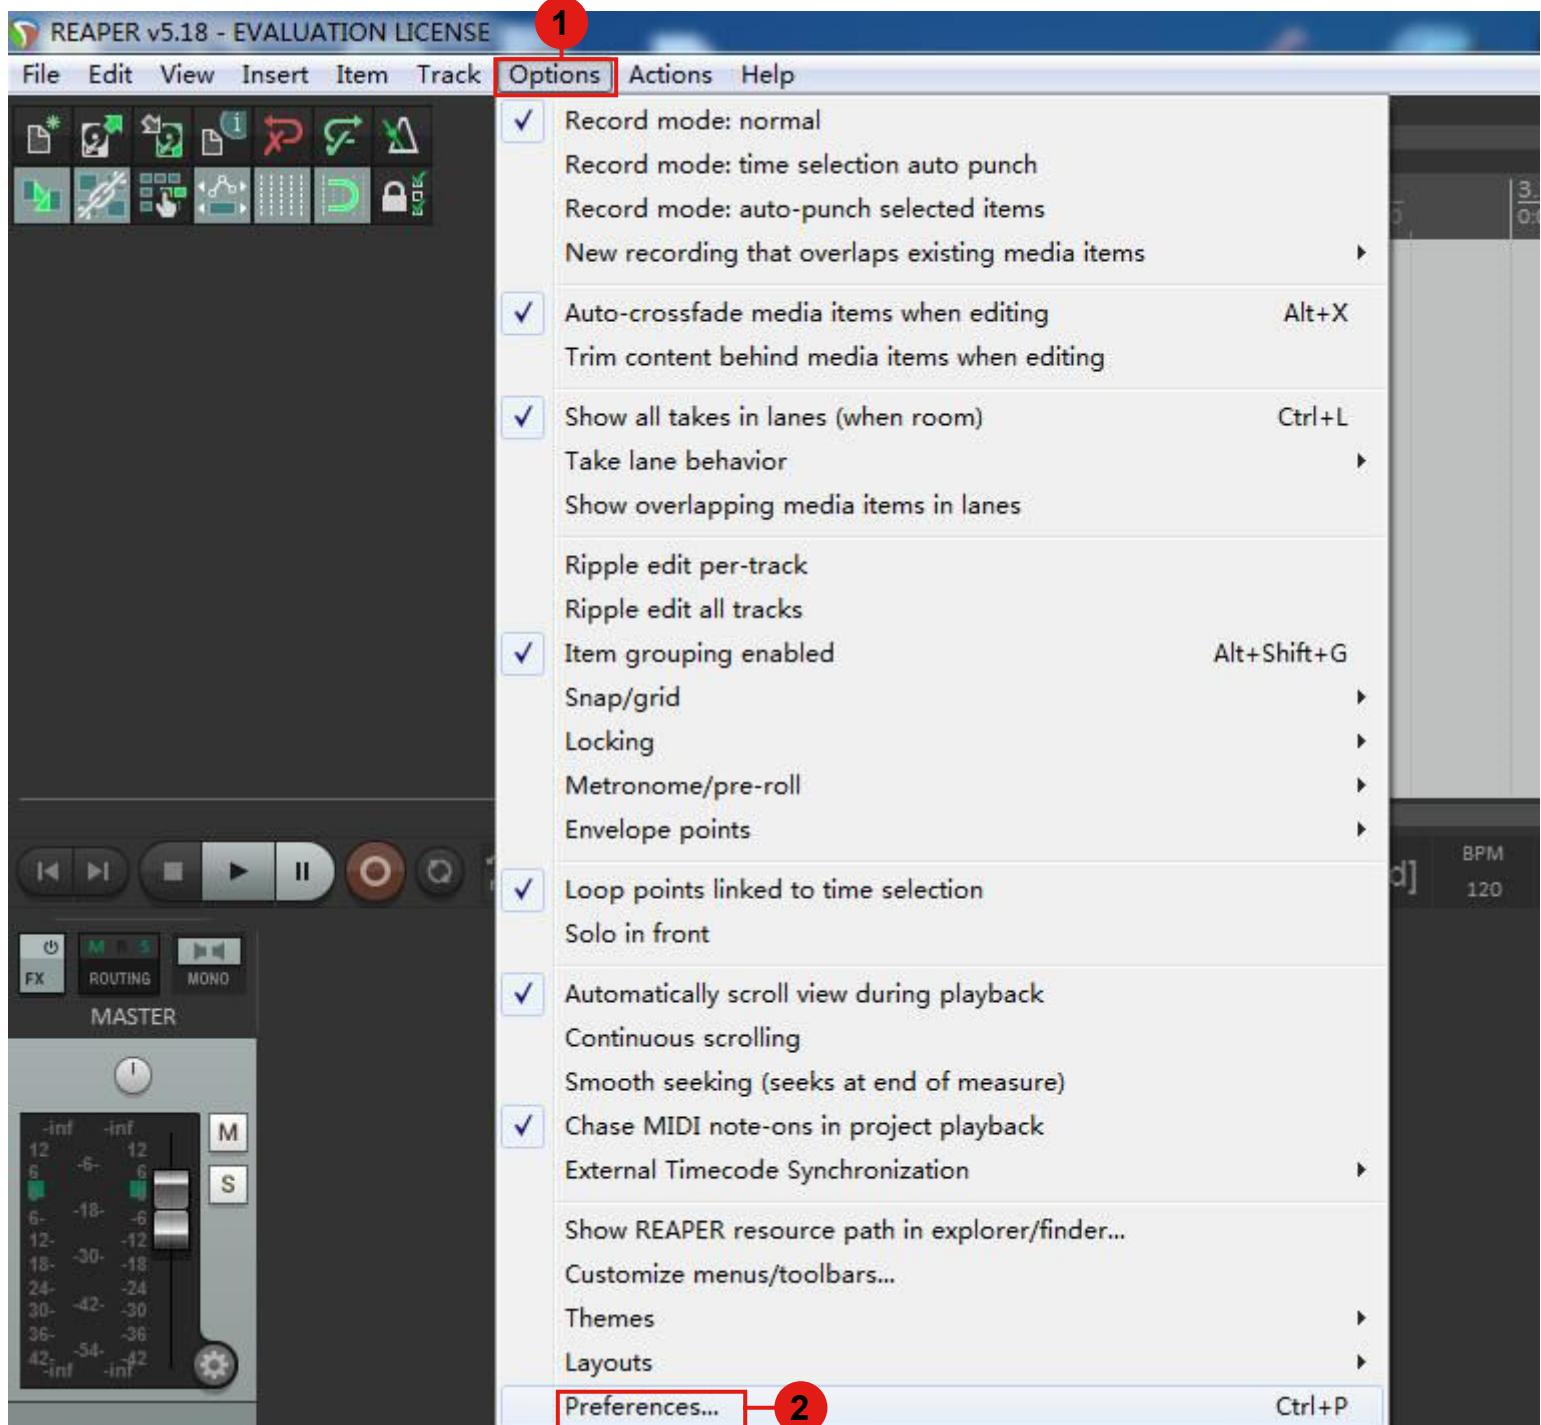

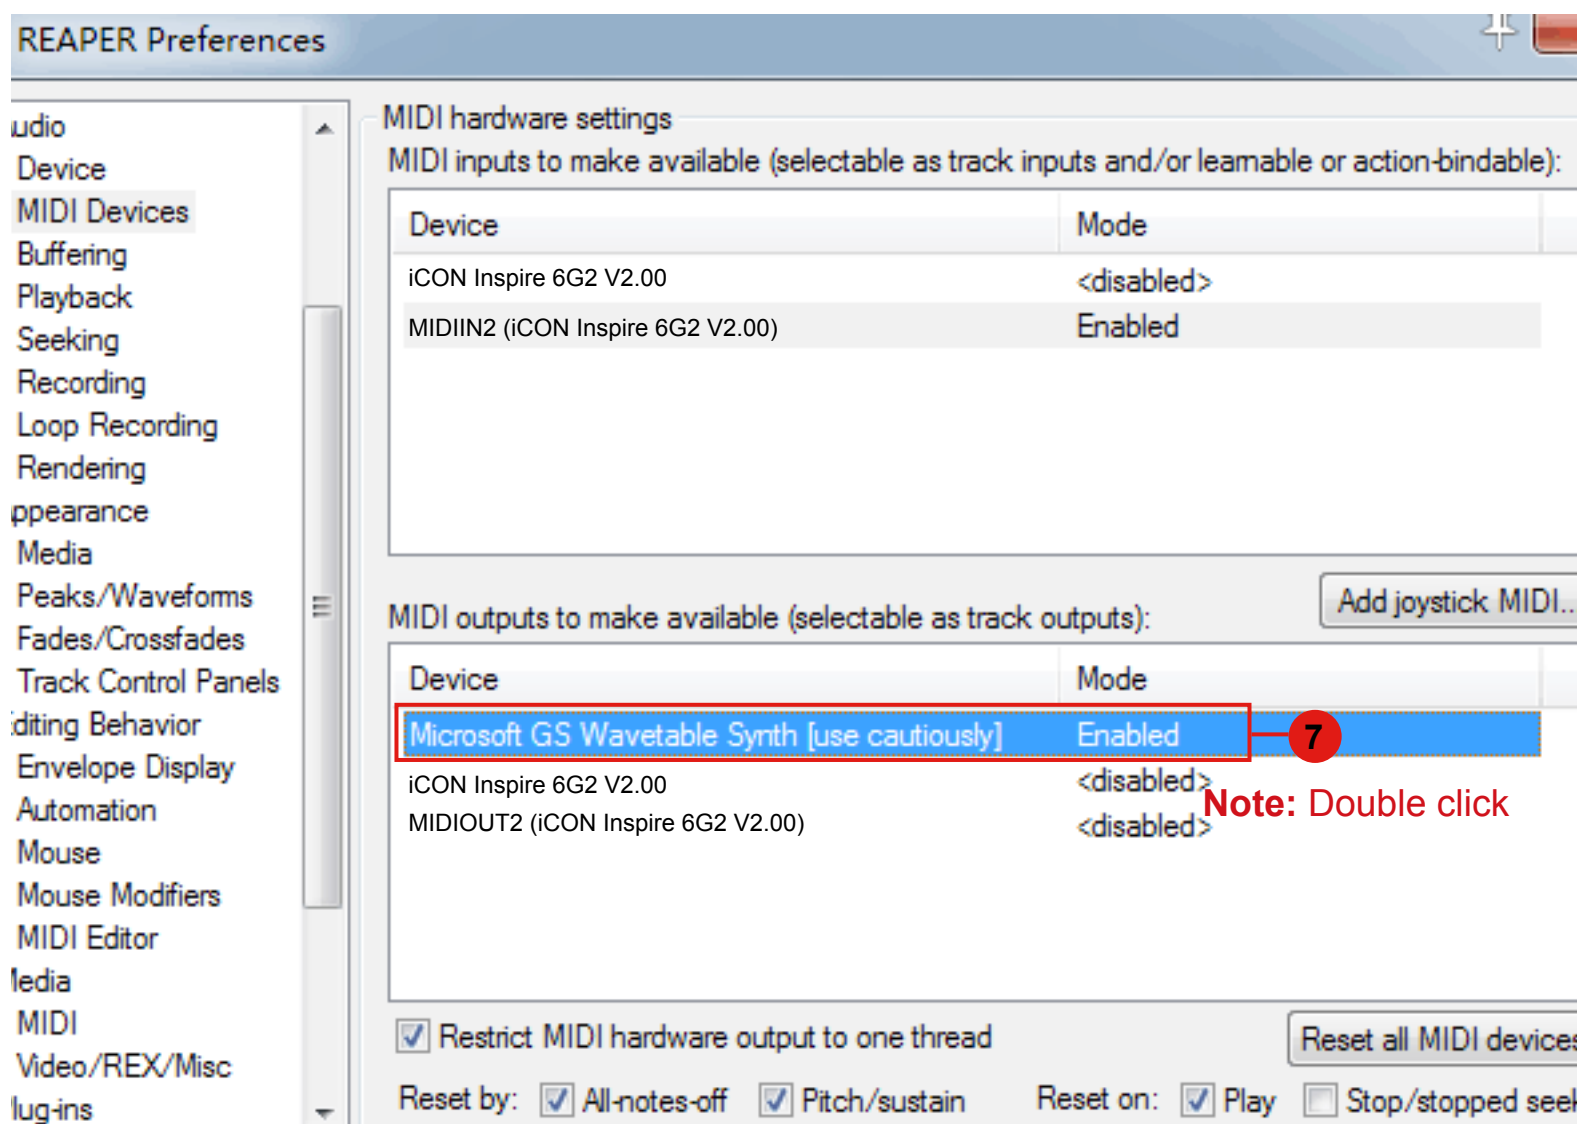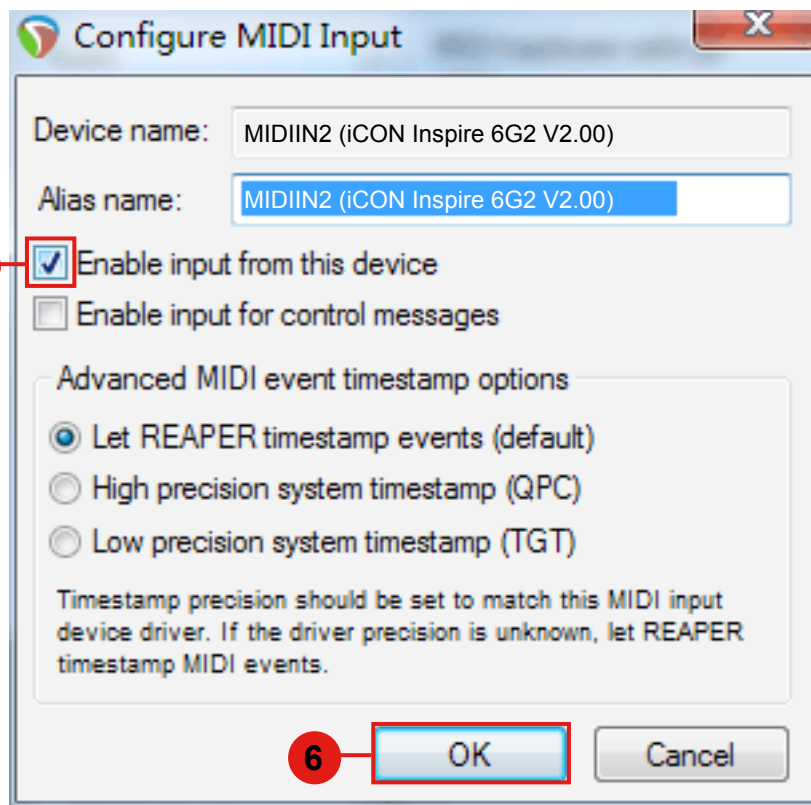

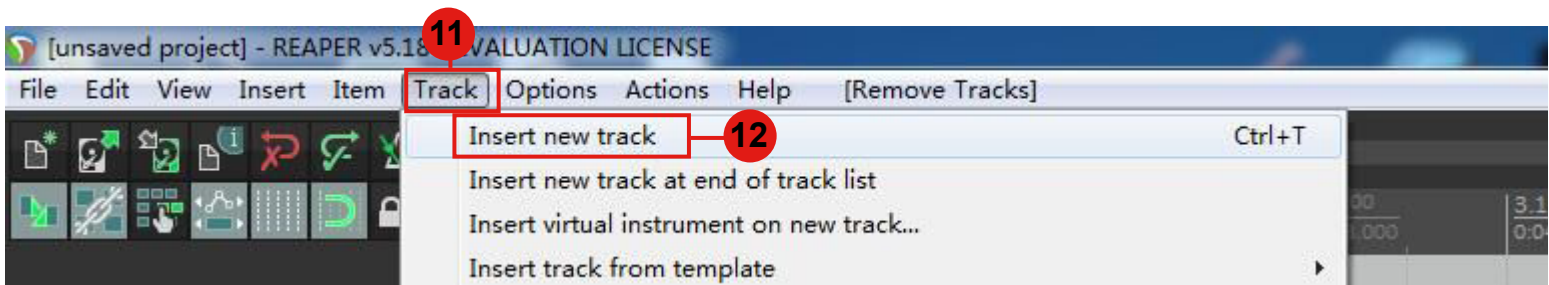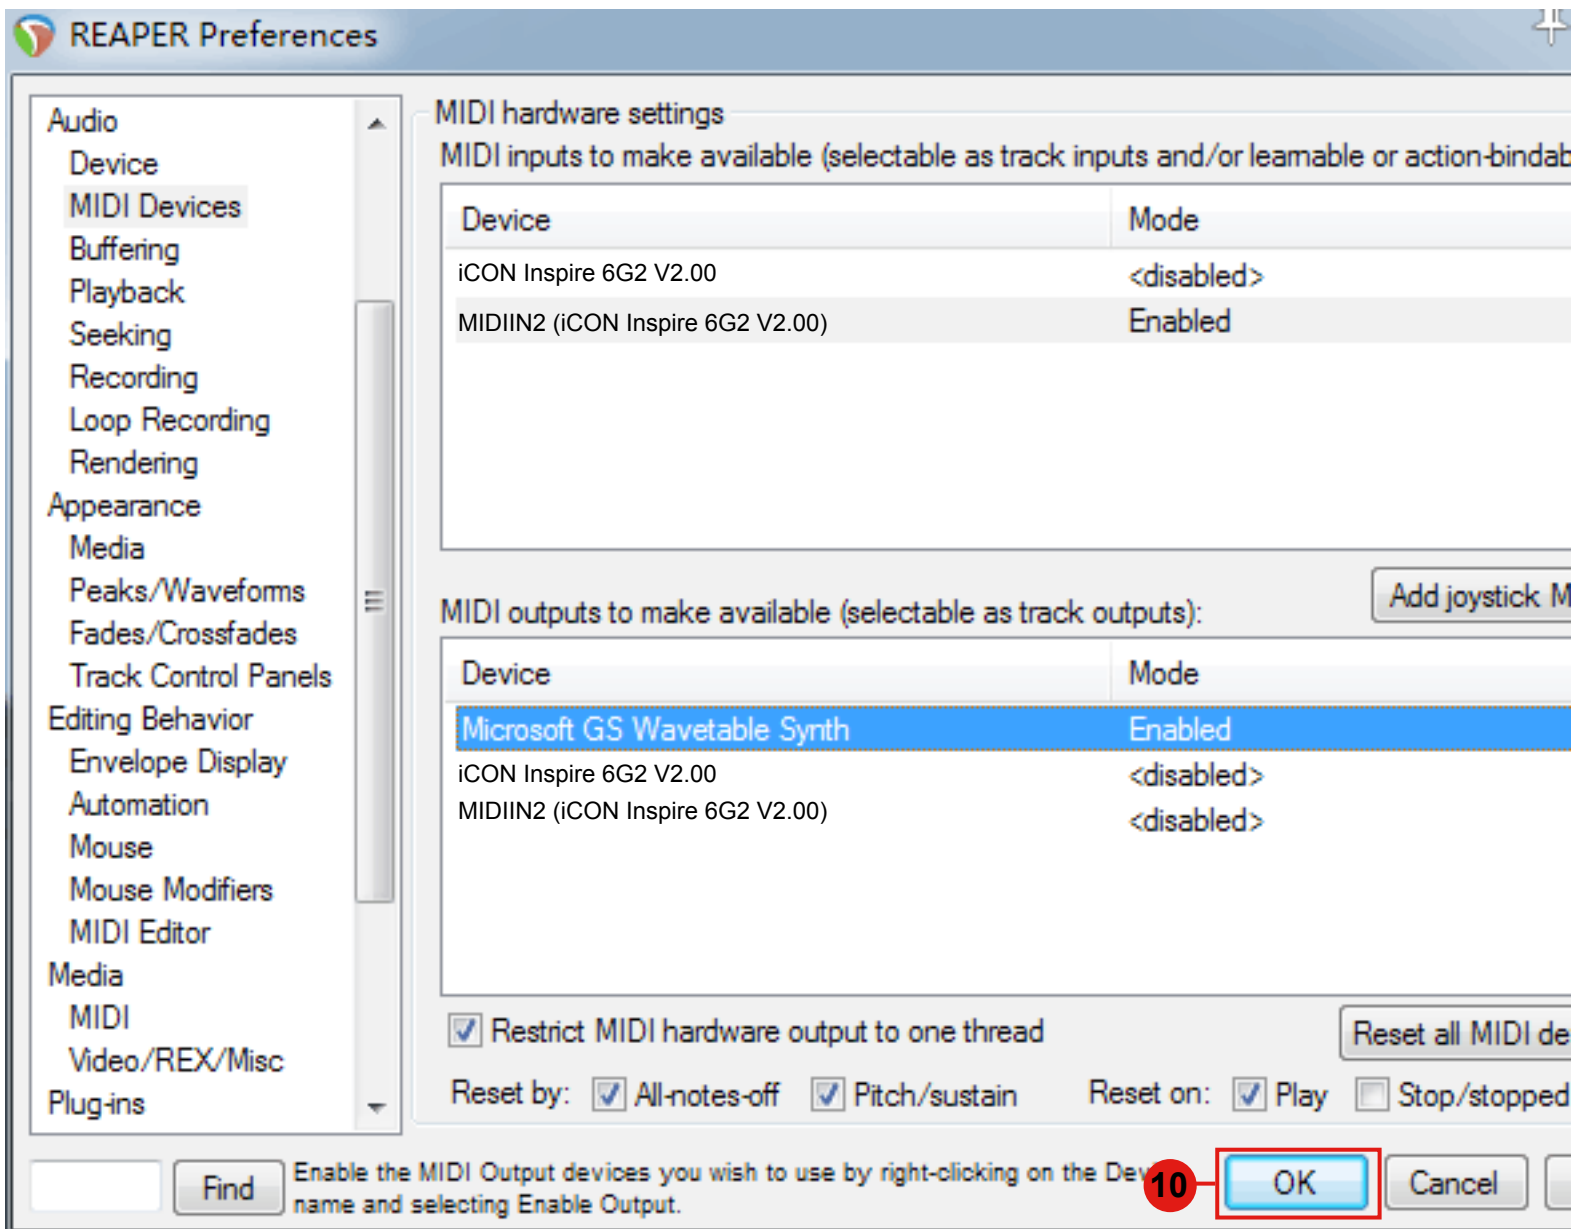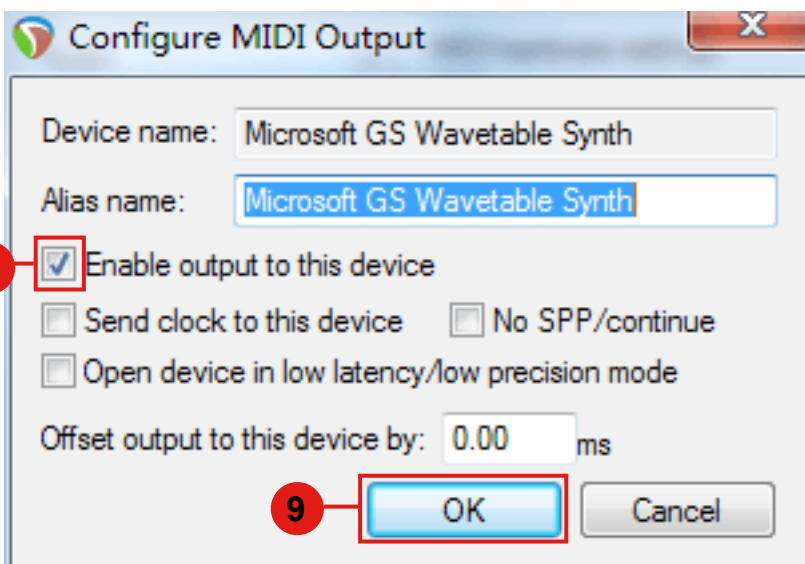

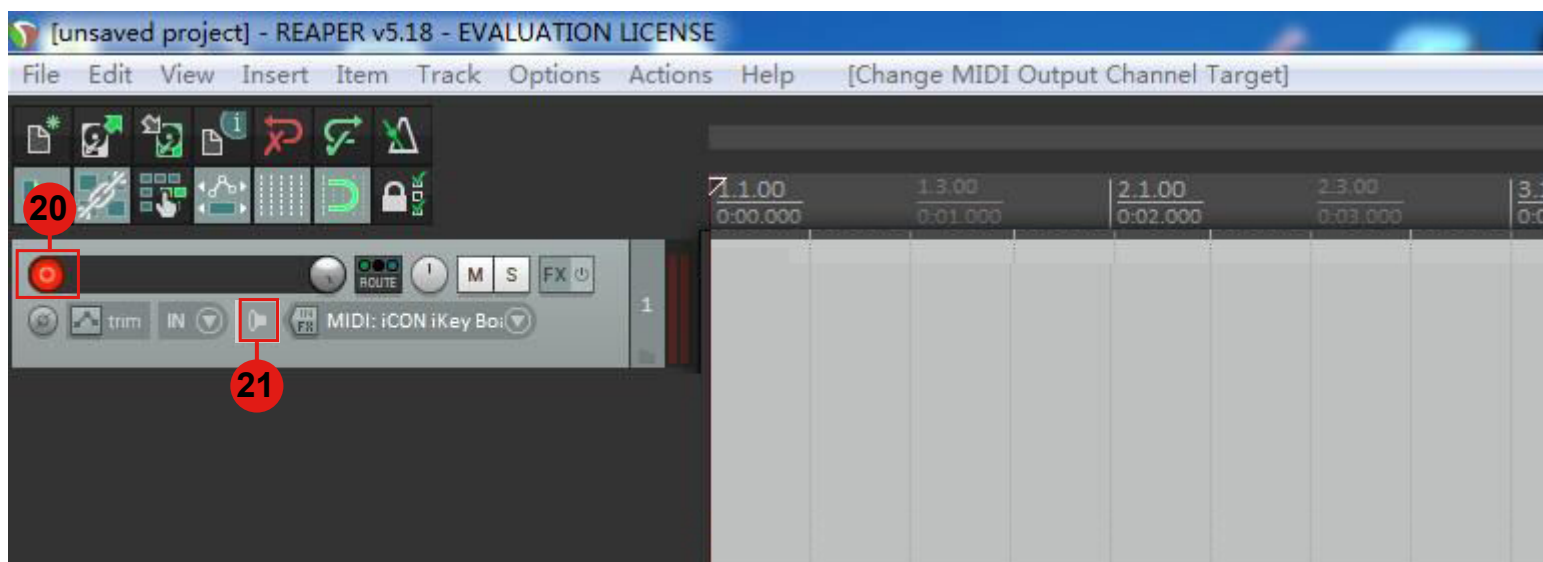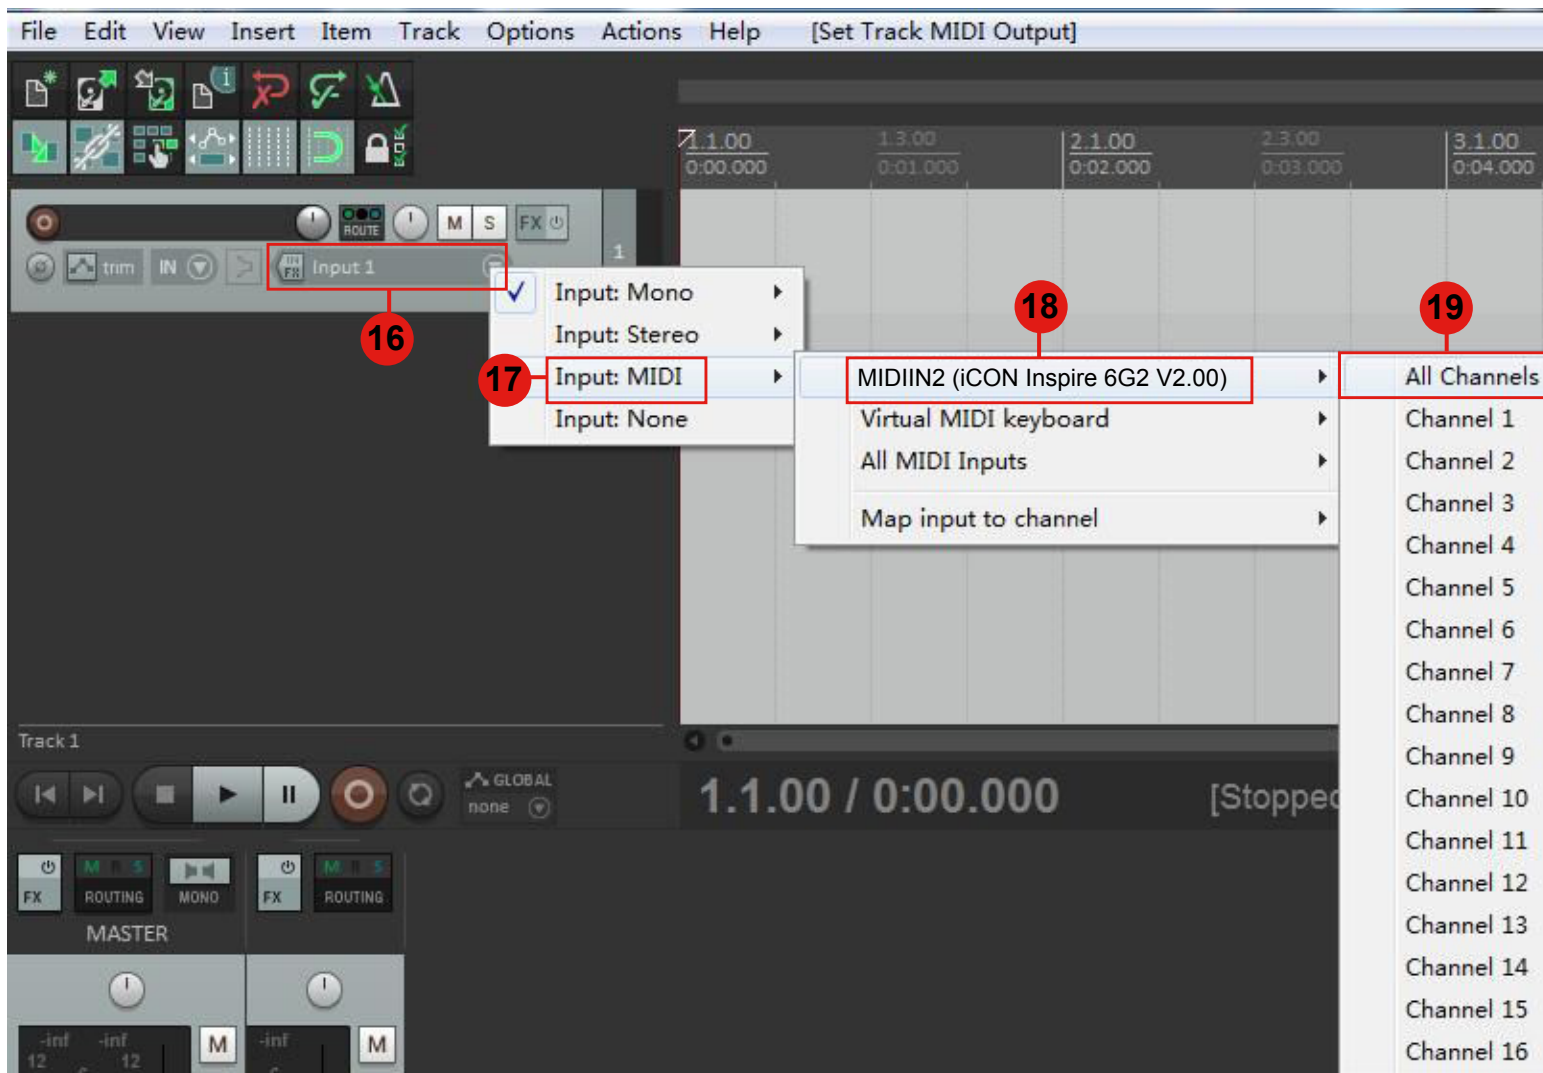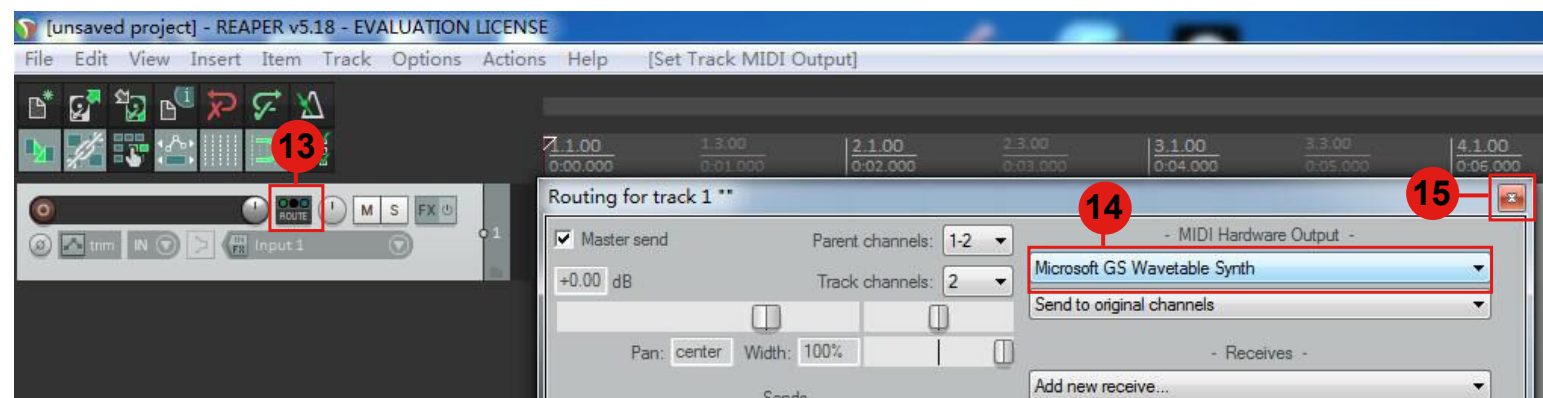

Item

Track

Options

Actions

Help

[Change MIDI Output Channel Target]

22

ROUTE

M

S

FX

MIDI: iCON iKey Boi

1

1.1.00 0:00.000	1.3.00 0:01.000	2.1.00 0:02.000	2.3.00 0:03.000	3.1.00 0:04.000	3.3.00 0:05.000	4.1.00 0:06.000
--------------------	--------------------	--------------------	--------------------	--------------------	--------------------	--------------------

Routing for track 1 "

☒ Master send

Parent channels: 1-2

- MIDI Hardware Output -

12.00 dB

Track channels: 2

Microsoft GS Wavetable Synth

Send to channel 10

Pan: center

Width: 100%

- Lives -

- Sends -

Add new send...

- Audio Hardware Outputs -

Add new hardware output...

23

1.1.00 / 0:00.000

[Stopped]

BPM 120

4/4

Rate: 1.0