


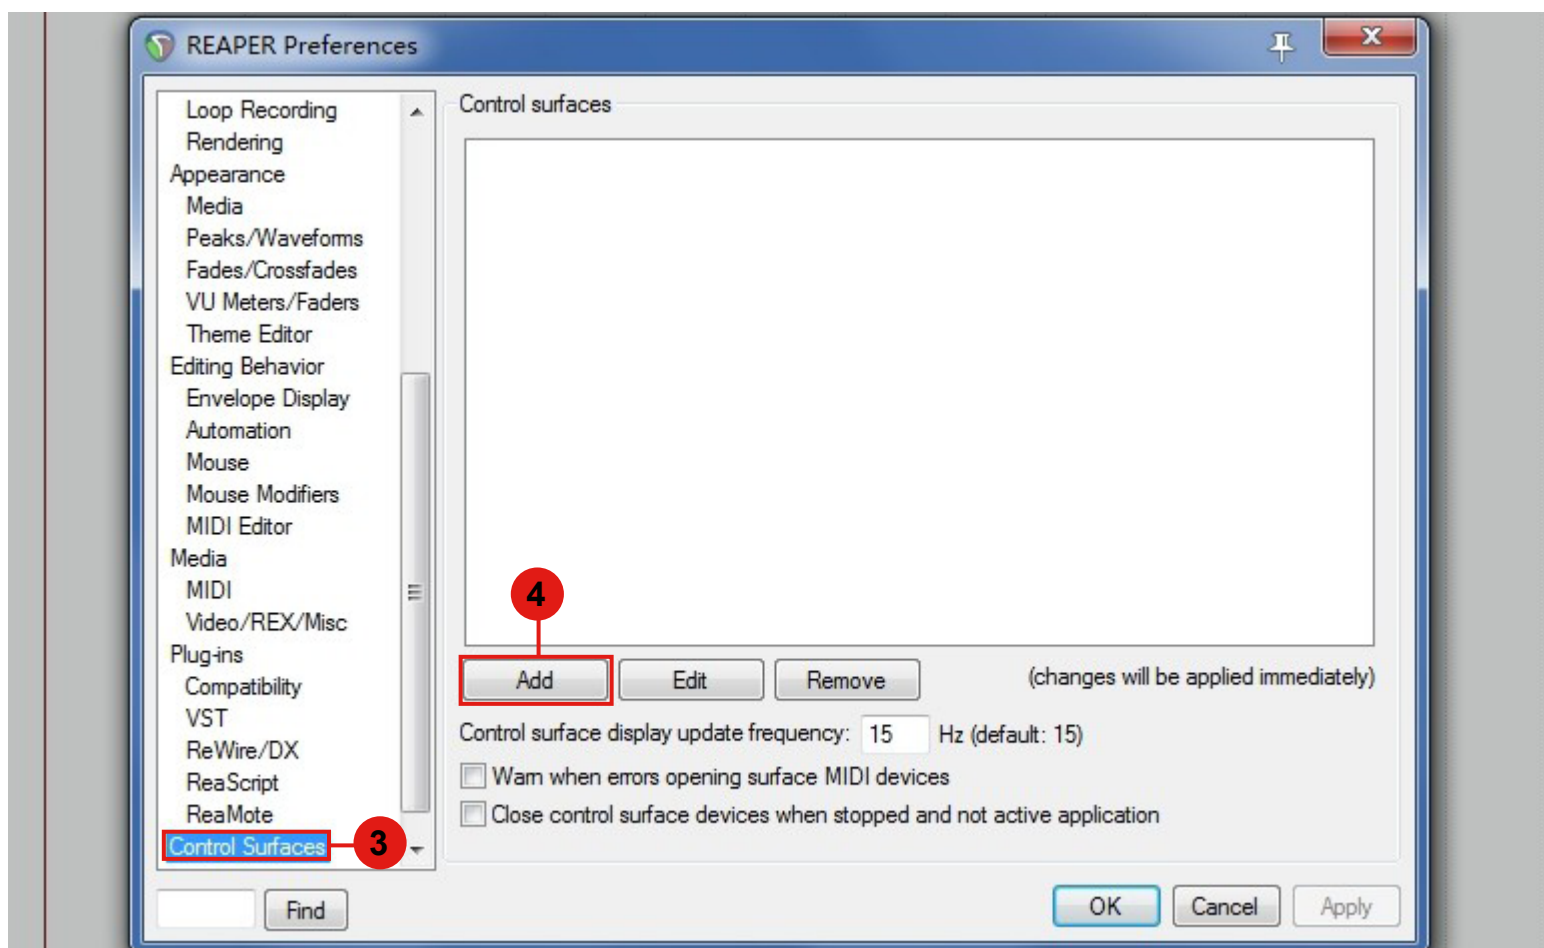
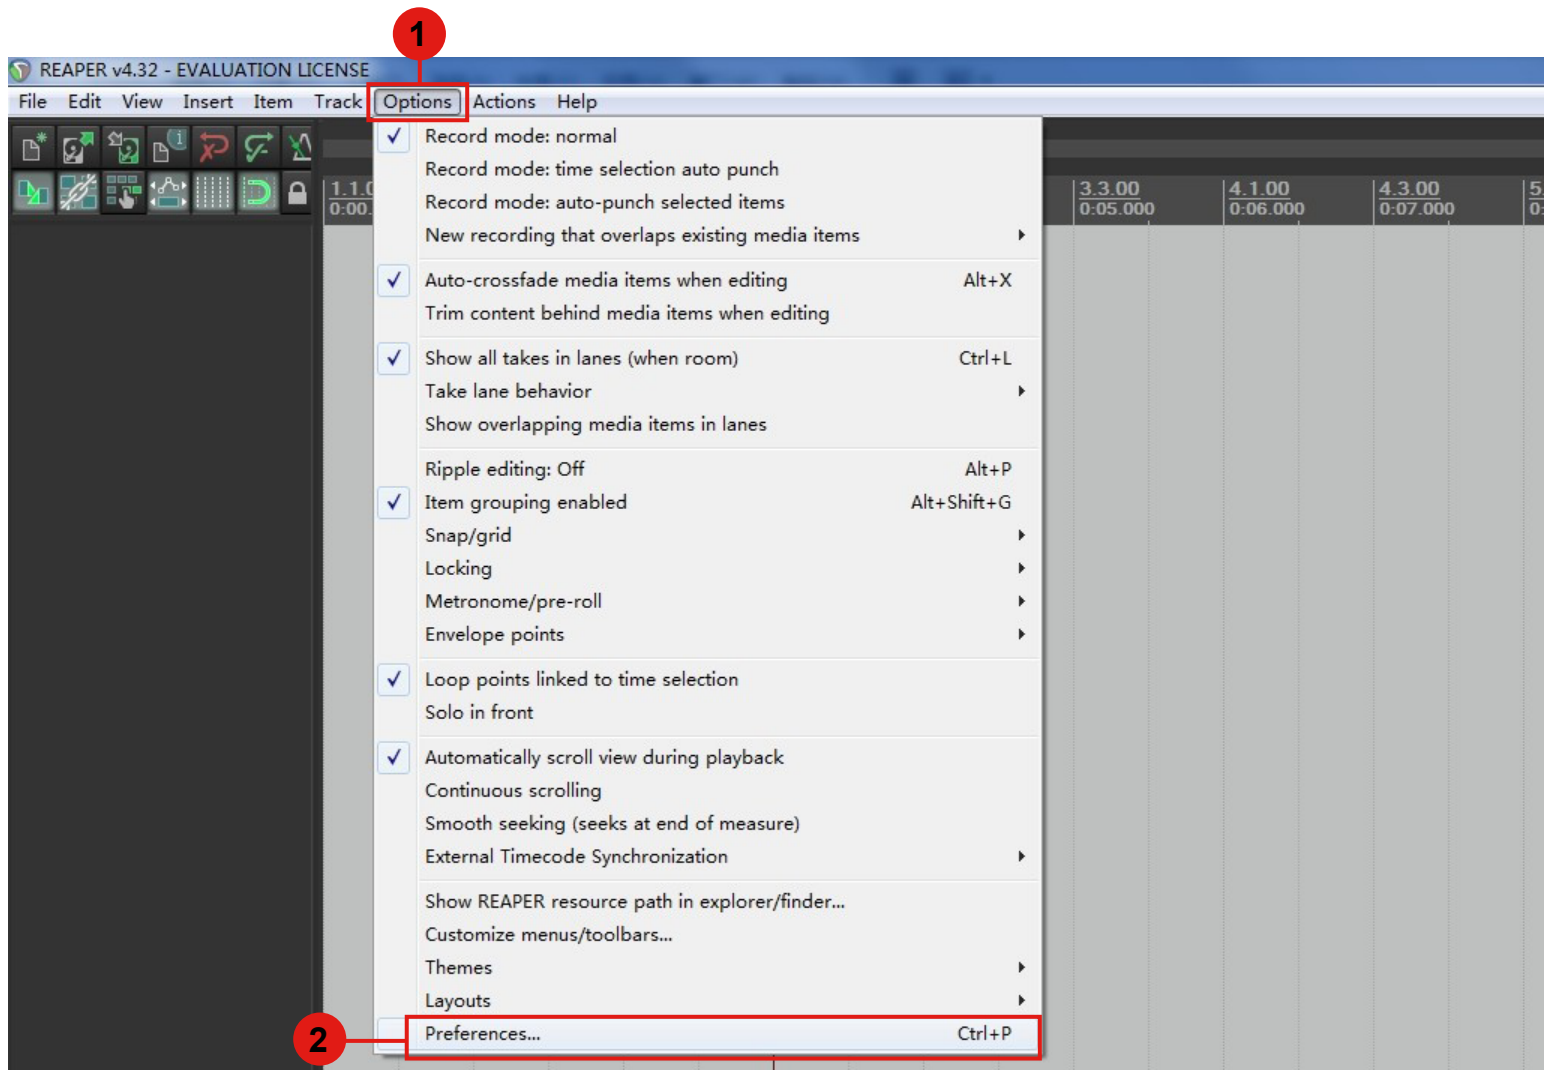




Setup up for your Inspire 8G2 controller section



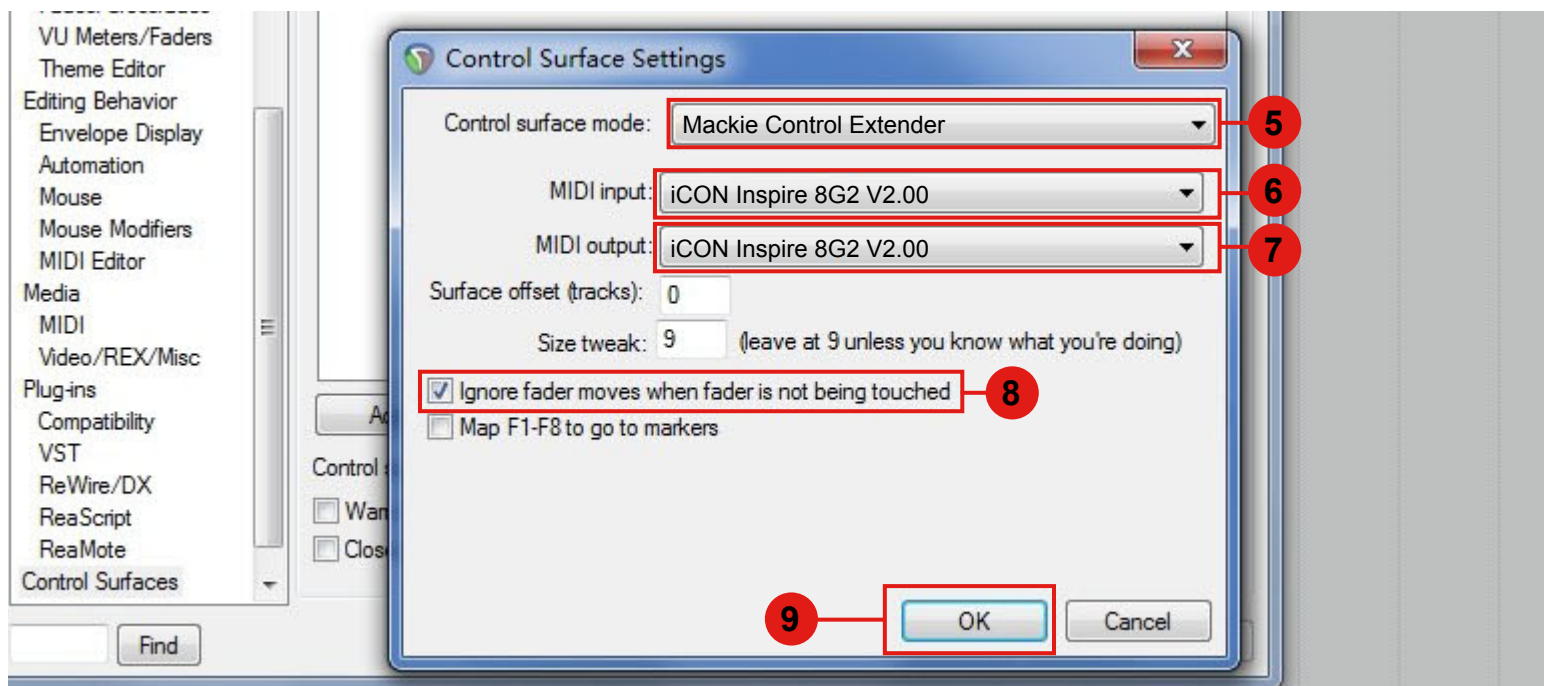


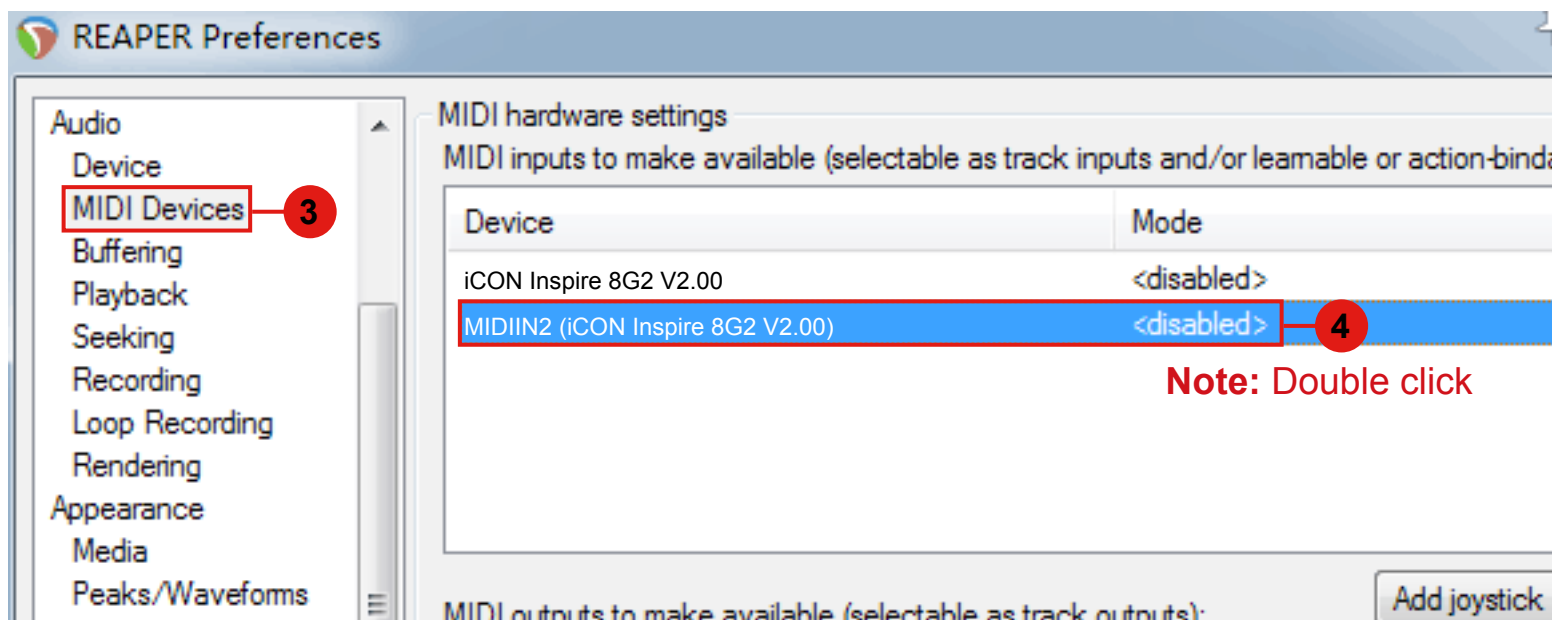



Setup for your Inspire 8G2 Keyswitch instrument input section


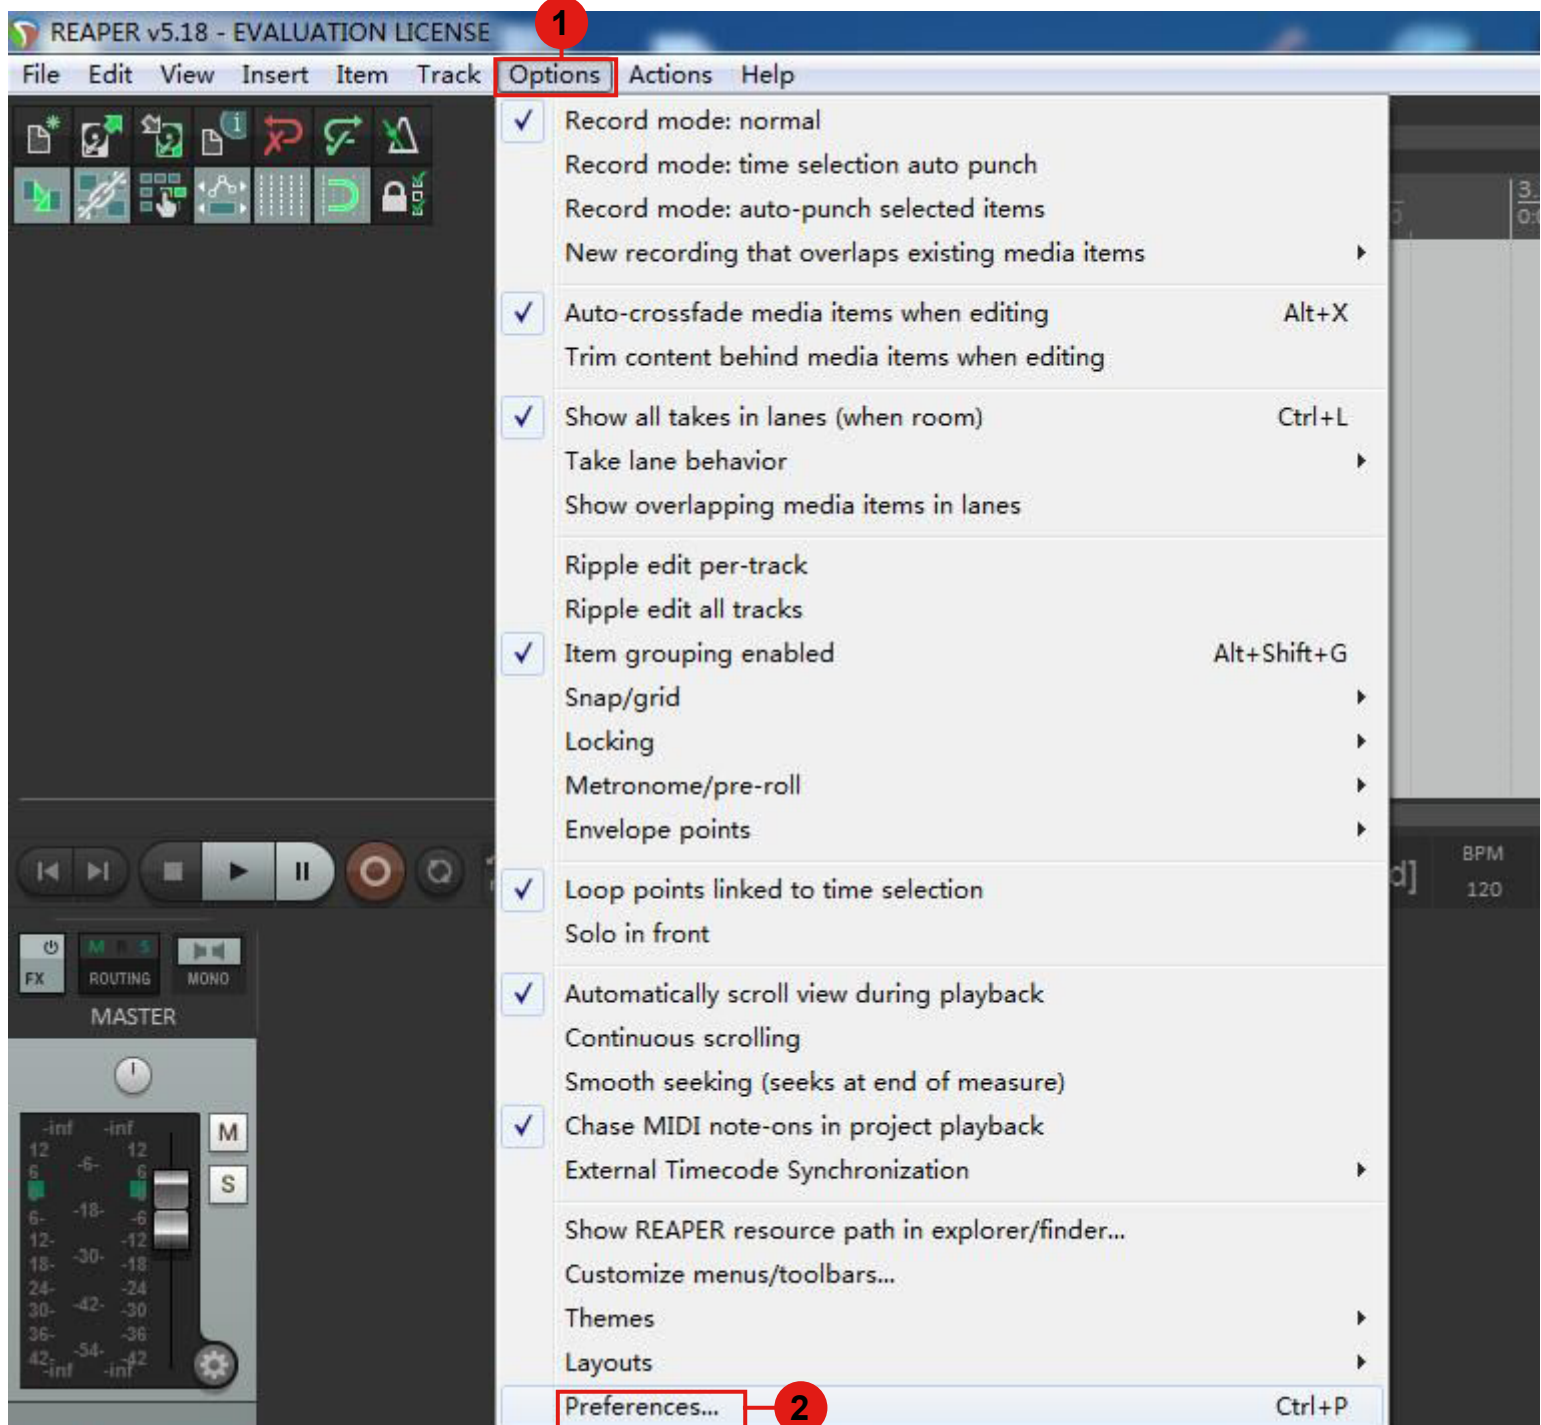



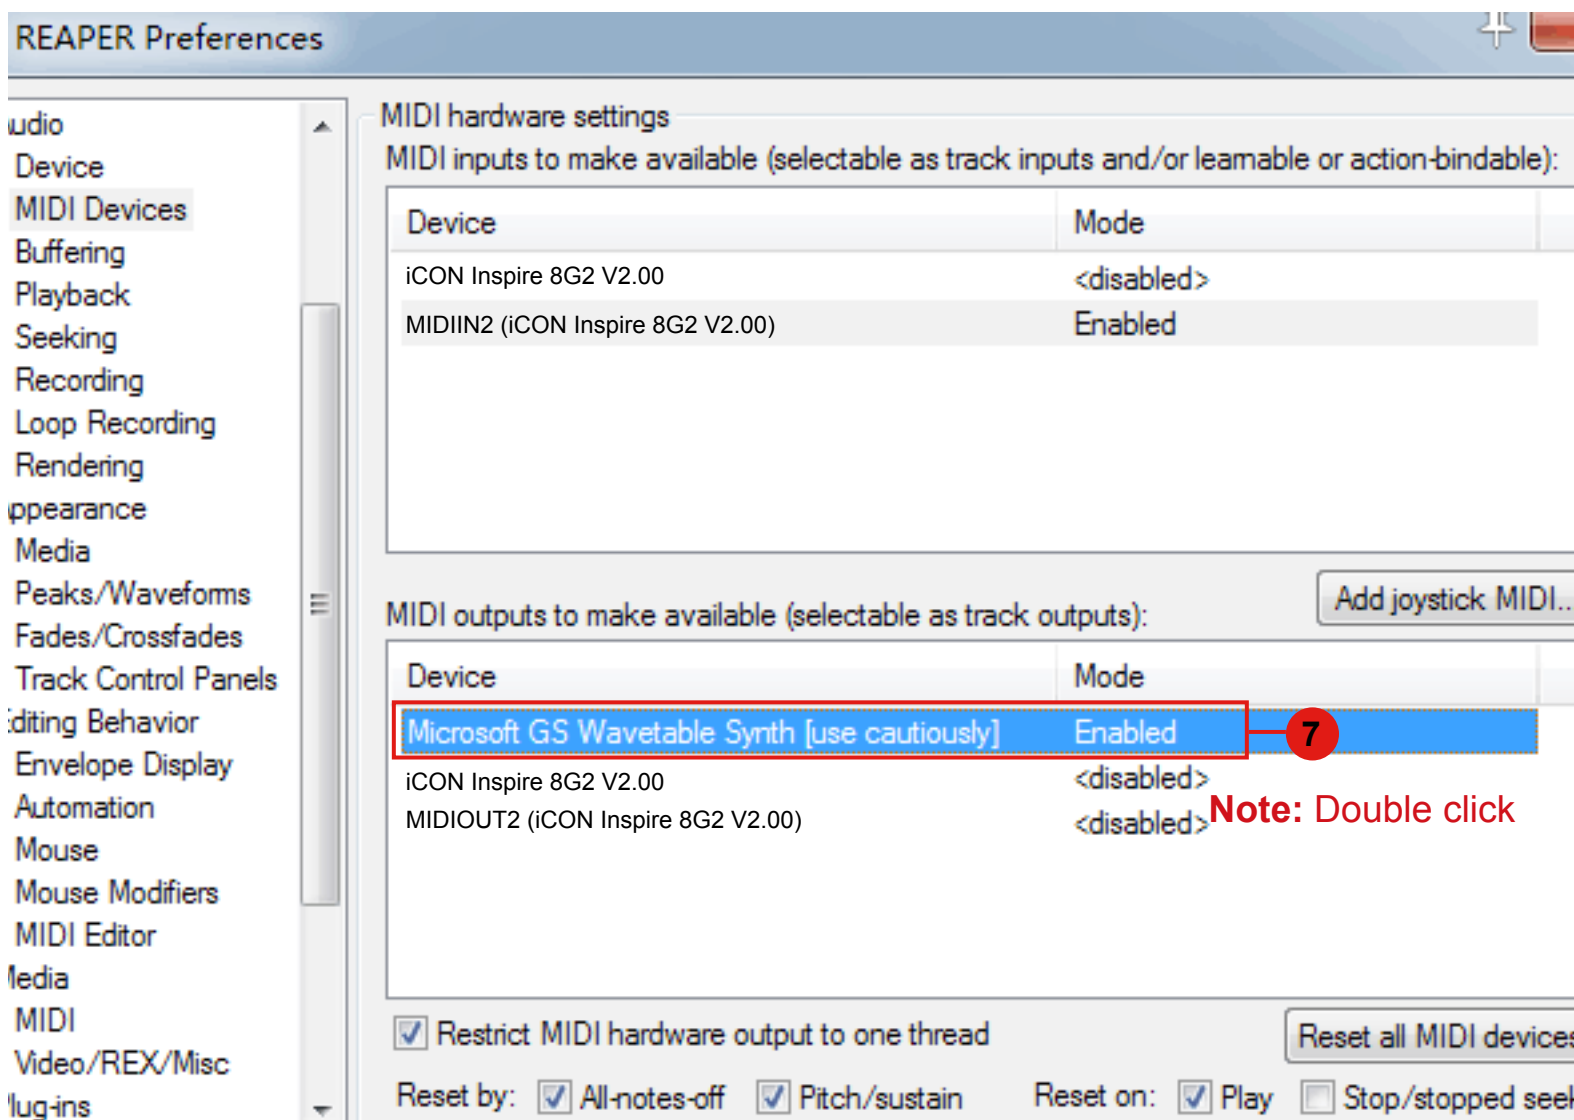
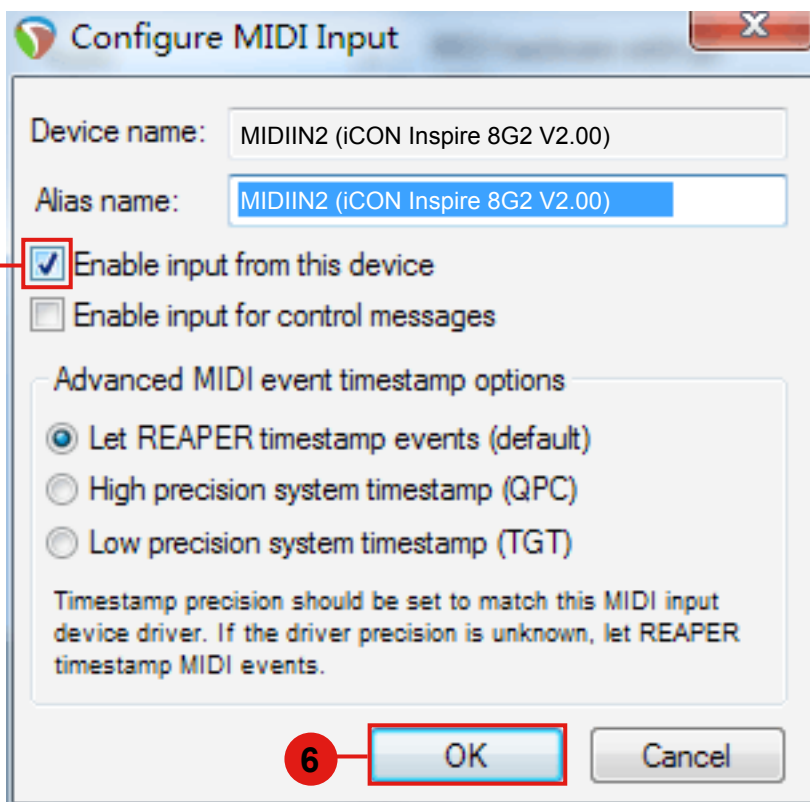


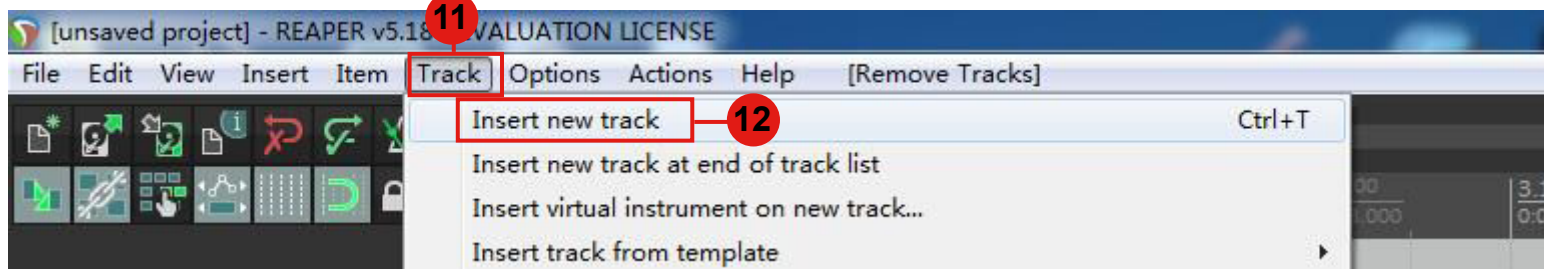
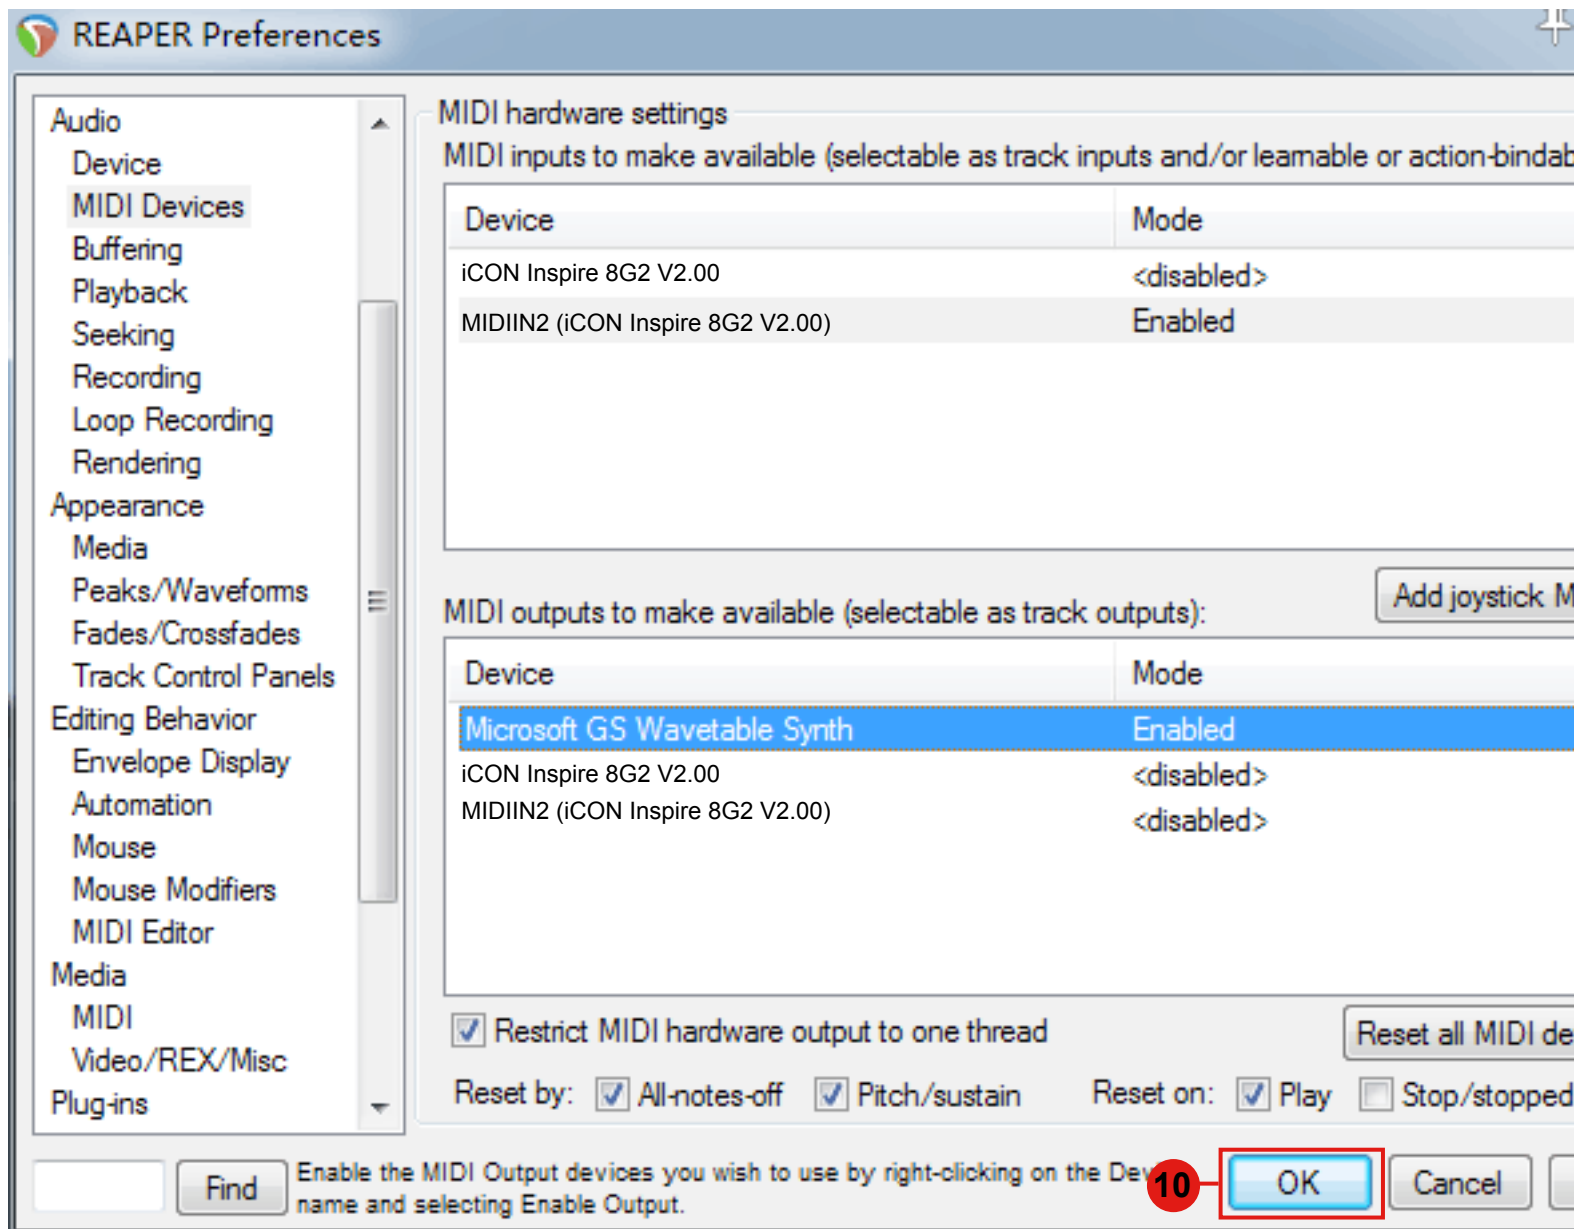
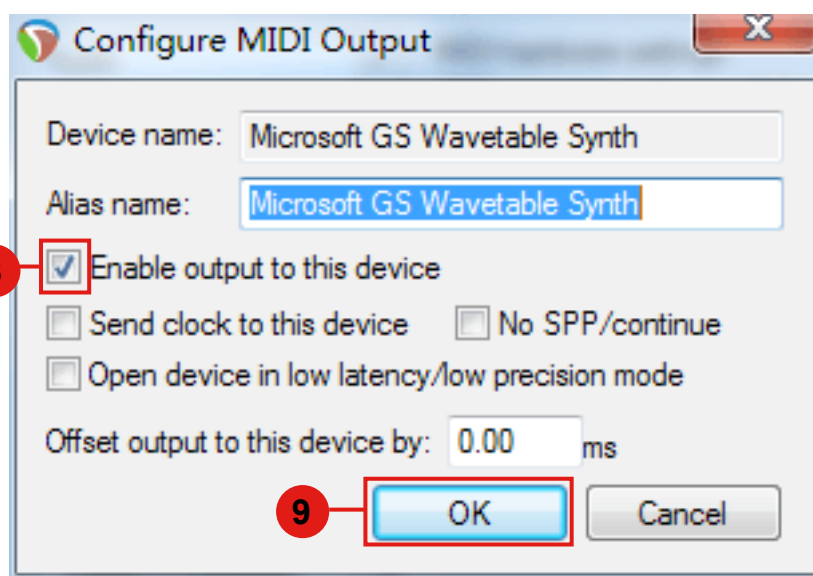


Setup for your Inspire 8G2 DrumPad instrument input section

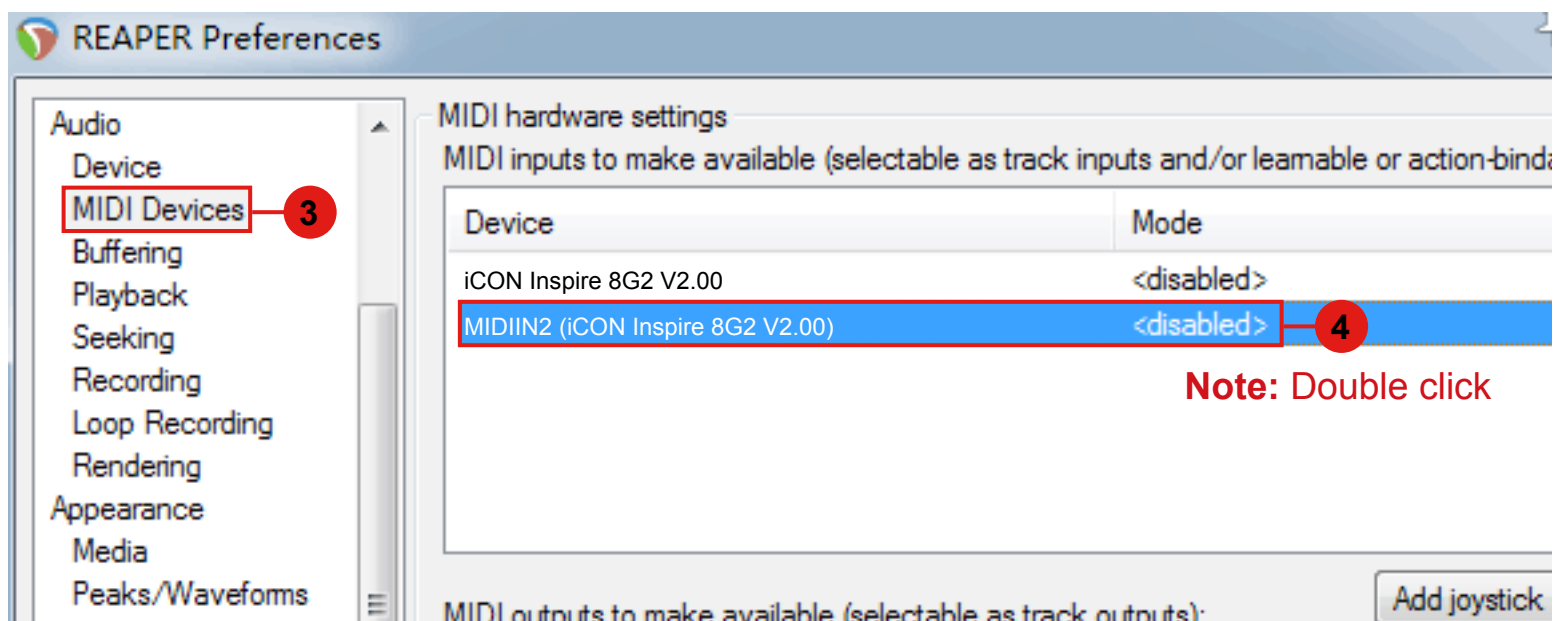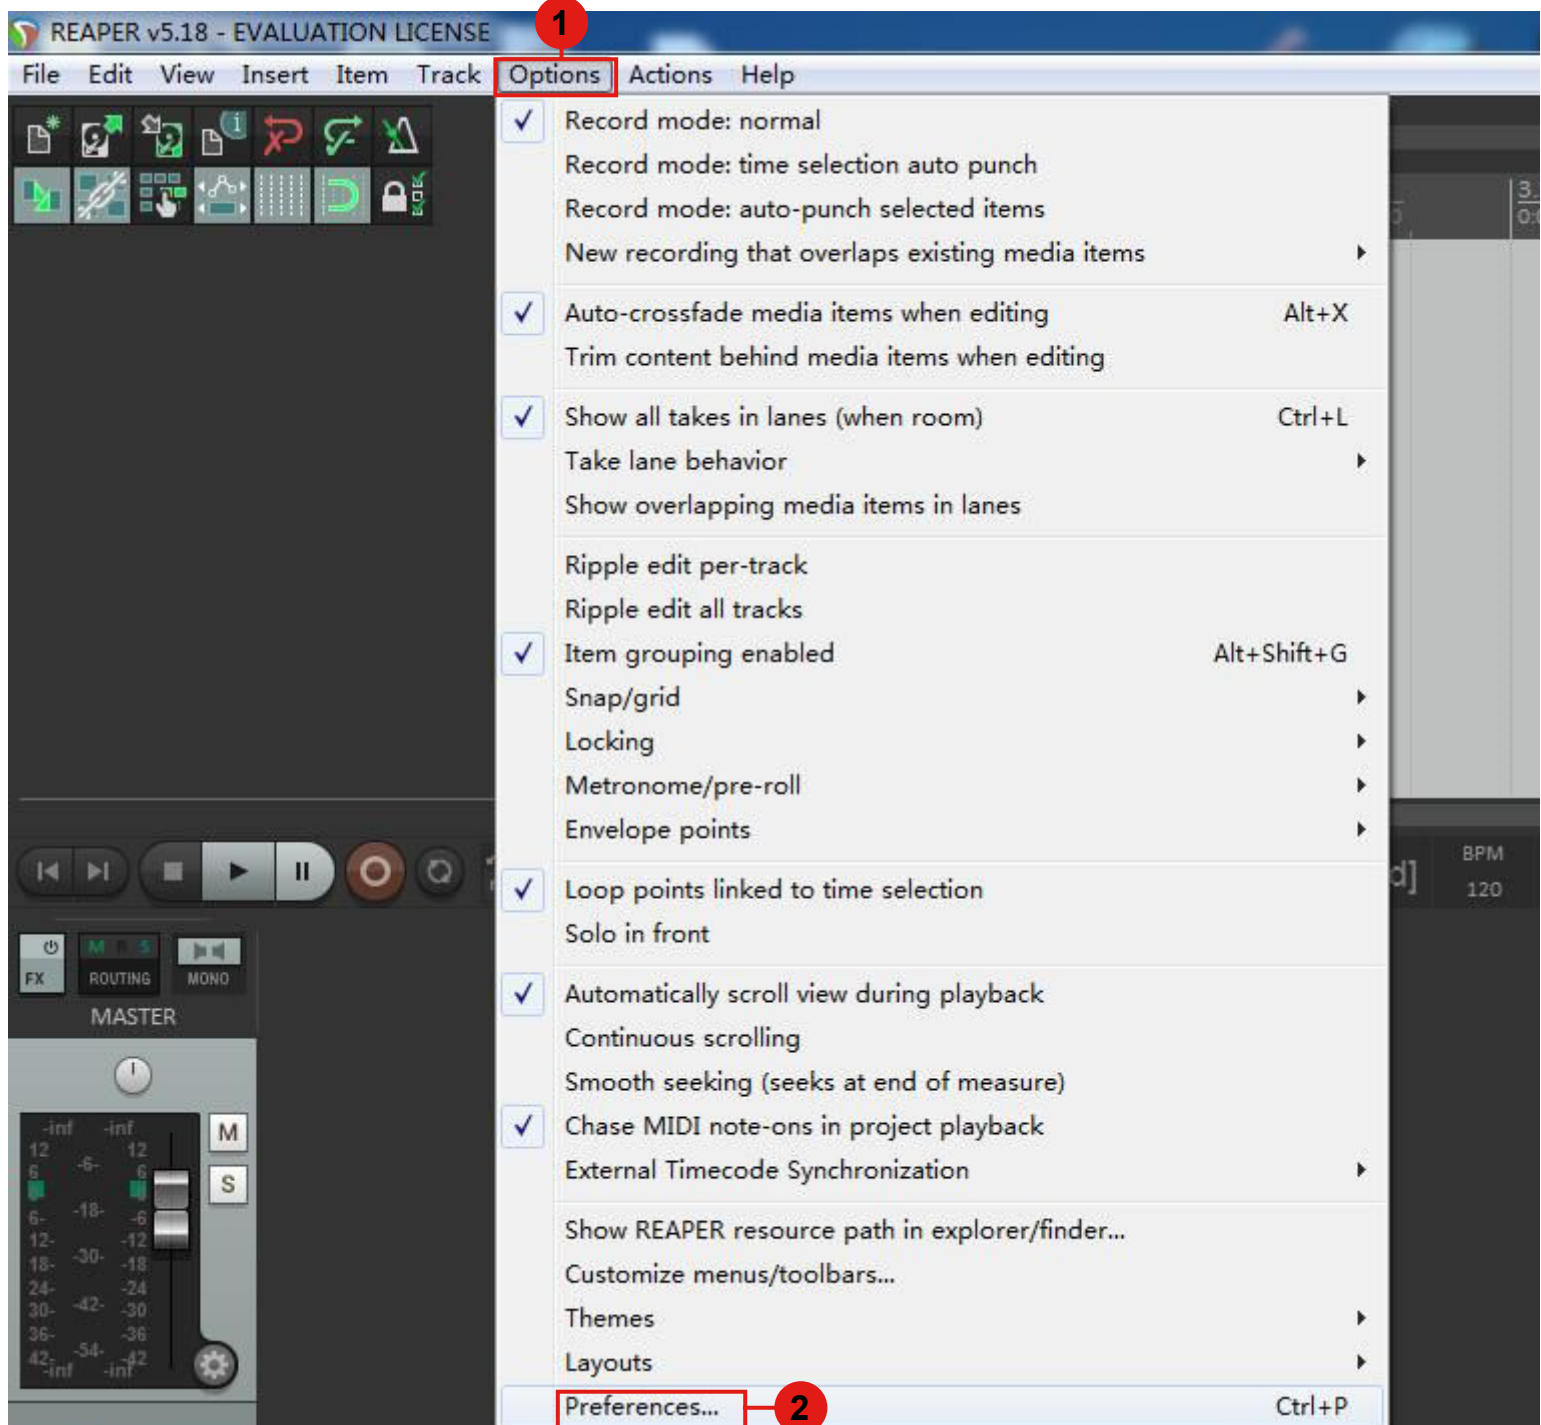

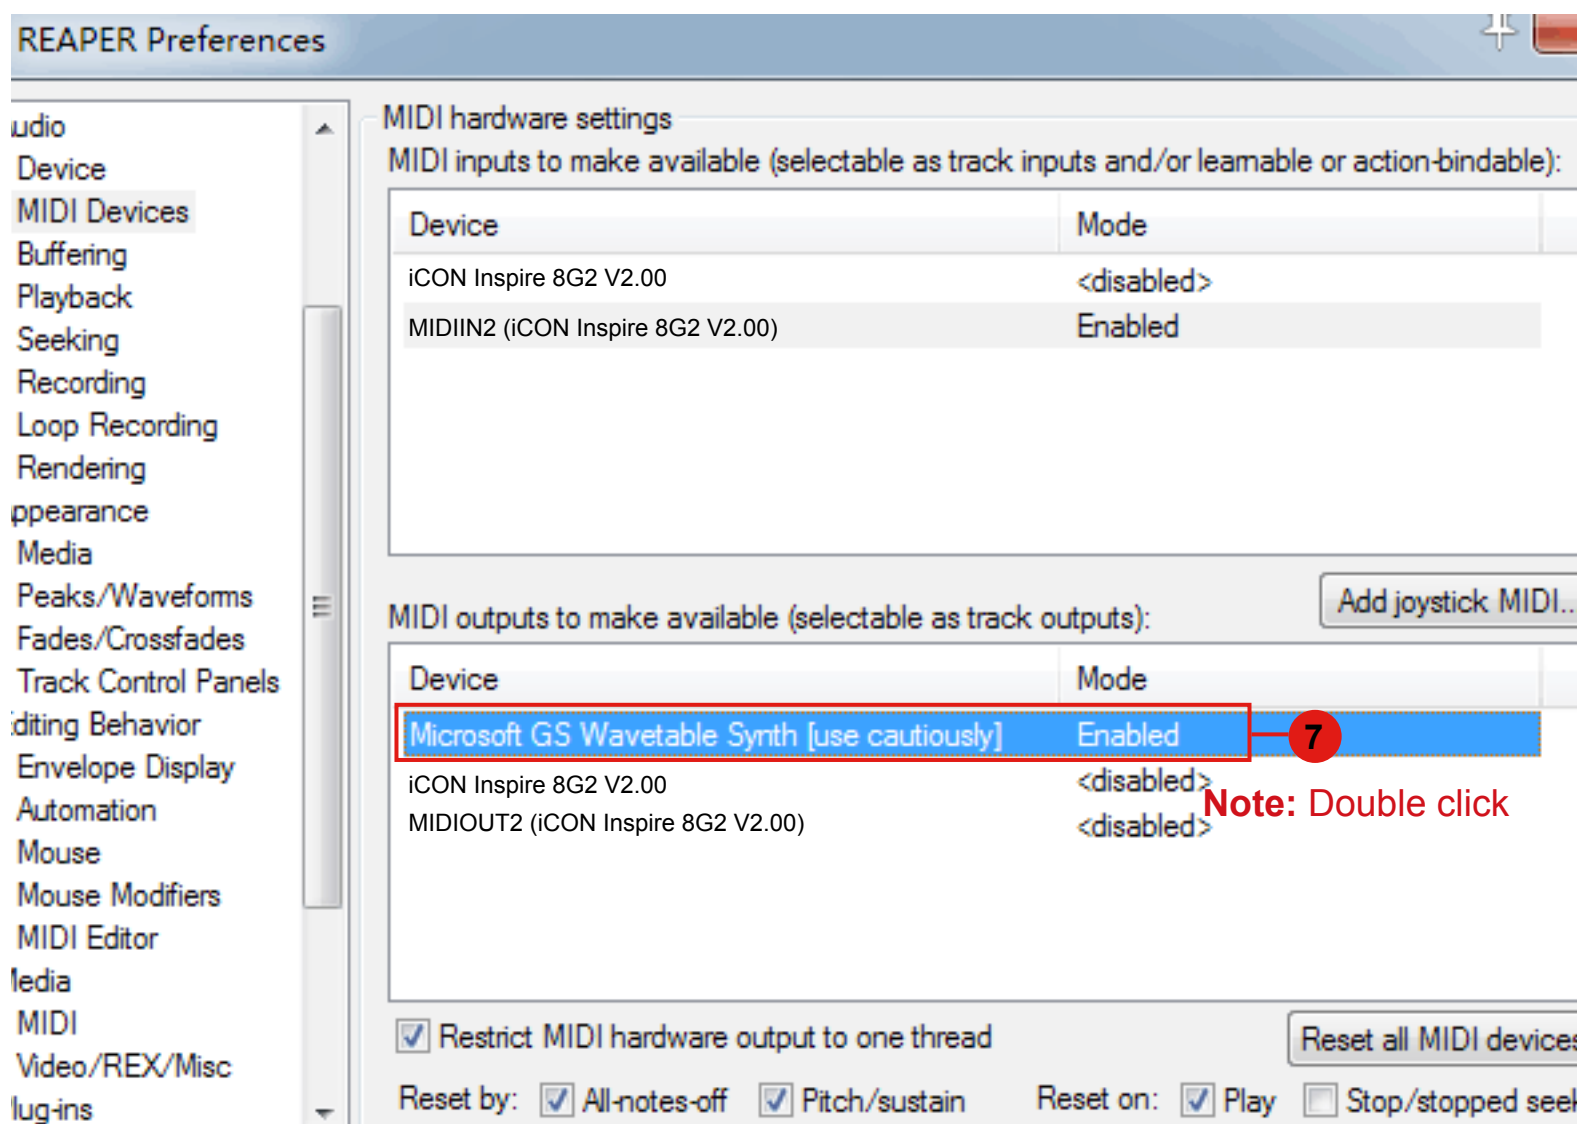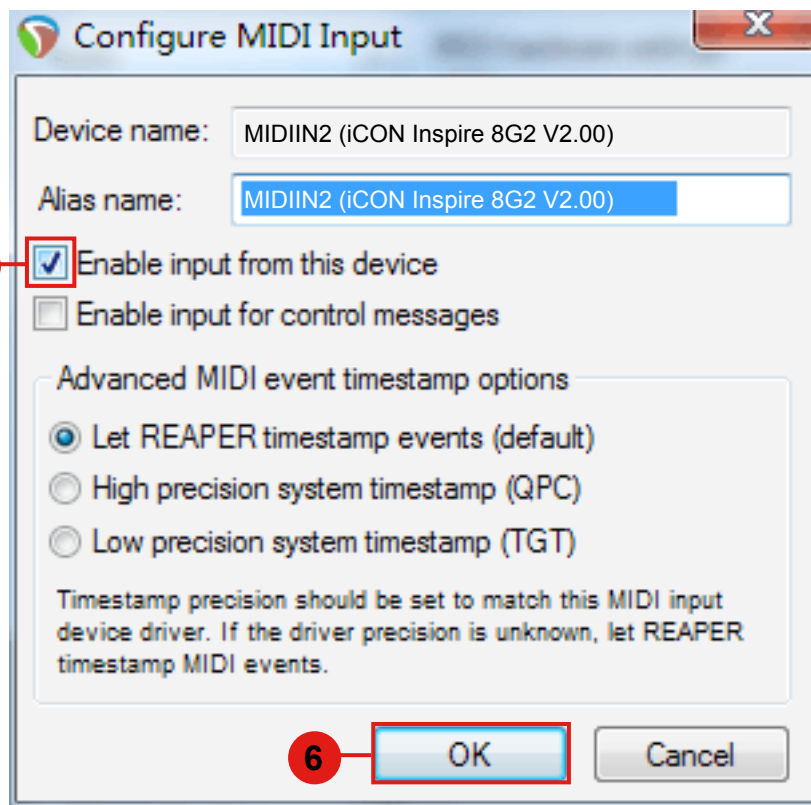

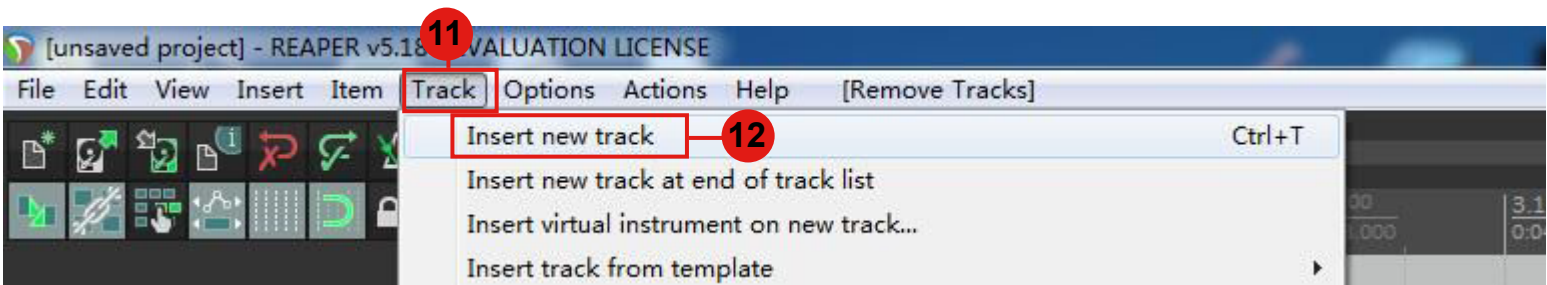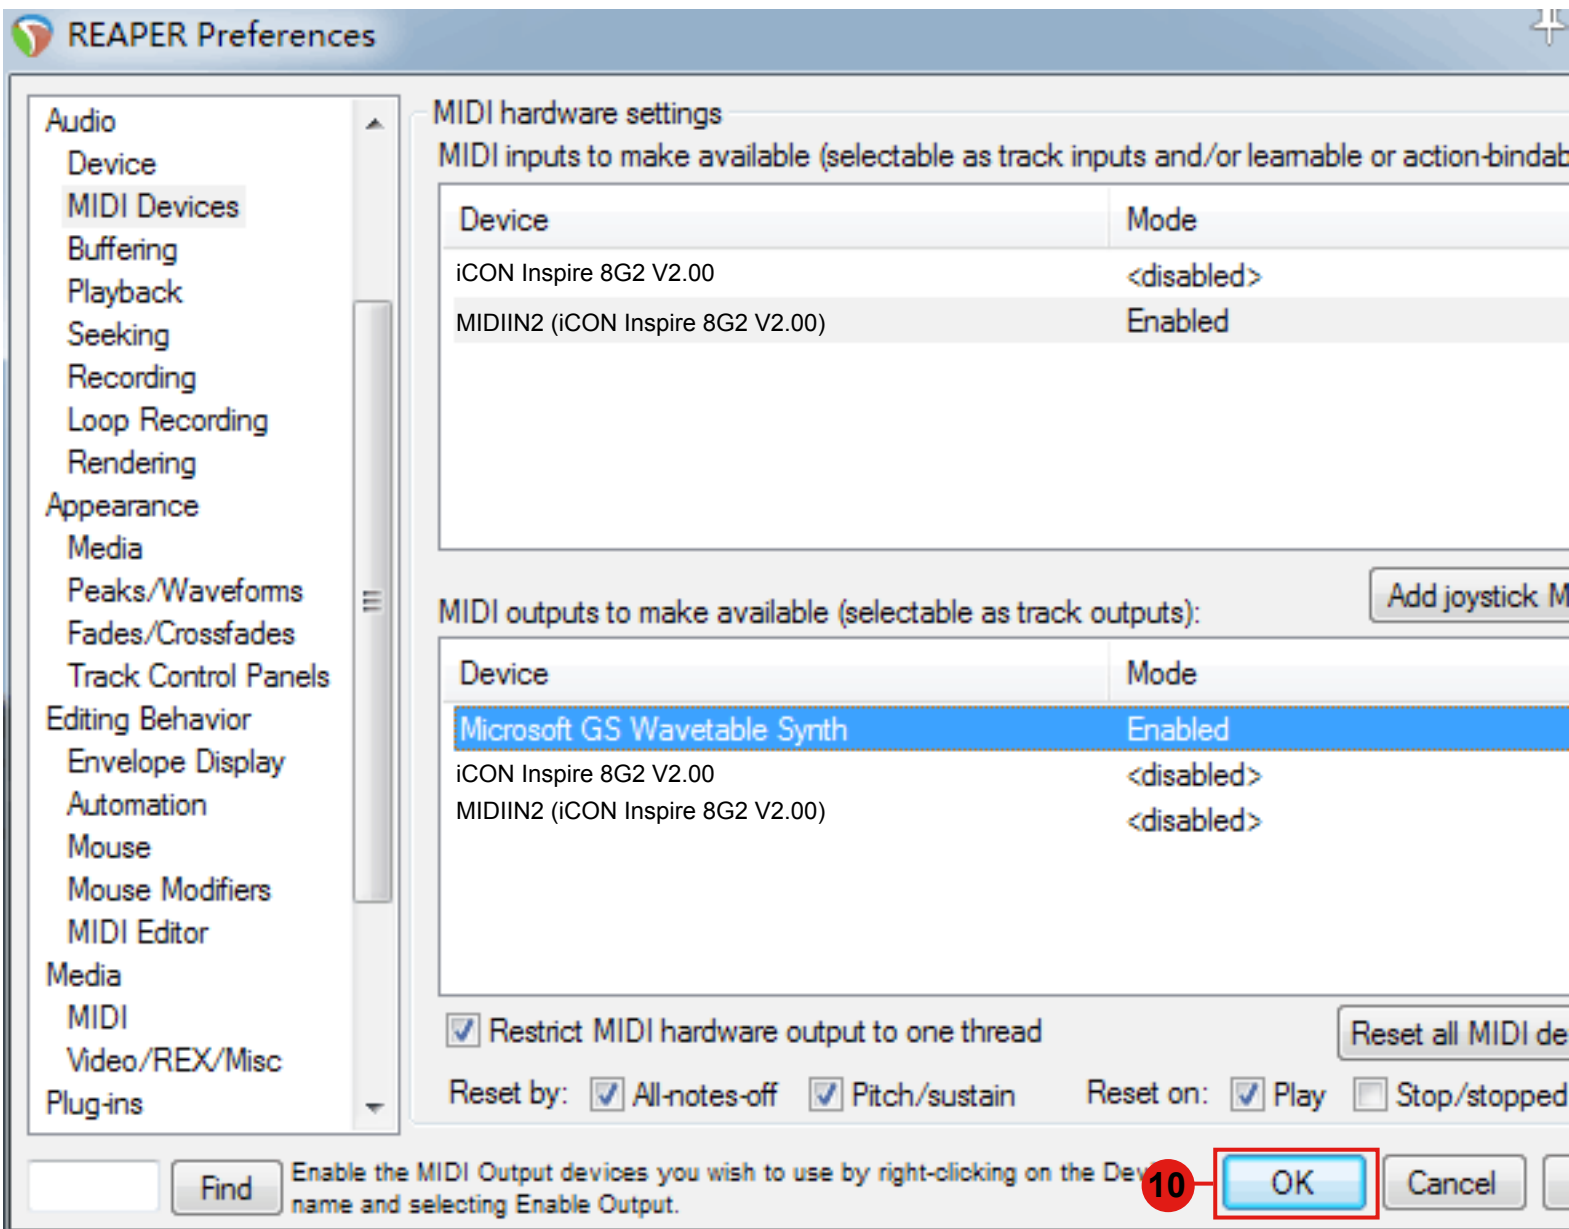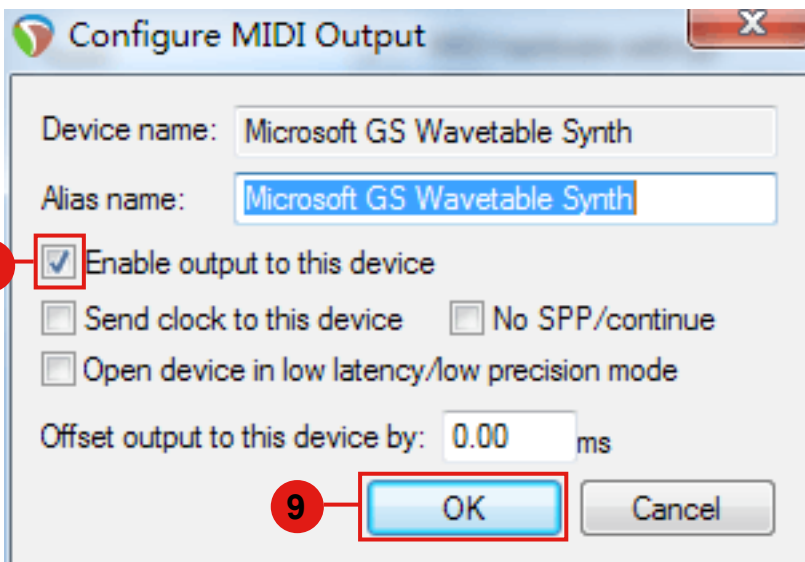

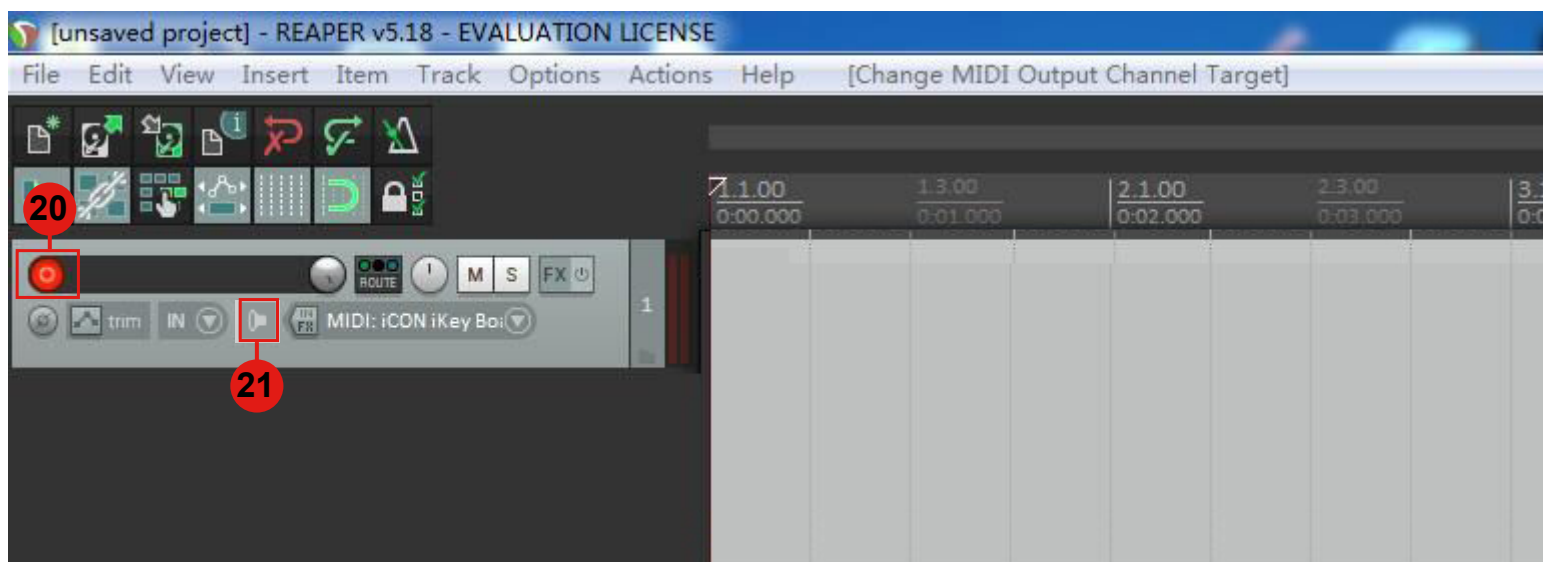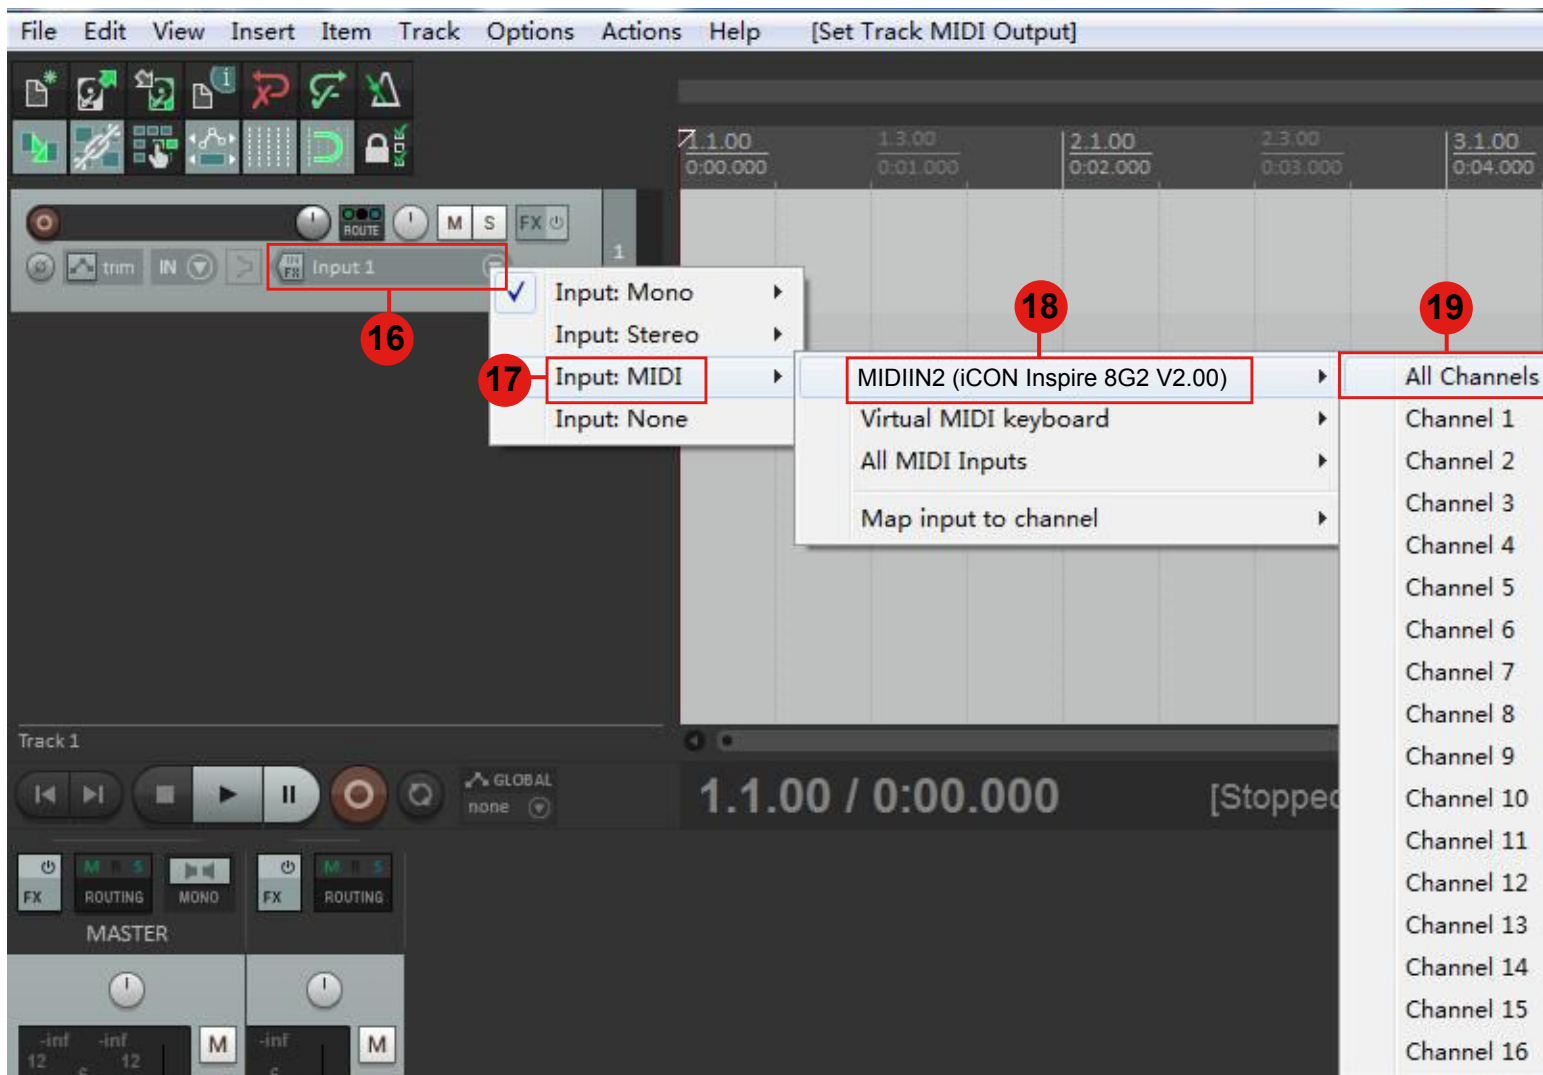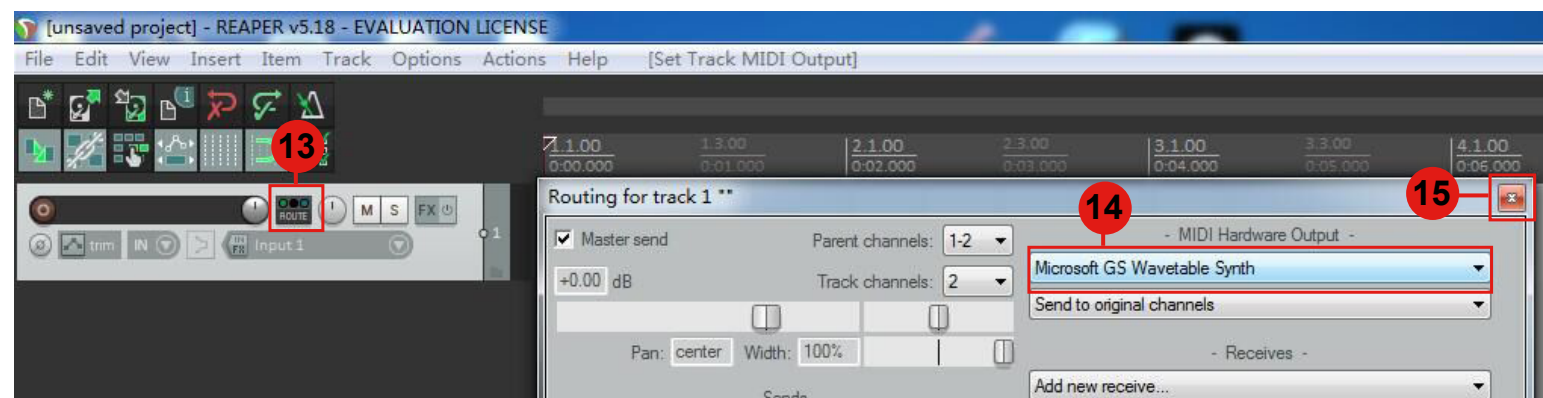

ItemTrackOptionsActionsHelp[Change MIDI Output Channel Target]

22

ROUTE

M

S

FX

MIDI: iCON iKey Boi

1.1.000.0001.3.000.0002.1.000.0002.3.000.0003.1.000.0003.3.000.0004.1.000.000

Routing for track 1 "

☒ Master send

12.00 dB

Pan: centerWidth: 100%

Add new send...

Parent channels: 1-2

Track channels: 2

- MIDI Hardware Output -

Microsoft GS Wavetable Synth

Send to channel 10

- 23 ives -

Add new receive...

- Sends -

Add new hardware output...

1.1.00 / 0:00.000

[Stopped]

BPM 1204/4Rate: 1.0