


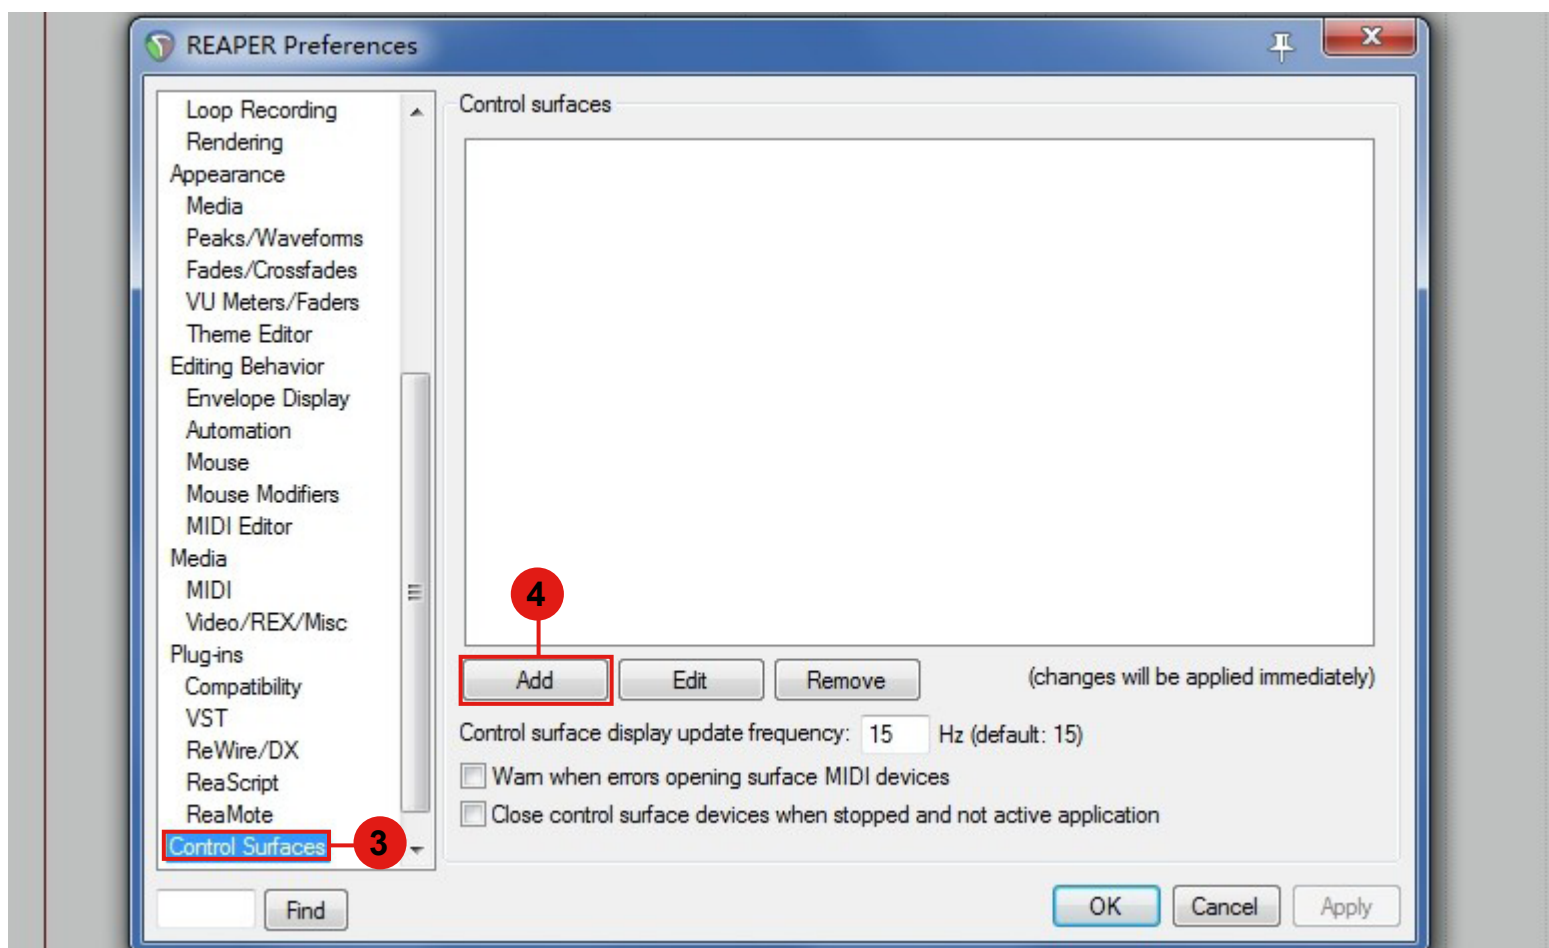
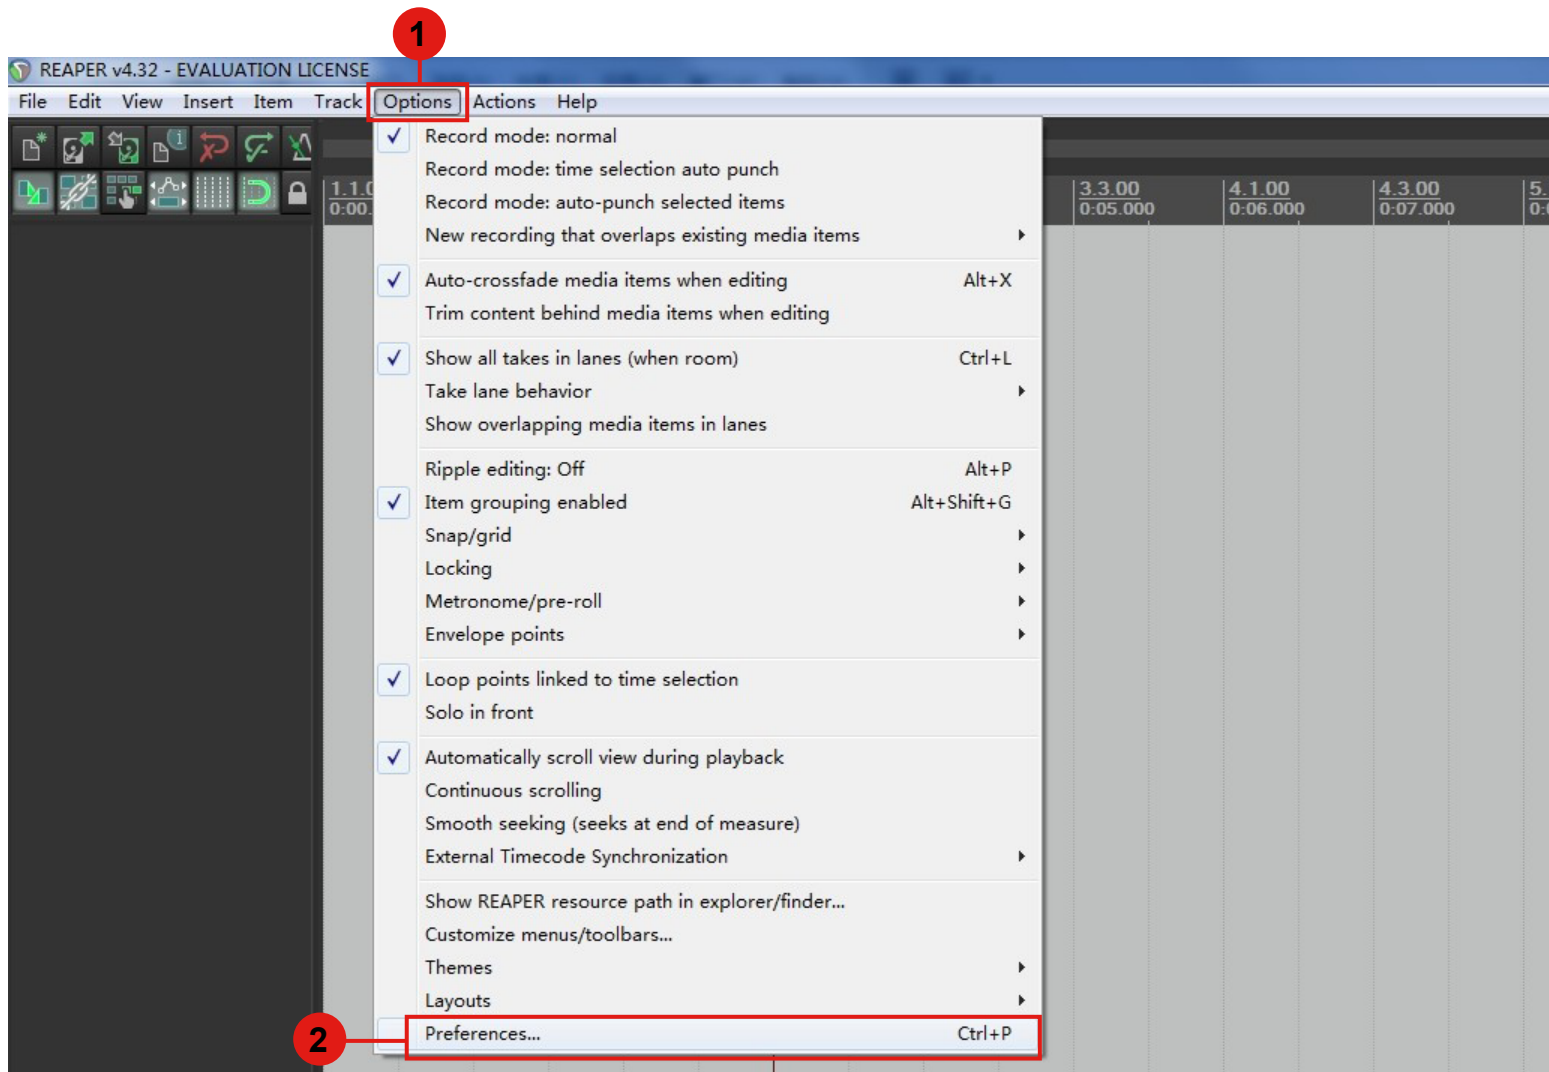




Setup up for your iConPad controller section



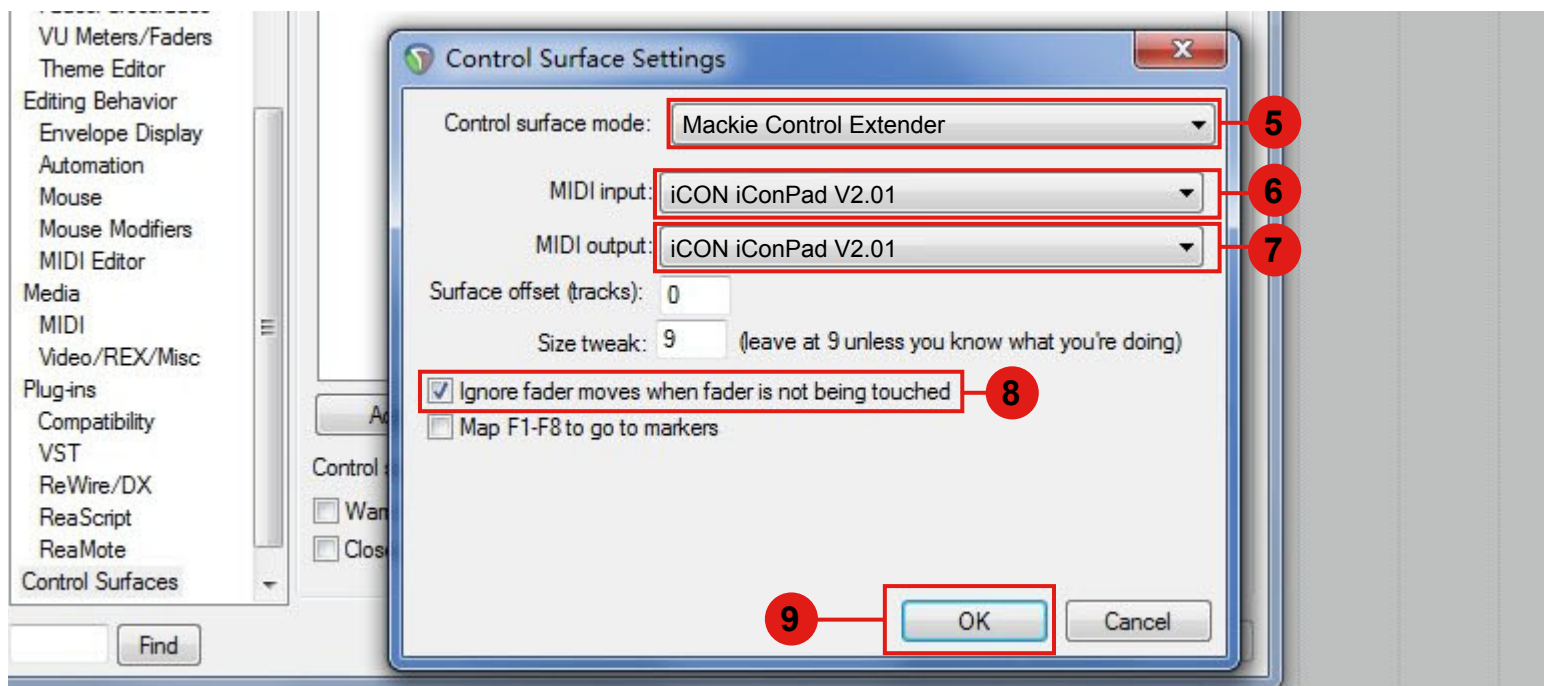




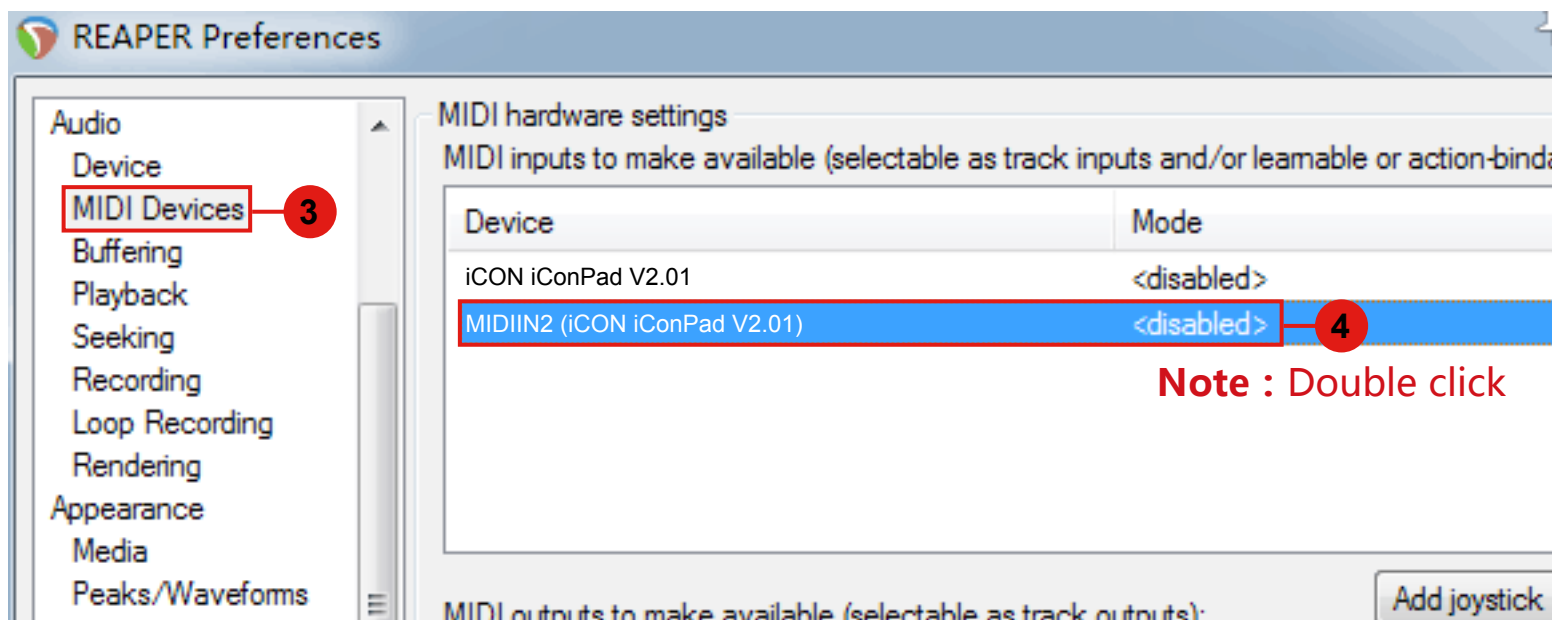


Setup for your iConPad DrumPad instrument input section

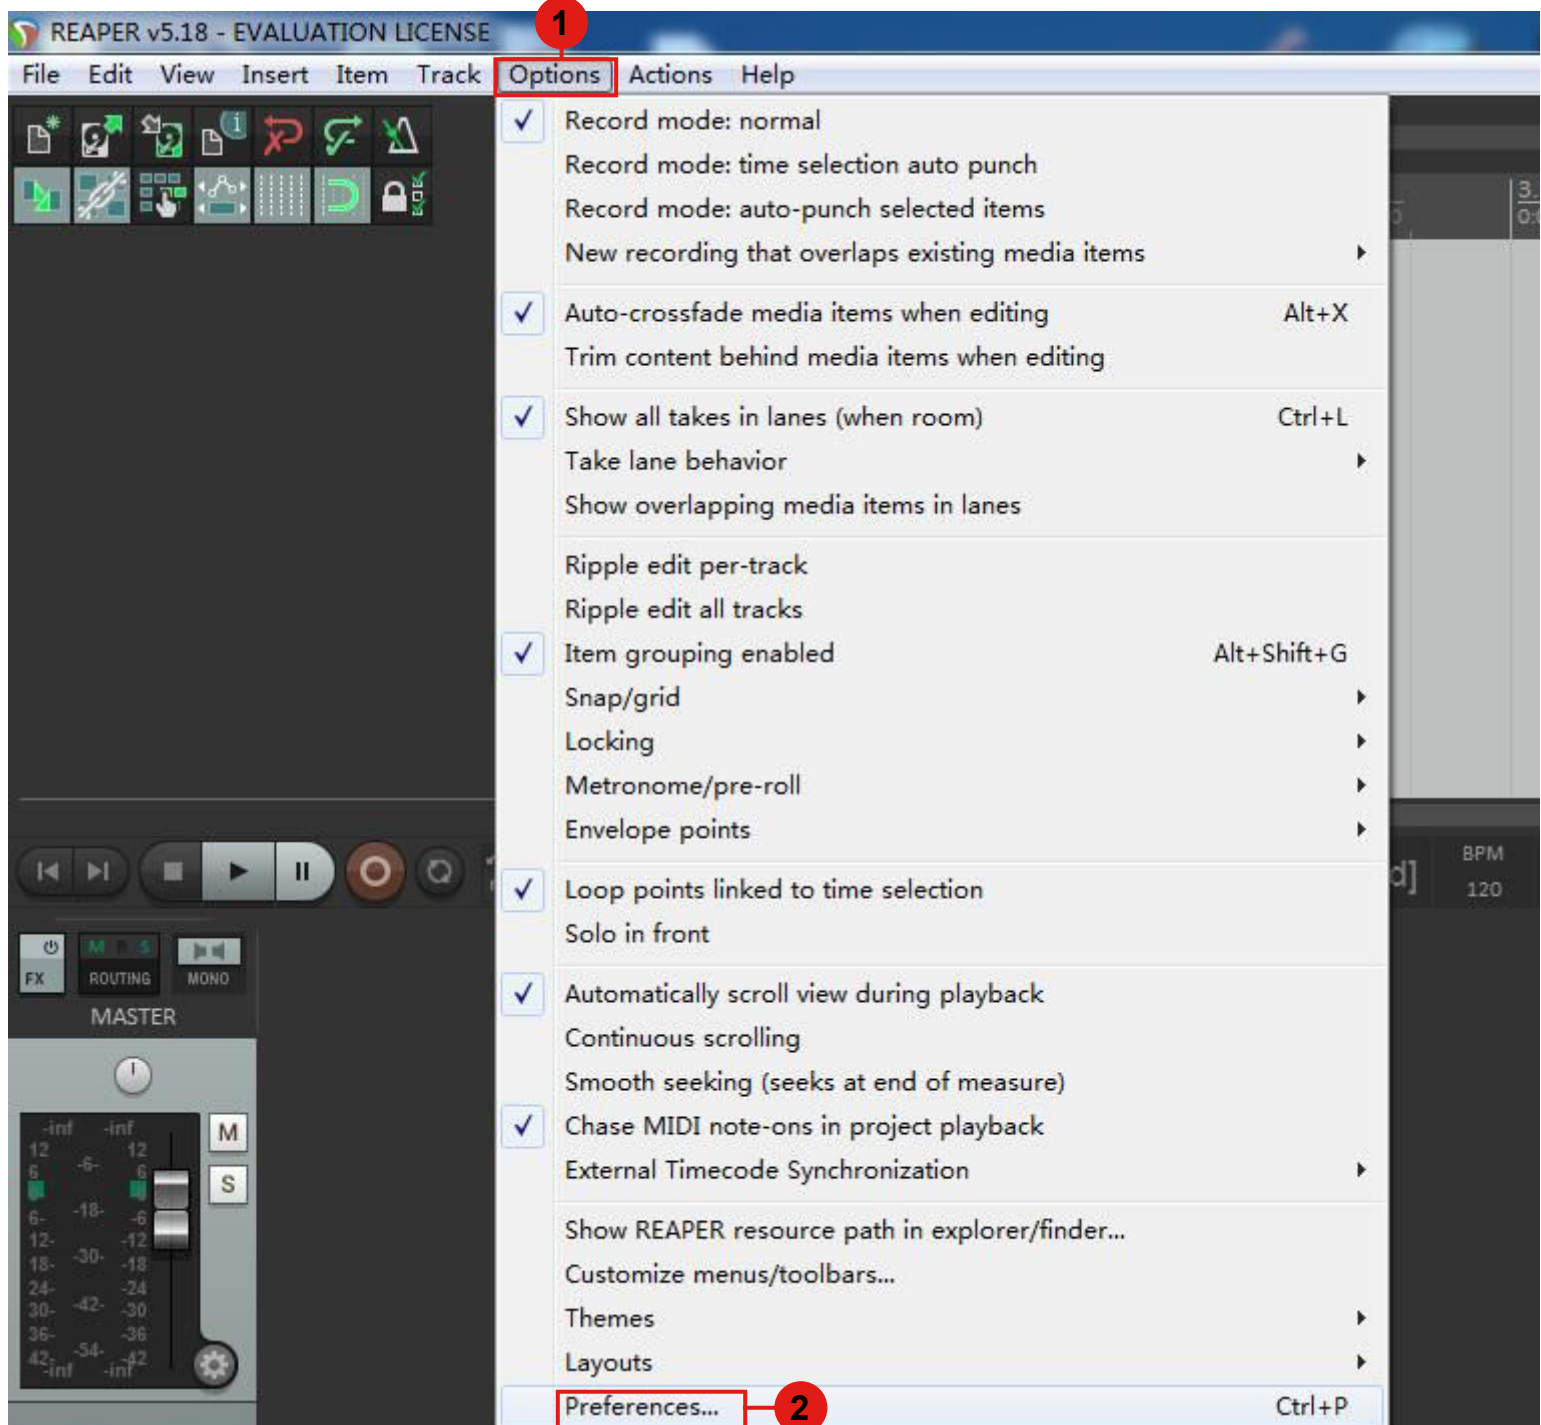

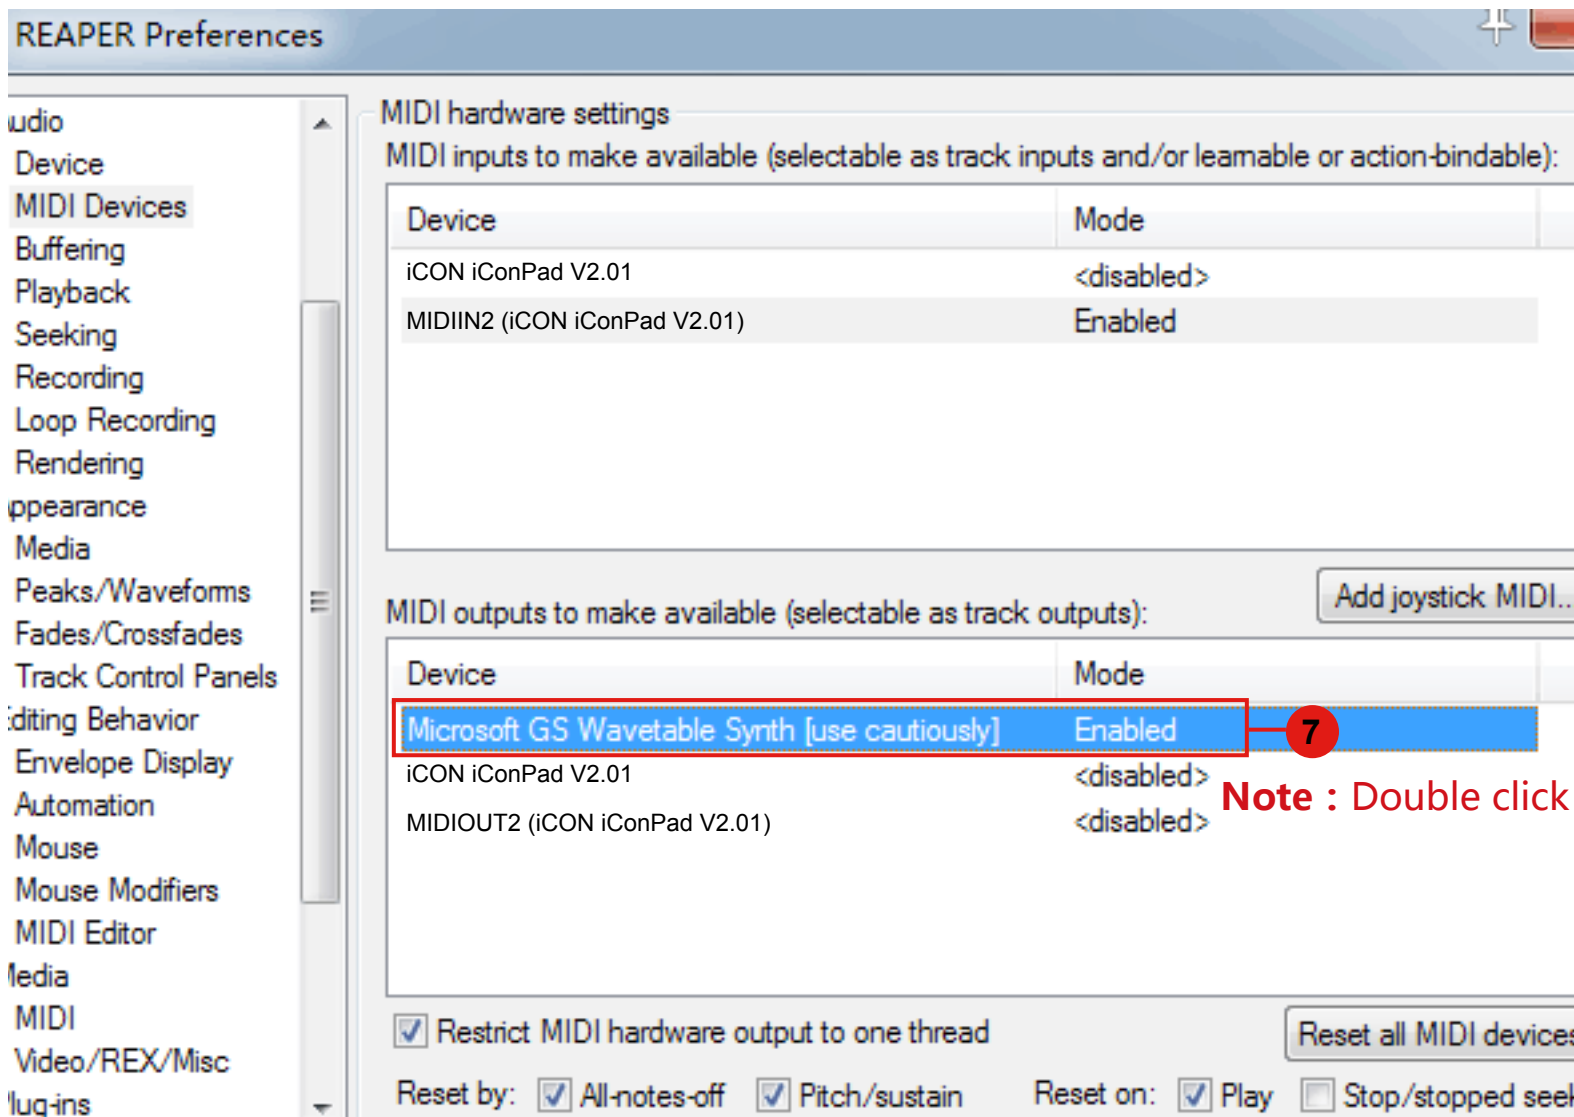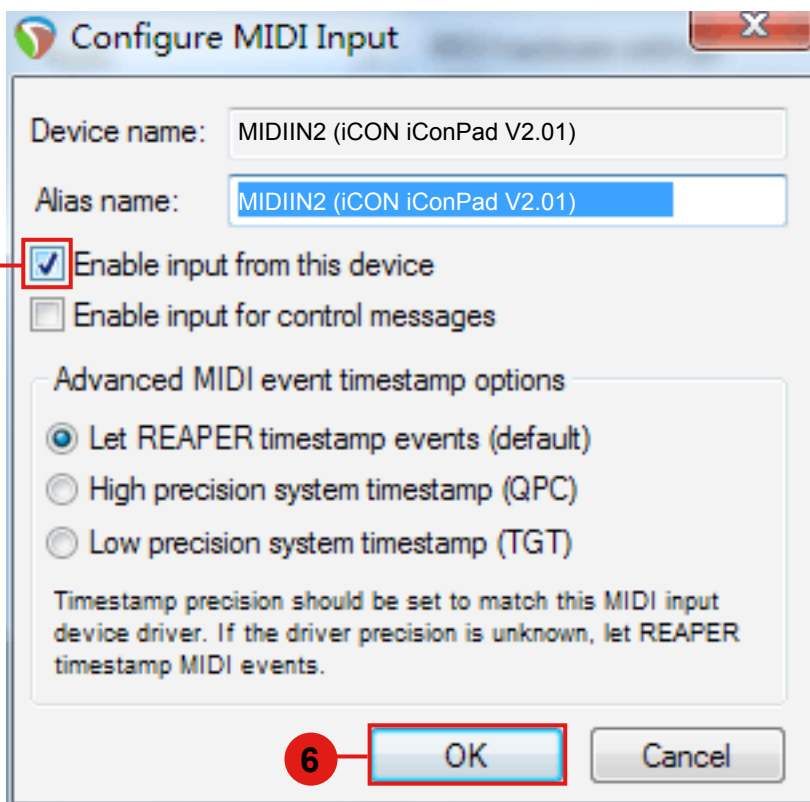

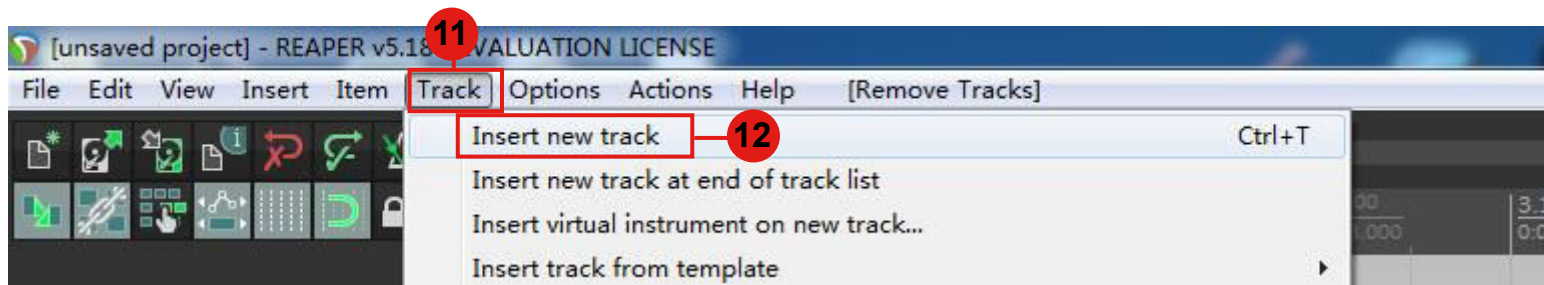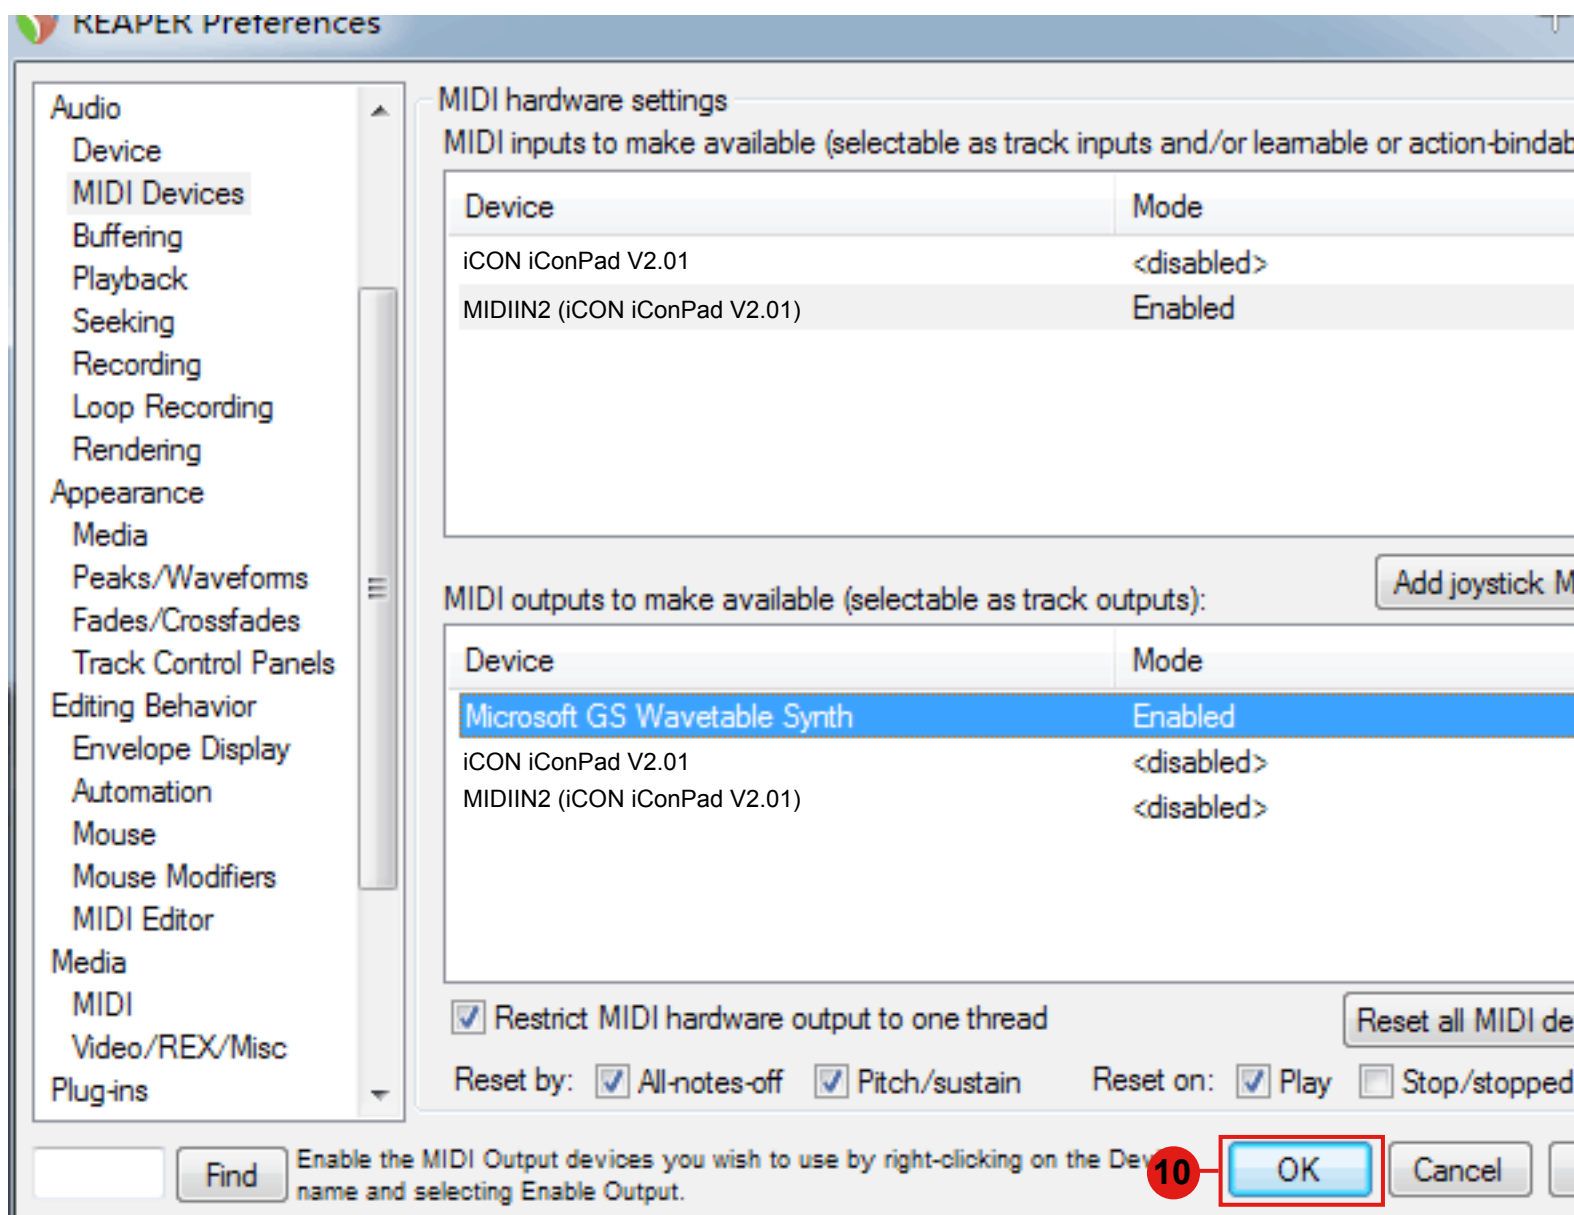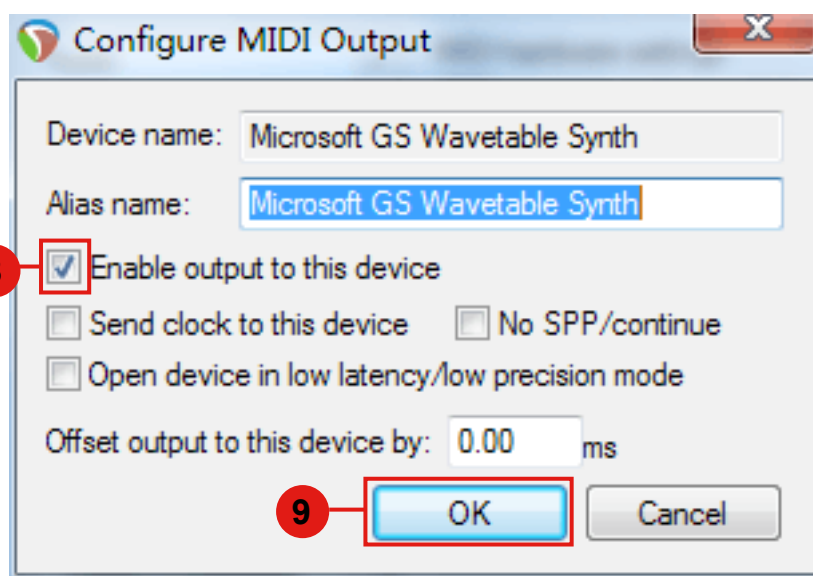

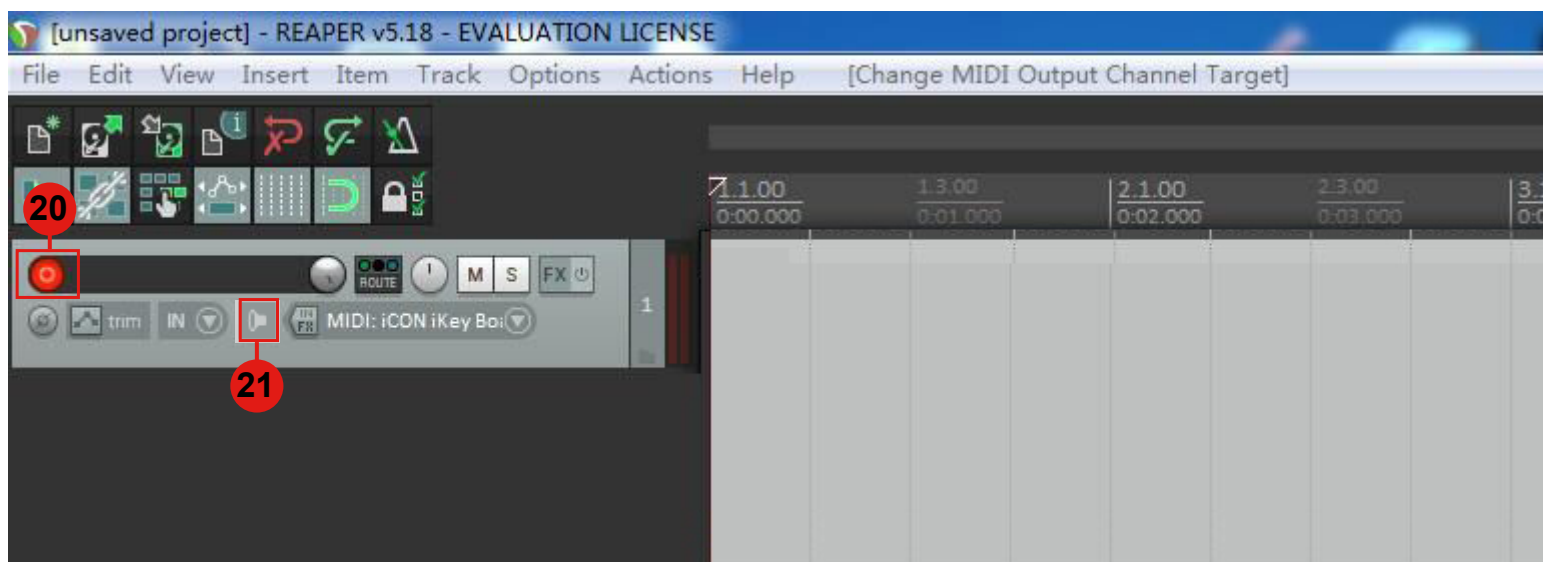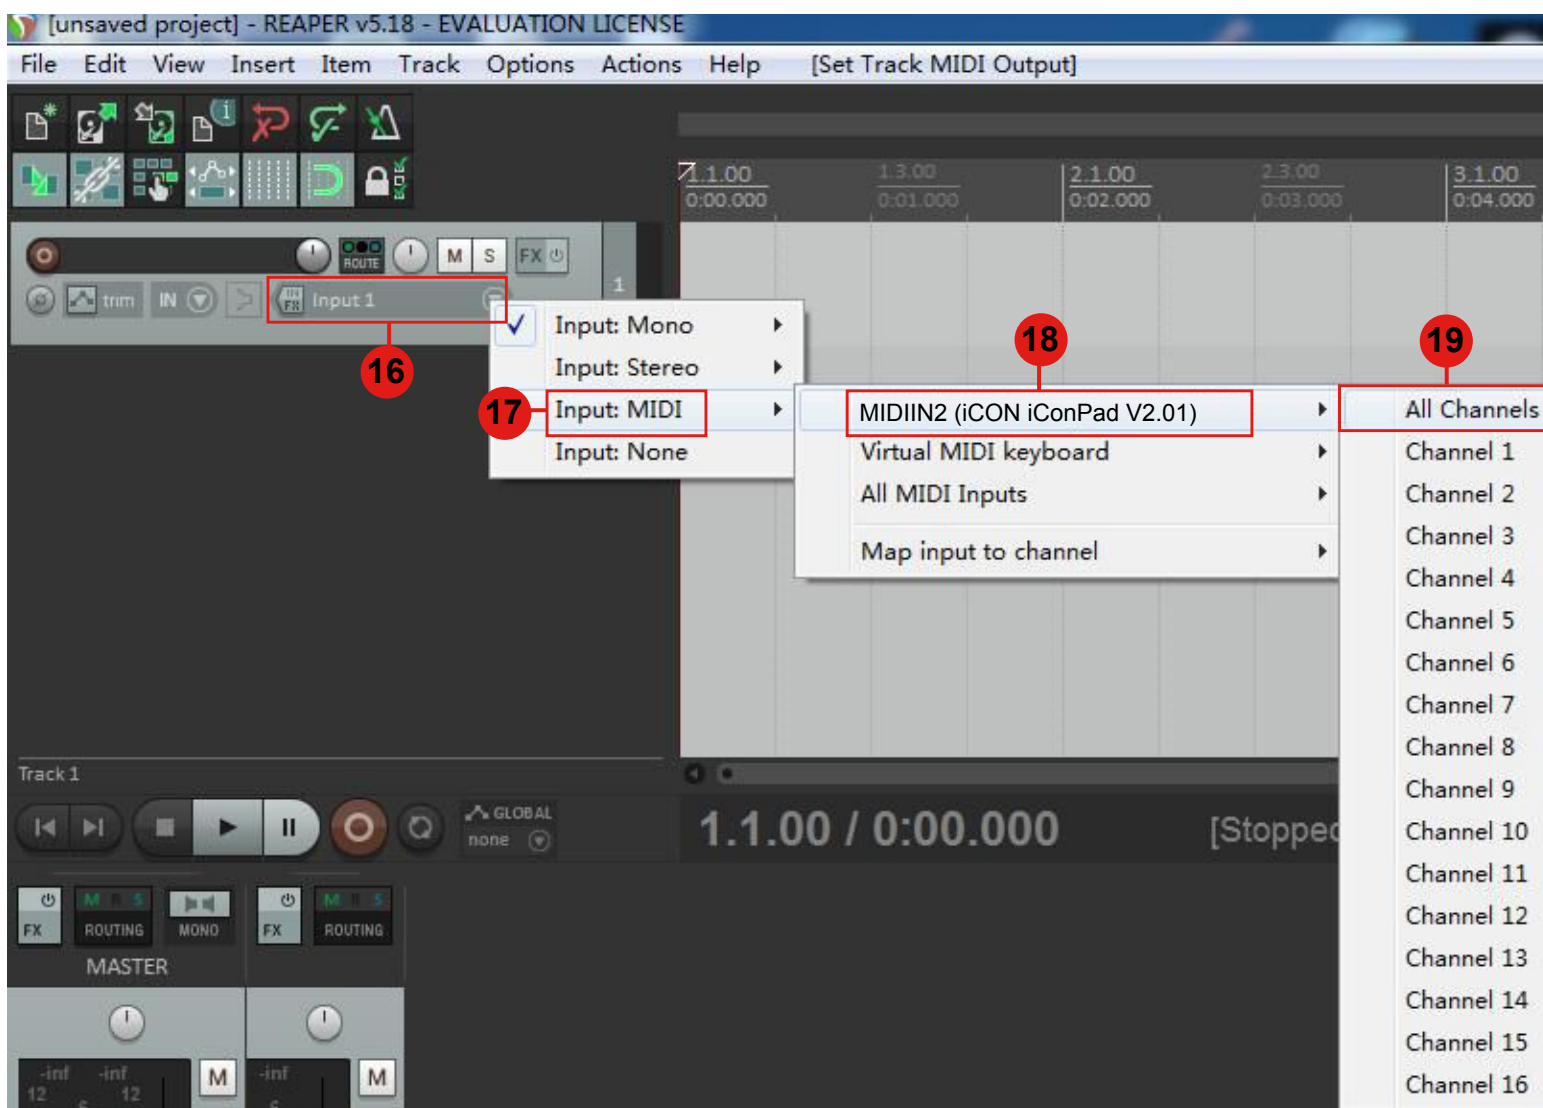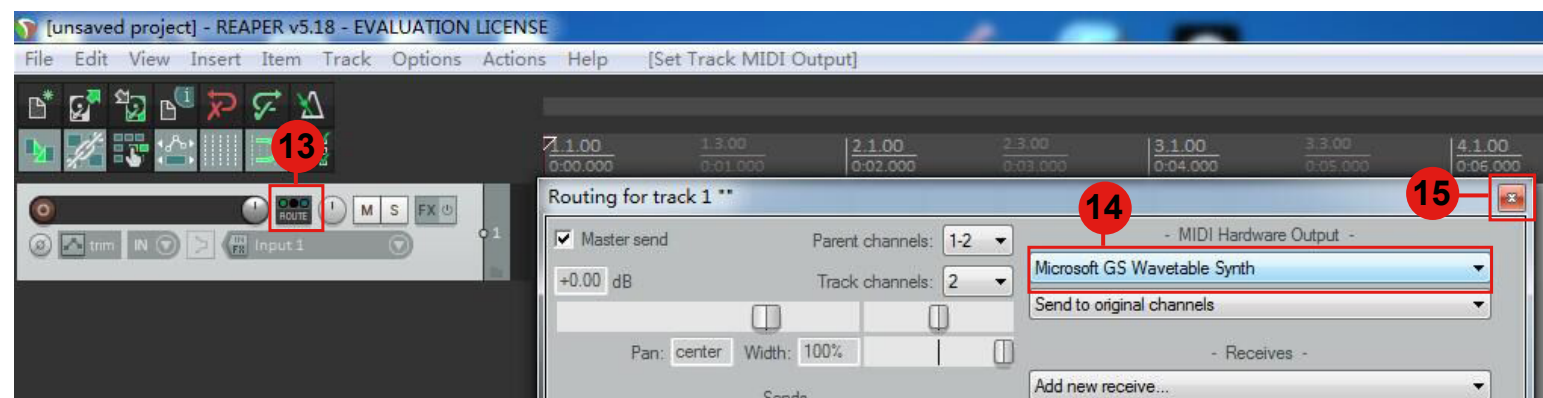

ItemTrackOptionsActionsHelp[Change MIDI Output Channel Target]

22

ROUTE

M

S

FX

MIDI: iCON iKey Boi

1.1.000.0001.3.000.0002.1.000.0002.3.000.0003.1.000.0003.3.000.0004.1.000.000

0:00.0000:01.0000:02.0000:03.0000:04.0000:05.0000:06.000

Routing for track 1

☒ Master send

Parent channels: 1-2

- MIDI Hardware Output -

12.00 dB

Track channels: 2

Microsoft GS Wavetable Synth

Pan: center

Width: 100%

Send to channel 10

- Sends -

Add new send...

- Audio Hardware Outputs -

Add new hardware output...

- Lives -

Add new receive...

1.1.00 / 0:00.000

[Stopped]

BPM 120

4/4

Rate: 1.0