

HDMI SWITCH USER MANUAL

MODELS 177290
177306 & 177313



Shown: Model 177313


MANHATTAN

MAN-177290/177306/177313-UM-0908-03

Thank you for purchasing this MANHATTAN® HDMI Switch, Model 177290 (3-port), Model 177306 (4-port) or Model 177313 (6-port).

 
By being able to select among multiple high-definition sources sharing a single display, you can keep devices connected and ready to use, eliminating the need to swap cables and thus reducing the risk of high-performance cable and port damage. Using this manual for reference, you'll soon be enjoying the benefits of these features:

- Maintains highest single-link resolutions for clear, sharp images up to 2.5 Gbps, 1080p or VGA (1920 x 1200)
- Full-function, infrared remote control
- Automatically detects and selects active HDMI source and routes to display (Model 177290 only)
- Lifetime Warranty

Package Contents

- HDMI Switch (Remote Control with Models 177306 & 177313 only)
- Power adapter (Models 177306 & 177313 only) and user manual

OPERATION



1. Using HDMI cable no longer than 25 m (approx. 80 ft.) on either side of the HDMI Switch, connect the HDMI input sources (for example, a pair of HDMI DVDs, as shown above) to the Input port(s) of the switch.
2. Connect your HDMI viewing device to the Output port of the switch.
3. Select an input/signal source by pressing the button on the switch that corresponds to the input port the desired device is connected to.

NOTE: Model 177290 features an “intelligent” function: If a connected input source is disconnected or turned off, the switch will automatically select the connected and powered-on device that follows in the input port sequence; for example, if the device connected to Input port 1 is turned off or disconnected, the switch will select the device connected to Input port 2. (Standby mode is read by the switch as still powered on.)

4. Insert a battery in the remote control (Models 177306 & 177313).

Operation Tips

- Always connect and remove cables gently to prevent damage.
- If using HDMI cable longer than 5 m (approx. 16 ft.), use a power adapter (included with Models 177306 & 177313) and connect the switch to an A/C outlet.
- If the switch's Power LED doesn't light, check that the switch is on.
- If there is no video display:
 - check that the display unit is turned on;
 - confirm that all cables are properly connected.
- If there is no audio:
 - check the display device volume;
 - turn off, then turn back on the HDMI source(s) and the HDMI Switch.
- If the remote control doesn't work, replace the battery.
- If a DVI device doesn't work, make sure that it's HDCP-compliant.

SPECIFICATIONS

Standards & Certifications

- HDMI 1.3b, HDCP 1.0 / 1.1, DVI 1.0, CE, FCC, UL

Connections

- 1 HDMI female (output)
- 2, 3 or 5 HDMI female (input)
- Power adapter (Models 177306 & 177313 only): 5 V DC / 2 A; cable, 1.2 m (4 ft.)

Signal Input/Output

- Input video signal: 0.5 – 1.0 V p-p
- Input DDC signal: 5 V p-p (TTL)
- Max. single-link range: 2.5 Gbps, 1920 x 1200 and 1080p resolution
- Output video: HDMI 1.3b, HDCP 1.0 / 1.1, DVI 1.0
- Frequency: 2.25 Gbps / 250 MHz
- Source-to-switch range: 1080p, up

to 20 m (65 ft.)

- Switch-to-display range: 1080p, up to 15 m (50 ft.)

Video Resolutions

- VGA: 640 x 480, 800 x 600, 1024 x 768, 1920 x 1200
- DTW/HDTV: 480i/480p/576i/576p/720p/1080i/1080p

Physical

- Model 177290:
 - 86 x 44 x 16 mm (3.4 x 1.7 x 0.6 in.)
 - Weight: 42 g (1.5 oz.)
- Model 177306:
 - 160 x 68 x 19 mm (6.3 x 2.7 x 0.75 in.)
 - Weight: 138 g (4.8 oz.)
- Model 177313:
 - 192 x 98.8 x 26 mm (7.5 x 3.9 x 1 in.)
 - Weight: 250 g (8.8 oz.)



MANHATTANTM

BRINGING COMPUTERS TO LIFE

MANHATTAN[®] offers a complete line
of PC Components, Peripherals, Cables and Accessories.

Ask your local computer dealer for more information
or visit us online at

www.manhattan-products.com

Copyright © MANHATTAN

All products mentioned are trademarks or registered trademarks of their respective owners.