



INTELLINET 500012 NAS Quick Installation

1. Packing Contents

- One Network attached system with the Main Board and FAN.
- One RJ45 Cable.
- One Parallel ATA IDE Cable for Hard Disk Only
- One Power Code for Hard Disk Only
- One Power Adapter 12VDC, output 1.7A.
- One Power Cord.
- One Installation CD (Manual on CD).
- One Quick Installed Guide (QIG).

Note: Using a power supply with a different voltage rating than the one included with the Network Attached Storage will cause damage and void the warranty for this product. If any of the above items is missing, please contact your reseller.

2.Default Setting

 
Name	Default Setting
User name	admin
Password	admin
Profile	1
Profile Name	Conference
Wired Mode	Use The IP Below
IP Address	192.168.0.1
Subnet Mask	255.255.255.0
DHCP Server	Yes
Start client IP Address	192.168.0.2
End client IP Address	192.168.0.254
Share Password	rw

Before you start

Everything you need to boot this system is included in this Quick Installation Guide. For more information, a complete Online User's Manual can be found in the Bonus Pack CD Disc.

3.System Installation.


3.1. HD tray installation guide

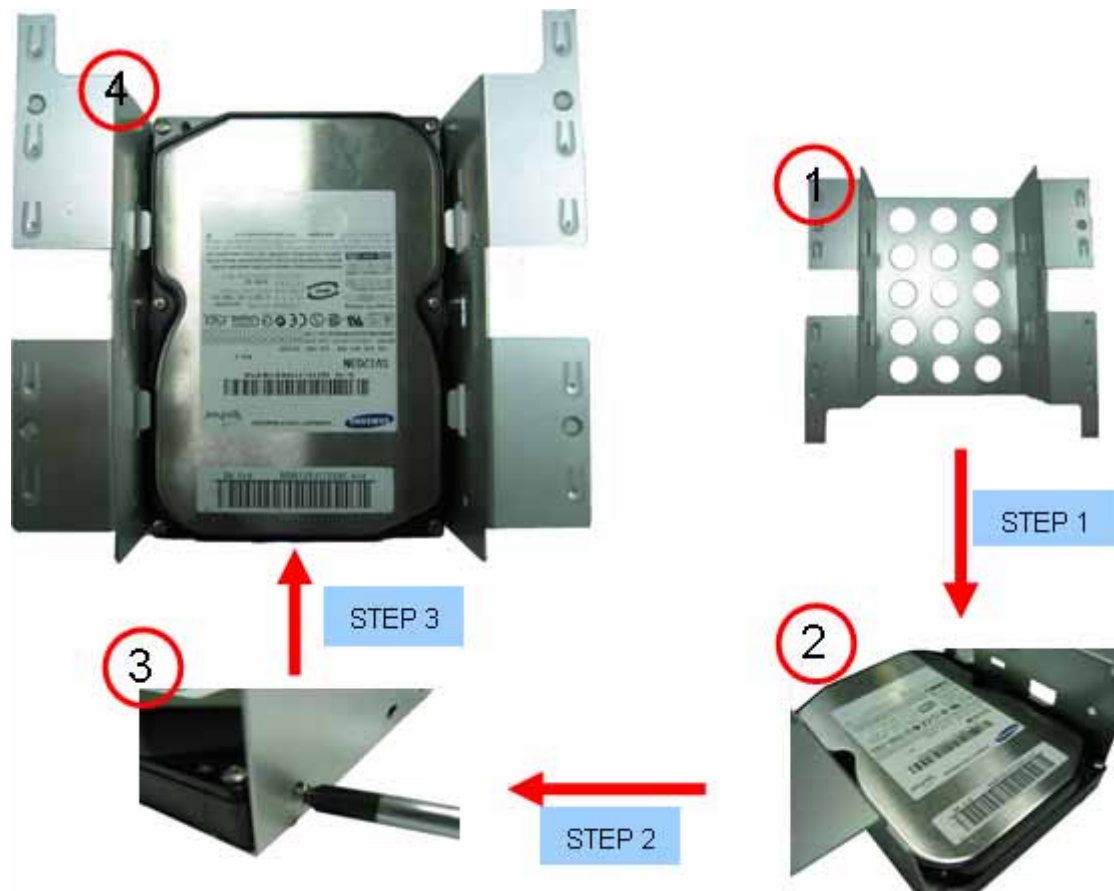

Step 1: Draw out the HDD tray from the system. Install HDD in the tray.


Step 2: Screw the HDD on the tray.

 Step 3: HDD assembled in the tray.

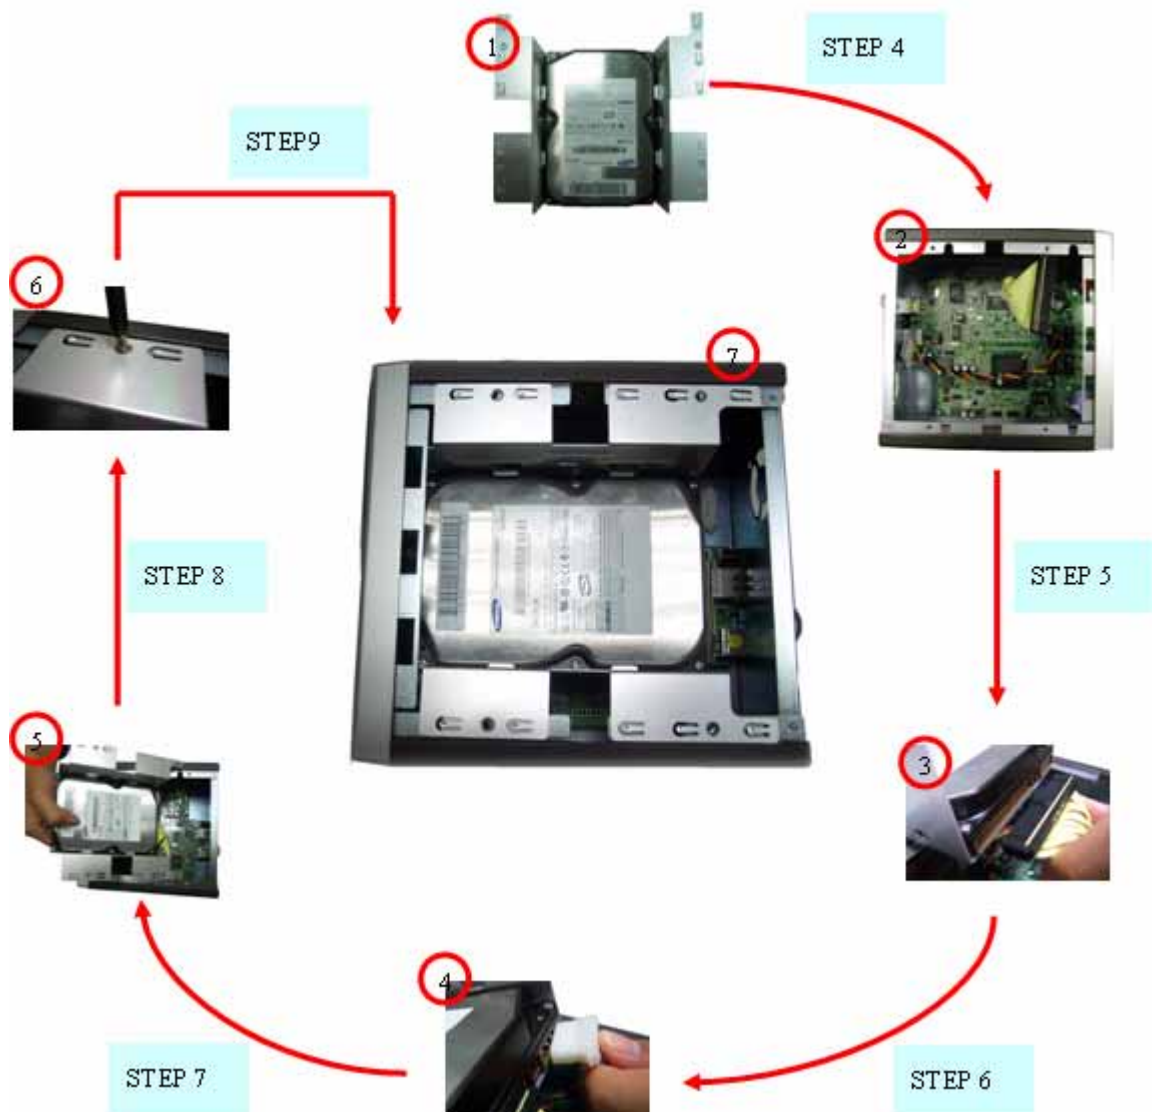


- Step 4: Assembled HDD tray
Step 5: Insert IDE cable into HDD.
Step 6: Insert power cable into HDD.
Step 7: Install assembled HDD tray into system.
Step 8: Screw HDD tray on the system.
Step 9: Cover the system with top chassis.

 3.2. System outlook and LED

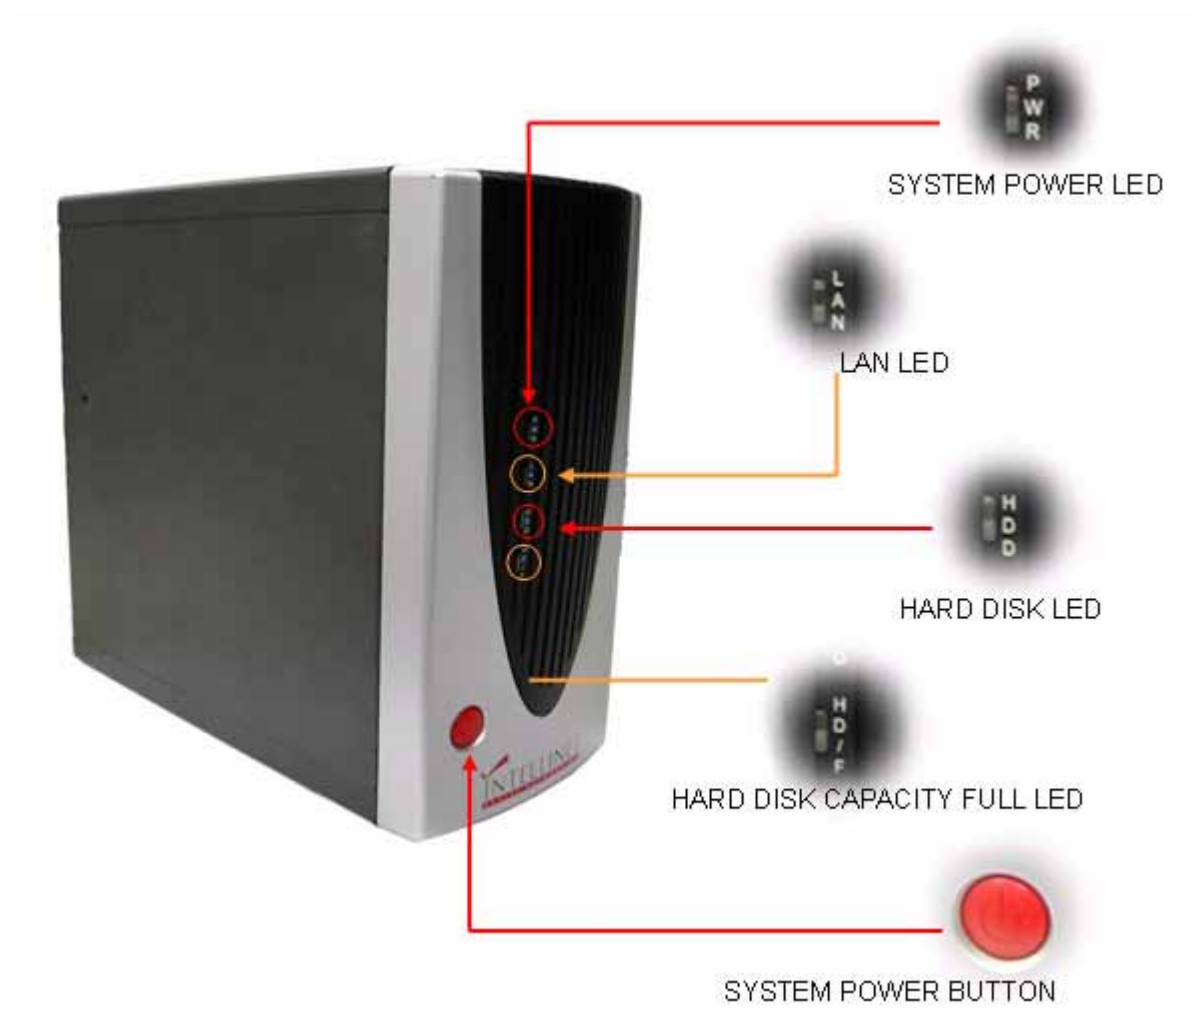

LED	Color	Status	LED Activity
Power	Blue	On	Power On
		Off	Power Off
LAN	Green	Flashing	Transfer/Receive Data
HDD	Green	Flashing	Read/Write Data
HDD/F	Green	On	HDD Full
		Off	HDD have free space

 2.3. I/O port on the back side

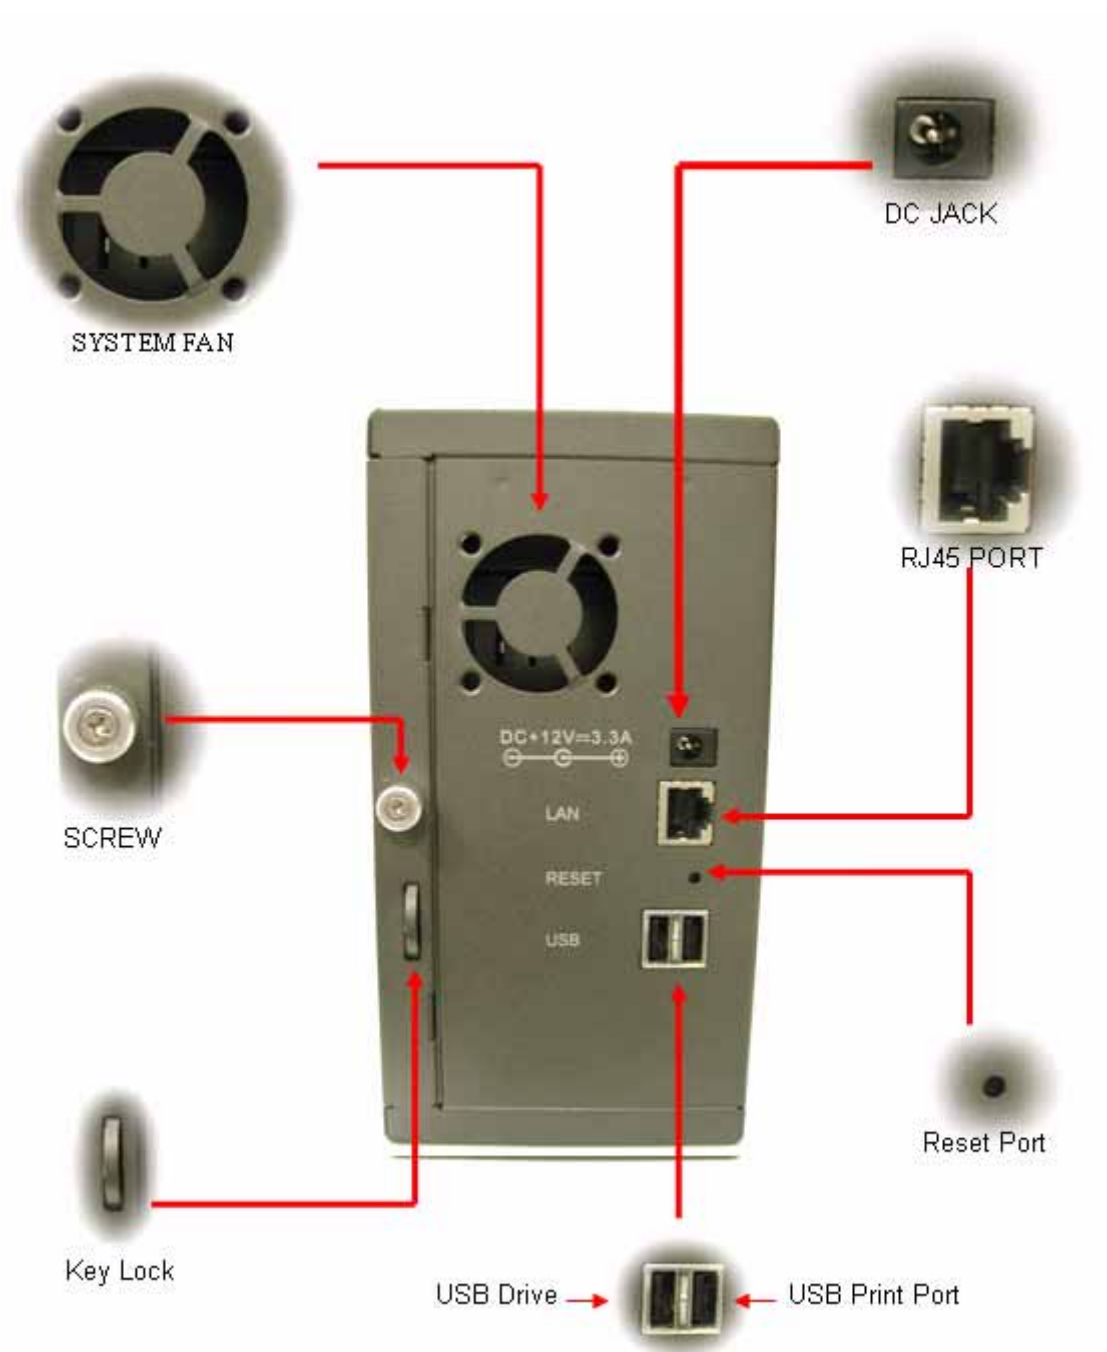

Notice: The left USB port only supports HDD or flash drive, and the right USB port only supports printer.

4 Software installation

Step 01: Power on the system.

 
Step 02: Insert Utility CD into CD-ROM

Step 03: Open your Internet browser and key in the address **http://192.168.0.1**. You will see the below picture. **(Notice: Set the IP of client system as the same domain)**




Step 04: Press button "Browse" and search "PKG" file in the CD. (Default path is "x:\Firmware") then push the "Setup" button.

Step 05: Before you push the "OK Button" for next step.

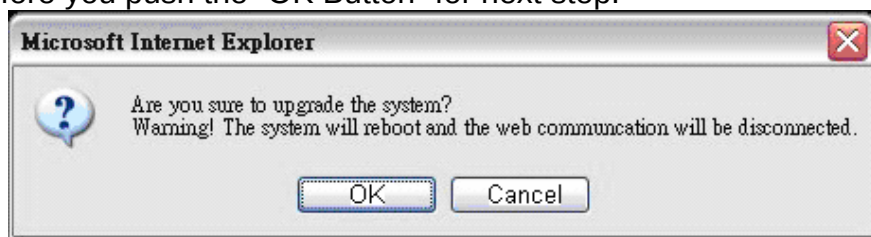

 
Step 06: **Please do not power off either your computer or the NAS during this process. This could take a few minutes depending on your hard drive capacity.**

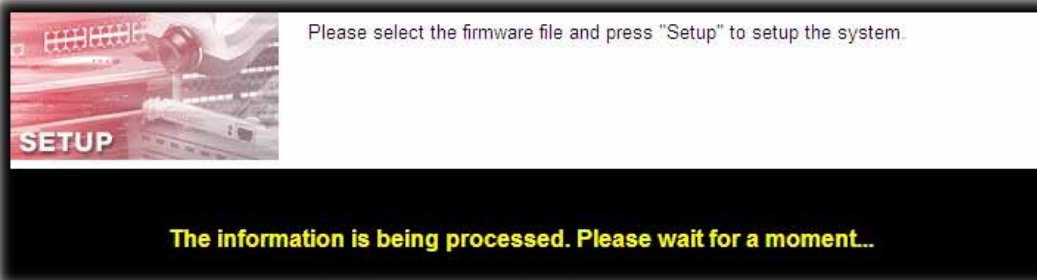

Step 07: When the system upgrade process is completed, you will see the message below in your web browser.




 Step 08: Please choose the suitable profile. (Default is Conference Profile)

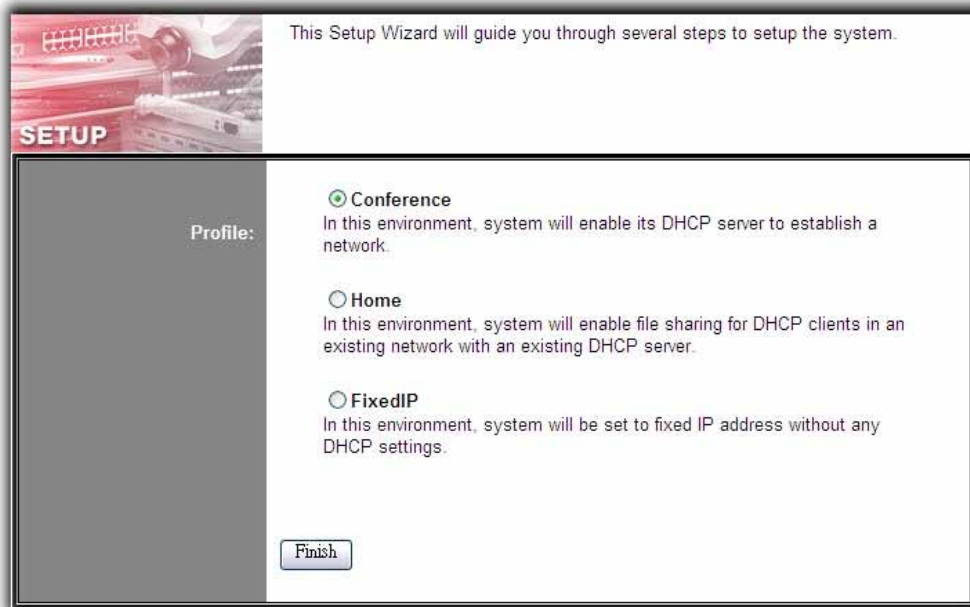

Step 09: Please install the client engine software from the CD. (Path is x:\application)

 Step 10: Click “Administration Console” to operate

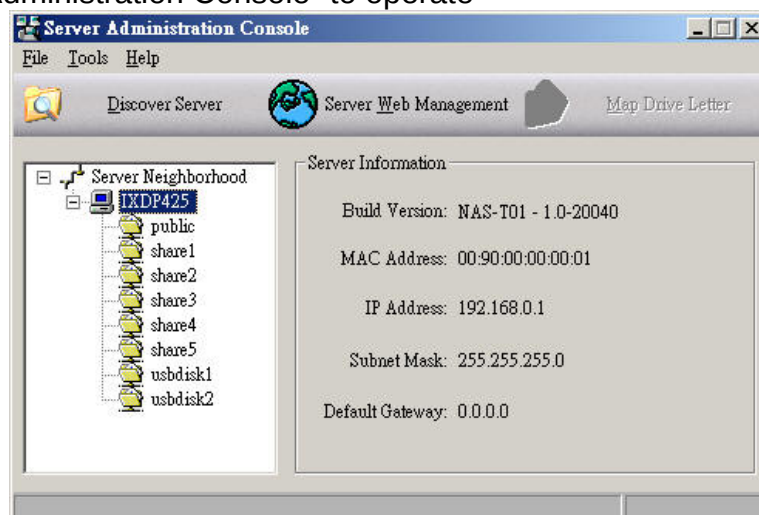

Step 11: Click the “Server Web Management” and key in the default username and password”, then you can access the system setup.

(Notice: The System Default Username and Password is “admin”)



The enclosed Hardware Installation Guide gives you a step-by-step explanation of how to install your Network Attached System (NAS). Further technical assistance and all updated drivers can be accessed at

www.intellinet-network.com

Here you have access to 24hour support and can contact our support team to answer any questions you may have.

In order to provide the requested support we need the following details from you:

- A clear description of the problem;
- Version number of the drivers you are using (always check the website to see whether you are using the latest version);
- Type of PC you are using;
- Operating system you are using

For more information about INTELLINET products, please visit the INTELLINET Web Site:

www.intellinet-network.com

ATTENTION!!

The Software installation as described below, may be slightly different from the installation on your computer. This depends on the Windows version you are using. Contents are subject to change without prior notice.

If you are shipping this product after installing a hard drive, please ensure that you take adequate measures to protect the system from shock levels that can be damaging to the installed hard drive.

Limitation of Liability: TO THE MAXIMUM EXTENT PERMITTED BY LAW, ICINTRACOM IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY. FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH ICINTRACOM'S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO ICINTRACOM FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF ICINTRACOM HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NON-CONFORMING PRODUCT. THE MAXIMUM LIABILITY OF ICINTRACOM UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY.