



Disposal of Electric and Electronic Equipment (applicable in the E.U. and other countries with separate collection systems)

ENGLISH: This symbol on the product or its packaging means that this product must not be treated as unsorted household waste. In accordance with EU Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), this electrical product must be disposed of in accordance with the user's local regulations for electrical or electronic waste. Please dispose of this product by returning it to your local point of sale or recycling pickup point in your municipality.

WASTE ELECTRICAL & ELECTRONIC EQUIPMENT

ESPAÑOL: Este símbolo en el producto o su embalaje indica que el producto no debe tratarse como residuo doméstico. De conformidad con la Directiva 2012/19/EU de la UE sobre residuos de aparatos eléctricos y electrónicos (RAEE), este producto eléctrico no puede desecharse con el resto de residuos no clasificados. Deshágase de este producto devolviéndolo a su punto de venta o a un punto de recolección municipal para su reciclaje.

FRANÇAIS: Ce symbole sur le produit ou son emballage signifie que ce produit ne doit pas être traité comme un déchet ménager. Conformément à la Directive 2012/19/EU sur les déchets d'équipements électriques et électroniques (DEEE), ce produit électrique ne doit en aucun cas être mis au rebut sous forme de déchet municipal non trié. Veuillez vous débarrasser de ce produit en le renvoyant à son point de vente ou au point de ramassage local dans votre municipalité, à des fins de recyclage.

WARRANTY AT: | GARANTÍA EN: | GARANTIE À :
manhattanproducts.com

REGULATORY STATEMENTS

FCC Class B (FCC ID 2BEUJ-179829)

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- reorient or relocate the receiving antenna;
- increase the separation between the equipment and receiver;
- connect the equipment into an outlet on a circuit different from that to which the receiver is connected;
- consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

SPECIFICATIONS: | SPEZIFIKATIONEN: | ESPECIFICACIONES: | CARACTÉRISTIQUES: | SPECYFIKACJE: | SPECIFICHE:

support.manhattanproducts.com/barcode/179829

support.manhattanproducts.com/barcode/179836



North & South America
IC Intracom Americas
550 Commerce Blvd.
Oldsmar, FL 34677
USA

Asia & Africa
IC Intracom Asia
4-F, No. 77, Sec. 1, Xintai 5th Rd.
Xizhi Dist., New Taipei City 221
Taiwan

Europe
IC Intracom Europe
Löhbacher Str. 7
D-58553 Halver
Germany

All trademarks and trade names are the property of their respective owners.

© IC Intracom. All rights reserved. Manhattan is a trademark of IC Intracom, registered in the U.S. and other countries.



Printed on recycled paper.


MH_179829_36_QIG_0326_REV_6.01

Wireless Sport Headphones with Neckband Instructions

Models 179829, 179836



Important: Read before use.
Importante: Leer antes de usar.

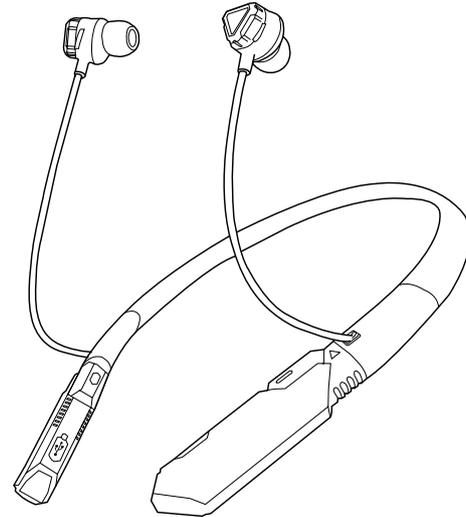

For additional benefits:
**Scan to register your
product warranty**







179829
(Black/Orange)




179836
(Black/Space Gray)

or go to: register.manhattanproducts.com/r/179829
register.manhattanproducts.com/r/179836

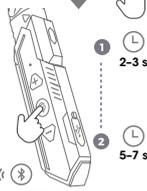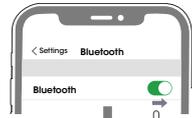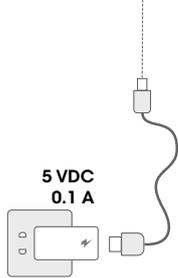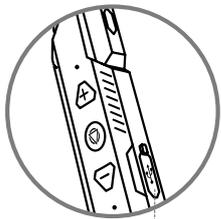

<1 m /39 in.

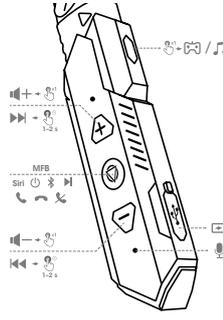

ENGLISH

Charging

Use the included charging cable to connect the unit's DC 5 V socket to a PC or AC/DC adapter.

Note: Please make sure to close the cover of the charging port when wearing. Sweat and moisture may damage the headset.

Pairing your headset

1 Press and hold (2-3 s) the MFB Button. Make sure Bluetooth is turned on in your device, and select "Manhattan-179829" / "Manhattan-179836" from the Bluetooth device list. (Enter the code "0000" if needed).

2 To pair to another device: While headset is shutdown, press and hold (5-7 s) the MFB Button until the purple and orange LEDs start flashing alternately with the voice "Pairing". After do the same as in the Step 1

On/Off

Press and hold MFB button (1-2s) to turn the headset on; (5-7s) to turn off.

Playback

- Press + to turn the volume up.
- Press and hold + to play the next track.
- Press - to turn the volume down.
- Press and hold - the previous track.
- Press MFB button to start or pause the track.

Calls

- Press once MFB button to answer or end a call.
- Press and hold (1-2s) MFB button to refuse a call.
- Press twice MFB button to activate voice assistant on the phone.

Mode switch

Click once to alter between Game (LEDs are on) and Music (LEDs are off) modes.

For specifications, go to manhattanproducts.com. Register your product at register.manhattanproducts.com/r/179829/ or register.manhattanproducts.com/r/179836 or scan the QR code below.

ESPAÑOL

Carga

Utilice el cable de carga que viene incluido para conectar el cargador (5 V CC) al PC o adaptador de CA/CC.

Nota: Asegúrese de cerrar la tapa del puerto de carga cuando lo use. El sudor y la humedad pueden dañar los audífonos.

Emparejar sus auriculares

1 Mantenga presionado (2 a 3 s.) el botón MFB.

Asegúrese de que el dispositivo tenga el Bluetooth® encendido y luego seleccione "Manhattan-179829" / "Manhattan-179836" de la lista de dispositivos. (Introduce el código "0000" si es necesario).

2 Para emparejar con otro dispositivo: mientras el auricular está apagado, mantenga presionado (5 a 7 s.) el botón MFB hasta que las luces LED púrpura y naranja parpadene alternativamente con la voz "Pairing". Tras hacer lo mismo que en el Paso 1.

Encendido/Apagado

Mantenga presionado (1 a 2 s.) el botón MFB para encender los auriculares; mantenga presionado (5 a 7 s.) el botón MFB para apagar

Adelantar/retroceder

- Presione + para subir el volumen
- Mantenga presionado + para reproducir la siguiente pista.
- Presione - para bajar el volumen.
- Mantenga presionado + para reproducir la pista anterior.
- Presione el botón MFB para iniciar o pausar la pista.

Llamadas

- Pulsa el botón MFB para contestar o finalizar una llamada
- Pulse y mantenga pulsado MFB (1-2s) para rechazar.
- Pulse dos veces el botón MFB para activar el asistente de voz en el teléfono.

Alternar modos

Cliquee una vez para alternar entre los modos de Juego (LEDs encendidos.) y Música (LEDs apagados).

Para más especificaciones, visite manhattanproducts.com. Registre el producto en register.manhattanproducts.com/r/179829/ o register.manhattanproducts.com/r/179836 o escanee el código QR a continuación

FRANÇAIS

Chargement

Utiliser le câble d'alimentation inclus pour connecter la prise DC 5 V de l'appareil à un PC ou adaptateur AC/DC.

Remarque : Veillez à fermer le couvercle du port de charge lorsque vous portez l'appareil. La sueur et l'humidité peuvent endommager le casque.

Appariement de votre casque audio

1 Appuyez sur le Bouton Multifonction (MFB) de manière prolongée (2-3 s.) Vérifier que votre appareil est en mode Bluetooth et sélectionner "Manhattan-179829" / "Manhattan-179836" dans la liste des appareils Bluetooth. (Entrez le code "0000" si nécessaire).

2 Pour y associer un autre appareil : Les écouteurs étant éteints, appuyez sur le Bouton MFB de manière prolongée (5-7 s) jusqu'à ce que les voyants lumineux violet et orange commencent à clignoter en alternance et que le mot "Pairing" se fasse entendre. Puis répétez l'Étape 1

Marche/Arrêt

Maintenez la touche MFB enfoncée pendant 1-2 secondes pour allumer le casque audio; 5-7 secondes pour éteindre le casque audio.

Playback

- Appuyer sur + pour augmenter le volume.
- Maintenez la touche + enfoncée pour écouter la chanson suivante
- Appuyer sur - pour baisser le volume;
- Maintenez - enfoncé pour écouter la chanson précédente.
- Appuyez sur la touche MFB pour démarrer ou suspendre la chanson.

Appels

- Appuyez le bouton MFB pour répondre à un appel ou y mettre fin.
- Maintenez le bouton MFB enfoncée (1-2s) pour refuser un appel
- Appuyez deux fois sur le bouton MFB pour activer l'assistant vocal sur le téléphone.

Sélecteur de mode

Cliquer une fois pour alterner les modes Jeu (LEDs allumées.) et Musique (LEDs éteintes).

Vous trouvez les spécifications sur manhattanproducts.com. Enregistrez votre produit sur register.manhattanproducts.com/r/179829/ ou register.manhattanproducts.com/r/179836 ou scannez le code QR figurant sur la couverture.