

4-Outlet Smart PDU with Switched and Network-Managed Control

User Manual

Models 716673, 716680



Important: Read before use.
Importante: Leer antes de usar.




716673
(EU CEE 7/3 Outlets)



716680
(C13 Outlets)

For additional benefits:

Scan to register your
product warranty

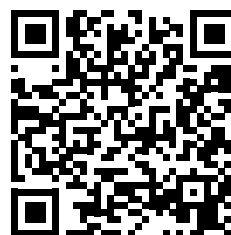

716673



716680

or go to: register.intellinet-network.com/r/716673
register.intellinet-network.com/r/716680

Before You Begin

Read this manual carefully before using the product and operate it according to the instructions. Keep it in an easily accessible location for future reference.

Do not disassemble the device or remove its seal label; doing so will void the Intellinet product warranty. The manufacturer is not responsible for any damage caused by unauthorized modifications or by operating the device with an incorrect voltage setting. Verify the voltage setting before use.

Check that all components are present and undamaged. If anything is missing or damaged during shipping, contact your dealer. Follow all installation and operation procedures carefully to prevent damage to the PDU or connected devices.

All pictures in this manual are for reference only; the actual product may differ. Intellinet reserves the right to change hardware, software, documentation, specifications, reliability, function, or design at any time without notice.

No user, corporation, or individual may duplicate, distribute, modify, decompile, disassemble, decode, reverse engineer, rent, transfer, or sublicense the software without prior written consent from the copyright holders. The software is provided “as is.” If it proves defective, the buyer—not the manufacturer, distributor, or dealer—assumes all servicing, repair, and any incidental or consequential costs.

This publication is copyrighted. No part may be reproduced, distributed, or used in any form without written permission from Intellinet Network Solutions.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications. The user is responsible for correcting such interference.

Package Contents

The PDU Series package consists of:

- Power Distribution Unit
- Power Cord
- Mounting Kit

Contents

Chapter 1: Getting Started	4
Product Overview	4
Product Features:	4
Product Specifications:	5
Chapter 2: Product Diagram	5
Ports	5
Switches	5
LEDs	5
Chapter 3: Hardware Setup	6
Before You Begin	6
Installation	6
Chapter 4: Basic Operation and First Time Setup	7
First Time Setup	7
Network Configuration	7
Change Administrator Login	8
Chapter 5: Browser Operation	9
Logging In	9
Main Page	9
Control	9
Statistics	10
Settings	10
Device deployment	11
Global Settings	12
Threshold Settings	14
About	14
Logs	15
Specifications	16
Safety Tips	16
IP Address Determination	17
Additional Information	18



Chapter 1: Getting Started

Product Overview

The Intellinet 4-Outlet Smart PDU provides stable power distribution to keep network equipment operational. It continuously monitors electrical and environmental conditions to supply relevant status information and alert users to potential overloads. Through the network interface, users can view device status and remotely switch each output port on or off as needed.

Product Features:

- Intelligent 4-way single-phase PDU for electrical equipment, ideal for networking, telecom, security and audio/video
- Manual and automatic outlet switching and power cycling to reboot unresponsive devices or schedule energy-saving shutdowns
- Network-managed access and control via web browser or SNMP
- Remote power monitoring for voltage, current, and energy use
- Programmable scheduling, sequencing, and timer control
- Configurable system alerts, power alarms, and email notifications with real-time display in the web interface and activity logging
- Built-in overload protection with automatic power-off and customizable threshold
- Multi-user access with role-based permissions
- Power usage statistics with graphical display
- Firmware upgradeable via network
- Multi-language web interface with customizable translations
- Two-pole on/off switch, RJ45 Ethernet port and buttons for system reset or restoring factory settings
- Flexible mounting for wall, enclosure, or surface installation with included hardware
- Grounding point to protect equipment from external electrical surges
- Compact, durable, and fire-resistant metal construction with IP20-rated housing
- 716673: Detachable 1 m power cable with C19 to EU CEE 7/7 hybrid plug, fits both European type F and French type E sockets / 716680: Detachable 2 m power cable with C13 to EU CEE 7/7 hybrid plug, fits both European type F and French type E sockets
- Fanless design for silent operation
- For indoor use only
- Fully NDAA-compliant
- Three-year warranty



Product Specifications:

- Voltage input: 100.0 - 240.0 V; 50 - 60 Hz
- Input socket type: 716673 – EU CEE 7/3 (Type F); IEC 60884; 716680 – IEC C13
- Output socket type: 716673 – IEC C14
- Protection: 10.0 A maximum load current, automatic power-off on overload
- Voltage measurement range: 90 – 264 VAC, resolution 1 V
- Current working range: 0 – 20 A, resolution 0.1 A
- Temperature measurement range: 0 – 50°C
- Humidity measurement range: 0% to 80% RH

Chapter 2: Product Diagram



Ports

- Power outlet socket – The total output power must not exceed 10A. Exceeding this limit may damage the PDU and connected devices, and activate the circuit breaker protection.
- Ports 1-4 – Each power socket supports devices with a current below 10A.
- LAN Port – Connects to a 10/100 Mbps Ethernet network for PDU control and access.
- Ground Terminal

Switches

- I/O – Power Switch
- RST – Reset Button – Hold down the key to restart the PDU
- Default – Defaults Button – This button can be pressed with a paper clip. Hold it for over 3 seconds to reset the PDU to factory defaults. Release the switch and restart the device for the reset to take effect..

LEDs

- Port 1-4 – Indicates the working status of each port
- Online – Indicates the PDU working status

Chapter 3: Hardware Setup

Before You Begin

1. Important safety information regarding the placement of this switcher is provided in the Safety Tips appendix. Please review this information before operation.
2. Before installation, ensure that the power supply of all connected devices is turned off.
3. The PDU can be installed inside an indoor distribution box or mounted on a wall. For either installation method, use fasteners and screws to securely attach the PDU in the desired location.

Installation

To install a PDU, perform the following operations:

1. Properly ground the PDU using ground cables. Connect one end of the grounding cable to the grounding terminal and the other end to the appropriate grounding object.
Note: Do not omit this step. Proper grounding can avoid damage caused by surge or static electricity
2. Connect each device’s AC input to an available PDU outlet using its power cable.
3. Connect the network cable to the network interface port on the PDU.
4. Connect the PDU power cable to the AC power supply.
Note: Do not connect the ECO PDU power cord to a multi-socket extension. Insufficient power from such connections may cause the device to operate improperly.
5. After connecting PDUs, power on PDUs and connected devices.

Note: We strongly recommend securing all cables to the front panel using harness straps and cable boxes. Doing so reduces the risk of loose or unstable connections during continued operation.

Restart

You can restart the PDU in two ways:

1. Press the embedded RST button at the front of the PDU with a paper clip, to restart the PDU.
2. On the WEB page of the PDU, select **Upgrade** option in **Global Setting** and click **Restart** to restart the PDU.


Chapter 4: Basic Operation and First Time Setup

First Time Setup

Once the PDU is installed, the administrator must configure the network parameters and change the default administrator login settings, including creating new user accounts. The recommended method is to access the device via a web browser through the network.

1. Since this is your first log-in, you can use the default IP address: **192.168.0.100**, user name: **admin**, and default password: **admin123456**. For security reasons, you must change to your unique user name and password (See Changing Administrator Login for more information).
2. To log in to the network remotely, please refer to the IP address description.

After logging into the PDU successfully, the **Socket Access/Connection** page will appear:

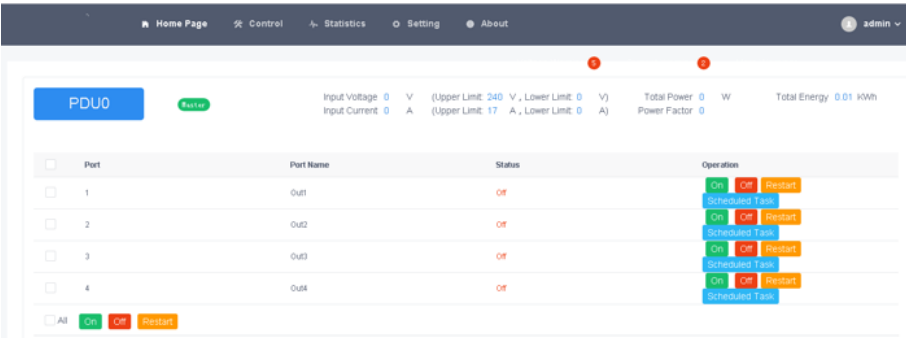

After logging in, the top panel of the interface provides the following options for PDU operation: **Home Page**, **Control**, **Statistics**, **Settings**, and **About**. Click the corresponding tab to access, configure, and view the functions available on each page.

Network Configuration

To configure the network, perform the following operations:

1. Click the **Setting** tab.
2. Please fill in the field data according to the information provided in the device setting instructions of **Network Setting**. Such as:

Network Setting

IP Addr

192.168.0.100

Subnet Mask

255.255.255.0

Gateway IP

192.168.0.1

Primary DNS Server

223.5.5.5

Secondary DNS

8.8.8.1

Smart DHCP

☒

NetBios Name

lppdu

HTTP Port


80

Save

Change Administrator Login

To change the administrator’s default username and password, follow these steps:

1.
- Click the **User List** in the **User Management** button at the top of the screen. A list of users is shown on the left side of the page, with their more detailed information displayed on a large block in the center.

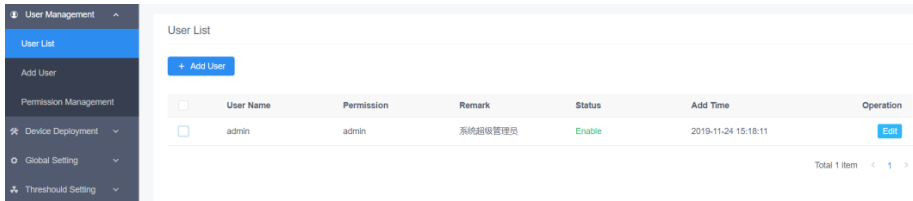

2.
- In the **User List** section, click **Edit** to change the unique name and password, then click **Save** (bottom of the page).

Note: If the administrator password is forgotten, the PDU must be reset to restore access.

Edit User

User Name

admin

Password

Password Validation

Permission

☒ Admin

Status

☒ Enable

Remark

adminaator

Save

Chapter 5: Browser Operation

Logging In

You can connect to PDUs from any platform with a web browser, enter the IP address of the PDU that you want to access in the address box.

Use the default IP address **192.168.0.100** to log in to the PDU, or use a new IP address if it has been changed. **Note:** the new IP address is required for all subsequent logins.

Main Page

Once you have logged in successfully, the PDU home page will appear along with the socket access page. The PDU status and socket status contents are displayed on the main block:

Port	Port Name	Status	Operation
☐ 1	Out1	Off	<button>On</button> <button>Off</button> <button>Restart</button> <button>Scheduled Task</button>
☐ 2	Out2	Off	<button>On</button> <button>Off</button> <button>Restart</button> <button>Scheduled Task</button>
☐ 3	Out3	Off	<button>On</button> <button>Off</button> <button>Restart</button> <button>Scheduled Task</button>
☐ 4	Out4	Off	<button>On</button> <button>Off</button> <button>Restart</button> <button>Scheduled Task</button>
☐ All ☒ On ☐ Off ☐ Restart			

Control

On the home page menu bar, select **Control** to access the PDU’s scheduled task options. From this page, you can view existing scheduled tasks and add new tasks for each outlet.

In the schedule task list bar, you can retrieve the desired port schedule status by time.

Scheduled Task

Scheduled Tasks List

Add Scheduled Task

Select Device

PDU0

First Action

2021-12-01

2021-12-31

Search

Clear

Add Scheduled Task

PDU	Port	First Action	Repeat	Remark	Operation
No Data					

In the **Add Scheduled Task** tab, you can create tasks according to your requirements, including **Socket Port, Switch Type, Time, Working Days, and Remarks**. Select the appropriate options and click **Save** to create the scheduled task. The PDU will execute the task at the specified time.

Scheduled Task

Scheduled Tasks List

Add Scheduled Task

Select Device

PDU0

Select Port

☒ All ☒ Out1 ☒ Out2 ☒ Out3 ☒ Out4

Control Type

Off

Action Date

2021-12-01

Action Time

20:00:00

Repeat

☐ Sun ☒ Mon ☒ Tue ☒ Wed ☒ Thu ☒ Fri ☐ Sat

Remark

Save


Statistics



View energy consumption statistics for a selected time range by choosing the start date from the drop-down list. You may also use the quick-selection options to display data for the past **24 hours, 7 days, 30 days, or 90 days**.

Settings

Setting options includes **Account Management, Device Deployment, Global Settings, and Threshold Settings**. This option is available only to administrators. Common users cannot see this option.

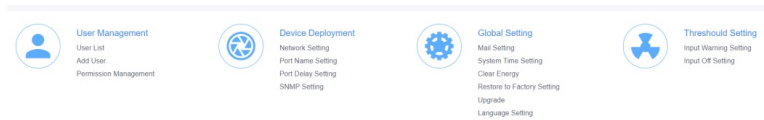

Account management

Sub-function options include **User List, Adding a User, and Permission Management**.

If you log in to the PDU as an administrator, the **User List** shows information about all accounts in the PDU system. The administrator has the permission to **add, delete, and edit accounts**. The default administrator account can only be edited but cannot be deleted.

User List						
Add User						
☐	User Name	Permission	Remark	Status	Add Time	Operation
☐	user1	visitor	user	Enable	2021-12-31 08:42:48	Edit Delete
☐	admin	admin	super admin	Enable	2019-11-24 15:18:11	Edit
Total 2 items < 1 >						

As an administrator, you can add new accounts and select corresponding permissions. There are two levels of permission management options: **Operator** and **Visitor**.

Add User

User Name

user1

Password

Password Validation

Permission

☐ Operator ☒ Visitor

Status

☒ Enable ☐ Disable

Remark

user

Save

Operator rights define which PDU functions an operator can access. Once the desired permissions are selected and saved, the operator is granted those operation rights.

Permission Management

Operator

Visitor

☒ Operate Ports
☒ Port Delay Setting
☒ Input Warning Setting
☒ View System Logs

☐ User Management
☐ System Time Setting
☒ Output Warning Setting
☒ View User Operation Logs

☒ Manage Scheduled Task
☒ Clear Energy
☒ Output Off Setting
☒ Statistics

☒ Port Name Setting
☒ Language Setting
☒ Temp & Humi Warning Setting

Save

The **Visitor** section describes how to query **system logs, operation logs, and statistics**. You can select the corresponding options to assign the browsing permission to users.

Permission Management

Operator

Visitor

☒ View System Logs

☒ View User Operation Logs

☒ Statistics

Save

Device deployment

Sub-function options include **Network Settings, Port Name Settings, Port Delay**.

Network Settings. The default IP address is **192.168.0.100**. You can reset the **IP address** and **Network Settings** based on your IP address segment. Click **Save** to apply the new settings.

Network Setting

IP Addr

192.168.0.100

Subnet Mask

255.255.255.0

Gateway IP

192.168.0.1

Primary DNS Server

223.5.5.5

Secondary DNS

8.8.8.1

Smart DHCP

☒

NetBios Name

ippdu

HTTP Port

80

Save

Port Name Setting. Change the PDU name or the Port Name, click the **Save** button to save the settings.

Port Name Setting

PDU

PDU 0

Name

PDU0

Port Name

Port	Name
Port1	Out1
Port2	Out2
Port3	Out3
Port4	Out4

Save

Port Delay Setting allows you to set the opening and closing delay time of the port socket. By default, the switching interval of the adjacent port is 1 second. You can also modify the interval delay time according to your needs.

Port Delay Setting

PDU: PDU0

Port	On Delay(Second)	Off Delay(Second)	Restart Delay(Second)
Out1	1	0	1
Out2	2	2	2
Out3	3	3	3
Out4	4	4	4

Save

If **SNMP Agent** is enabled, an alarm will be sounded and E-mail message will be sent when the circuit breaker trips or the PDU/ socket threshold is set beyond the minimum or maximum setting range.

SNMP Setting

SNMP Agent On ☒

Communit 1212

Permission

Read Only

TRAP On

Read Only

Reception Addr 192.168.1.1

Save

Global Settings

Sub-function options include: *Mail Settings, System Time Settings, Electricity Meter Reset, Factory Reset, System Upgrade, Language Settings*

Account Setting tab in **Mail Setting**. Use this tab to configure the email address for receiving PDU alarms and logs. **Note:** Click **Sending Test** to send a test email and verify that it is correct.

Mail Setting

Account setting Receiver List Send Logs

SMTP Server smtp.163.com

Port 25

Sender zhua0001@163.com

Password *****

Enable Mail ☒ Enable ☐ Disable

Save Sending Test

In **Receiver Setting tab**, you can search, view, edit, and delete email addresses in the recipient list, as well as enable or disable email notifications. This allows you to adjust the settings according to actual usage needs.

Mail Setting

Account setting Receiver List Send Logs

Name Mail Box Search Clear Add

Name	Mail Box	Status	Operation
Eddie	610114768@qq.com	Enable	Edit Delete
Eddie	zhu_huija0001@126.com	Enable	Edit Delete

Send Logs tab. This tab displays records of all sent emails. You can query, delete, or export mail logs based on a selected time range.

Mail Setting

Account setting Receiver List Send Logs

PDU: PDU0 Time Search

	Device Name	Reception Mail Box	Content	Send Time	Operation
☒	PDU0	Eddie.zhu_huija0001@126.com	The input voltage is under lower limit	2021-12-29 10:56:04	Delete Export
☒	PDU0	Eddie.zhu_huija0001@126.com	The input voltage is under lower limit	2021-12-29 10:52:06	Delete Export
☐	PDU0	Eddie.zhu_huija0001@126.com	The input voltage is under lower limit	2021-12-29 10:50:18	Delete Export

Delete Export

System time. Set the PDU’s system time here or synchronize it with the time of the computer you are using to log in.

System Time Setting

System Time 2021-12-31 11:11:39

Set time Synchronize from Computer Time

Save

Clear Energy resets the PDU’s accumulated energy data. After clearing, the PDU restarts energy calculation from zero.

Clear Energy

PDU: PDU0

Total Energy 0.25 kW

Clear Energy

Restore to Factory Settings. Restores the PDU to its factory defaults and deletes all stored records and configuration data. **Note:** Use this function with caution. After restoring defaults, the system will restart and you will need to reconfigure the PDU.

Restore to Factory Setting

PDU: PDU0

Restore to Factory Setting(Device Will Reboot after restoration)

Restore to Factory Setting

System Upgrade. Use this function to update the PDU firmware. Check our website for the latest software version, download the upgrade file to your PC, and select it in this menu to start the update. The PDU will restart automatically after the upgrade is complete.

Upgrade

Upgrade File Select upgrade file

Restart

Language setting. The PDU currently supports *English, German, Italian, French, and Spanish*. If new language packs become available, you can install them through the latest system upgrade. Select your preferred language from the drop-down list and click **Save**. The system interface will switch to the chosen language.

Language Setting

Language

English

Save

Threshold Settings

Sub-function options include *Alarm Setting* and *Power Off Settings*.

Alarm Settings. Set the maximum and minimum input current and voltage thresholds. When the current or voltage exceeds these limits, the PDU automatically sends an alarm log to the specified email address and displays an alarm message on the home page, making it easy to review and handle the issue during your next login.

Input Warning Setting

PDU

PDU0

Voltage Upper Limit

240

V

Voltage Lower Limit

0

V

Current Upper Limit

17

A

Current Lower Limit

0

A

Save

Input Off Setting. This function protects electrical equipment and wiring from damage caused by excessive current. When the input current reaches the maximum or minimum threshold you set, the system will automatically power off.

Input Off Setting

PDU

PDU0

Current Upper Limit

20

A

Current Lower Limit

0

A

Save

About

Obtain the *network configuration information, name, hardware version and device serial number* of the PDU.

About

All Rights Reserved. Copyright Info

IP Addr: 192.168.0.100

Subnet Mask: 255.255.255.0

Gateway: 192.168.0.1

Primary DNS Server: 223.5.5.5

Secondary DNS Server: 8.8.8.1

Device Name: PDU0

Device UID: G982000000000000

HW Version: v1.1

SW Version: 1.6.3

Product Serial: 123456

Logs

Logs are classified into two types: *System Logs* and *User Operation Logs*

Click the **More Warnings** button at the top of the main window to open the **System Log** list. The pop-up window displays the *log time, type, and description*.

System Logs

Time

Type

Select

Read

Select

Search

Time	Event Type	Description	Status	
2021-12-29 11:13:23	Input Voltage Warning	Input voltage warning: Below lower limit	Not Read	Read
2021-12-29 10:56:34	Input Voltage Warning	Input voltage warning: Below lower limit	Not Read	Read
2021-12-29 10:52:06	Input Voltage Warning	Input voltage warning: Below lower limit	Not Read	Read
2021-12-29 10:50:18	Input Voltage Warning	Input voltage warning: Below lower limit	Not Read	Read
2021-12-29 10:48:30	Input Voltage Warning	Input voltage warning: Below lower limit	Not Read	Read
2021-12-29 10:47:19	Input Voltage Warning	Input voltage warning: Below lower limit	Not Read	Read
2021-12-29 10:44:48	Input Voltage Warning	Input voltage warning: Below lower limit	Not Read	Read
2021-12-29 10:43:23	Input Voltage Warning	Input voltage warning: Below lower limit	Not Read	Read
2021-12-29 10:41:23	Input Voltage Warning	Input voltage warning: Below lower limit	Not Read	Read

User Operation Logs. Click the **User** menu in the upper-right corner and select **Operation Logs**. The following window displays the *log time, user, log description, and accessed IP address*.

User Operation Logs

Time

Search

Time	User	Description	IP
2021-12-31 09:25:08		A user is modified [user1]	192.168.0.153
2021-12-31 08:42:48		A user is added [user1]	192.168.0.153
2021-12-30 16:09:44		A user is modified [admin]	192.168.0.153
2021-12-30 15:27:42		On [addr:0]	192.168.0.153
2021-12-30 15:27:42		On [addr:0]	192.168.0.153
2021-12-30 15:27:23		On [addr:0]	192.168.0.153
2021-12-29 11:14:12		修改了输入告警设置 [addr:0]	192.168.0.150
2021-12-29 11:13:14		修改了输入告警设置 [addr:0]	192.168.0.150
2021-12-29 10:57:46		Input warning settings are modified [addr:0]	192.168.0.150

Specifications

Function		716673	716680
Power Outlets	Direct	4	4
Connectors	Power Inlet	IEC C14	IEC C14
	Power Outlets	IEC C13	EU Socket
	LAN	1 x RJ-45 (F)	1 x RJ-45 (F)
LEDs	Outlet Status	4 (Green)	2/3/4(Green)
	Power	1 (Green)	1 (Green)
	LAN	10/100M	1 (Orange / Green)
		Link	1 (Green)
Switches	Reset	1 x Semi-recessed button	1 x Semi-recessed button
	Restore default Settings	1 x Semi-recessed button	1 x Semi-recessed button
	Power	1 x Rocker Switch	1 x Rocker Switch
Input Rating		100–240V~; 50/60Hz; 16A	100–240V~; 50/60Hz; 16A
Load Capacity		3840W	3840W
Output Rating	Per Port	100–120V~; 50/60Hz; 10A	100–120V~; 50/60Hz; 10A
	Total	100–120V~; 50/60Hz; 16A	100–120V~; 50/60Hz; 16A
Environment	Operating Temperature	0–50°C	0–50°C
	Storage Temperature	-20–60°C	-20–60°C
	Humidity	0–80% RH (Non-condensing)	0–80% RH (Non-condensing)
Physical Properties	Housing	Metal	Metal
	Weight	0.9 kg	0.9 kg
	Dimensions (L x W x H)	198*133*44.5mm	238*180*71mm

Safety Tips

- This product is for indoor use only.
- Read all of these instructions. Save them for future reference.
- Follow all warnings and instructions marked on the device.
- Do not place the device on any unstable surface (cart, stand, table, etc.). If the device falls, serious damage will result.
- Do not use the device near water.
- Do not place the device near, or over, radiators or heaters.
- The device cabinet is provided with slots and openings to allow for adequate ventilation. To ensure reliable operation, and to protect against overheating, these openings must never be blocked or covered.
- The device should never be placed on a soft surface (bed, sofa, rug, etc.) as this will block its ventilation openings. Likewise, the device should not be placed in a built in enclosure unless adequate ventilation has been provided.
- Unplug the device from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- The device should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- This equipment is designed to be equipped with 100- 230V alternating IT power distribution system.
- To prevent damage to your installation it is important that all devices are properly grounded.
- The device is equipped with a 3-wire grounding type plug. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not attempt to

- defeat the purpose of the grounding-type plug. Always follow your local/national wiring codes.
- Do not allow anything to rest on the power cord or cables. Route the power cord and cables so that they cannot be stepped on or tripped over.
- To help protect your system from sudden, transient increases and decreases in electrical power, use a surge suppressor, line conditioner, or uninterruptible power supply (UPS).
- Position system cables and power cables carefully; Be sure that nothing rests on any cables.
- When connecting or disconnecting power to hot pluggable power supplies, observe the following guidelines:
- Install the power supply before connecting the power cable to the power supply.
- Unplug the power cable before removing the power supply.
- Never push objects of any kind into or through cabinet slots. They may touch dangerous voltage points or short out parts resulting in a risk of fire or electrical shock
- Do not attempt to service the device yourself. Refer all servicing to qualified service personnel
- If the following conditions occur, unplug the device from the wall outlet and bring it to qualified service personnel for repair.
- Only adjust those controls that are covered in the operating instructions.
- Improper adjustment of other controls may result in damage that will require extensive work by a qualified technician to repair.

IP Address Determination

If you are an administrator and log in for the first time, you must connect the switcher to assign an IP address for user access. The PDU device provides the means that, in each case, your computer must be on the same network segment as the switcher; When you are connected and logged in, you can assign a fixed network address to the device.

Specific methods are as follows:

1. Set the IP address of your PC to 192.168.0.xxx. Here XXX represents any number other than 100. (192.168.0.100 is the default address of switcher)
2. In the network address column of your browser, enter the recognized IP address of the switcher you want to connect to (192.168.0.100).
3. When you are connected and logged in, assign a set of fixed IP addresses corresponding to its Network segment to the device (see Network Setting).
4. After you log out, be sure to reset your computer IP address back to the original value.
5. Once you are logged in, please go to the Network Settings page to set up a temporary IP environment.



Additional Information

WASTE ELECTRICAL & ELECTRONIC EQUIPMENT

DISPOSAL OF ELECTRIC AND ELECTRONIC EQUIPMENT (Applicable In The European Union And Other European Countries With Separate Collection Systems)

ENGLISH: This symbol on the product or its packaging means that this product must not be treated as unsorted household waste. In accordance with EU Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), this electrical product must be disposed of in accordance with the user's local regulations for electrical or electronic waste. Please dispose of this product by returning it to your local point of sale or recycling pickup point in your municipality.

DEUTSCH: Dieses auf dem Produkt oder der Verpackung angebrachte Symbol zeigt an, dass dieses Produkt nicht mit dem Hausmüll entsorgt werden darf. In Übereinstimmung mit der Richtlinie 2012/19/EU des Europäischen Parlaments und des Rates über Elektro- und Elektronik-Altgeräte (WEEE) darf dieses Elektrogerät nicht im normalen Hausmüll oder dem Gelben Sack entsorgt werden. Wenn Sie dieses Produkt entsorgen möchten, bringen Sie es bitte zur Verkaufsstelle zurück oder zum Recycling-Sammelpunkt Ihrer Gemeinde.

ESPAÑOL: Este símbolo en el producto o su embalaje indica que el producto no debe tratarse como residuo doméstico. De conformidad con la Directiva 2012/19/EU de la UE sobre residuos de aparatos eléctricos y electrónicos (RAEE), este producto eléctrico no puede desecharse se con el resto de residuos no clasificados. Deshágase de este producto devolviéndolo a su punto de venta o a un punto de recolección municipal para su reciclaje.

FRANÇAIS: Ce symbole sur le produit ou son emballage signifie que ce produit ne doit pas être traité comme un déchet ménager. Conformément à la Directive 2012/19/EU sur les déchets d'équipements électriques et électroniques (DEEE), ce produit électrique ne doit en aucun cas être mis au rebut sous forme de déchet municipal non trié. Veuillez vous débarrasser de ce produit en le renvoyant à son point de vente ou au point de ramassage local dans votre municipalité, à des fins de recyclage.

POLSKI: Jeśli na produkcie lub jego opakowaniu umieszczono ten symbol, wówczas w czasie utylizacji nie wolno wyrzucać tego produktu wraz z odpadami komunalnymi. Zgodnie z Dyrektywą Nr 2012/19/EU w sprawie zużytego sprzętu elektrycznego i elektronicznego (WEEE), niniejszego produktu elektrycznego nie wolno usuwać jako nie posortowanego odpadu komunalnego. Prosimy o usunięcie niniejszego produktu poprzez jego zwrot do punktu zakupu lub oddanie do miejscowego komunalnego punktu zbiórki odpadów przeznaczonych do recyklingu.

ITALIANO: Questo simbolo sui prodotto o sulla relativa confezione indica che il prodotto non va trattato come un rifiuto domestico. In ottemperanza alla Direttiva UE 2012/19/EU sui rifiuti di apparecchiature elettriche ed elettroniche (RAEE), questa prodotto elettrico non deve essere smaltito come rifiuto municipale misto. Si prega di smaltire il prodotto riportandolo al punto vendita o al punto di raccolta municipale locale per un opportuno riciclaggio.

GENERAL PRODUCT SAFETY INSTRUCTIONS

Allgemeine Sicherheit

- **Bestimmungsgemäßer Gebrauch:** Nur für Innenräume und nicht-kritische Anwendungen geeignet. Nicht in sicherheitsrelevanten Umgebungen verwenden.
- **Von Kindern fernhalten:** Kein Spielzeug. Für Kinder ungeeignet.
- **Erstickungsgefahr:** Verpackungsmaterialien von Babys und Kindern fernhalten.

Elektrische Sicherheit

- **Netzteil:** Verwenden Sie nur das Original- oder ein zugelassenes Netzteil. Andernfalls erlischt die Garantie.
 - **Feuchtigkeit & Hitze:** Vor Flüssigkeiten, Feuchtigkeit, direkter Sonneneinstrahlung und Hitzequellen schützen. Nicht mit Hitze trocknen.
 - **Anschlüsse:** Keine Fremdkörper einführen. Anschlüsse sauber und trocken halten. Vor Reinigung oder Wartung vom Strom trennen.
- Handhabung & Wartung**
- **Reinigung:** Gerät ausschalten und vom Strom trennen. Nur mit trockenem Tuch reinigen. Keine Flüssigkeiten verwenden.
 - **Beschädigungen:** Bei Sturz, Beschädigung oder Flüssigkeitseintritt nicht weiterverwenden. Support kontaktieren.
 - **Reparaturen:** Keine eigenmächtigen Reparaturen durchführen. Dies kann gefährlich sein und die Garantie erlöschen lassen.

Umwelt & Gesundheit

- **Explosionsgefährdete Bereiche:** Nicht in der Nähe von brennbaren Materialien oder in explosionsgefährdeten Umgebungen verwenden.
- **Erwärmung:** Gerät kann sich im Betrieb erwärmen. Für Belüftung sorgen.
- **Medizinische Geräte:** Elektrische Signale können medizinische Geräte stören. Bei Verdacht sofort ausschalten.
- **Hautkontakt:** Materialien können Hautreizungen verursachen. Bei Beschwerden Nutzung einstellen.

ESPAÑOL

Lea y conserve estas instrucciones. El incumplimiento puede causar lesiones, descarga eléctrica, incendio o daños al equipo. El uso implica la aceptación de la garantía limitada de Intellinet Network Solutions.

Seguridad general

- **Uso previsto:** Solo para interiores y aplicaciones no críticas. No usar en entornos de alto riesgo.
- **Mantener fuera del alcance de los niños:** No es un juguete.
- **Riesgo de asfixia:** Mantenga los empaques fuera del alcance de bebés y niños.

DEUTSCH

Bitte lesen und bewahren Sie diese Anleitung auf. Die Nichtbeachtung kann zu Verletzungen, Stromschlag, Brand oder Geräteschäden führen. Die Nutzung gilt als Zustimmung zur eingeschränkten Garantie von Intellinet Network Solutions.



- **Dommages :** En cas de choc, d'infiltration ou de dommage, cesser l'utilisation et contacter le support.
- **Réparations :** Ne pas ouvrir ni réparer soi-même. Risque de danger et annulation de garantie.

Environnement & santé

- **Atmosphères explosives :** Ne pas utiliser près de matériaux inflammables.
- **Chauffe :** Le produit peut chauffer. Assurez une bonne ventilation.
- **Dispositifs médicaux :** Peut interférer avec certains appareils. Éteindre en cas de doute.
- **Contact cutané :** Peut provoquer des irritations. Cesser l'utilisation si des symptômes apparaissent.

POLSKI

Przeczytaj i zachowaj instrukcję. Nieprzestrzeganie może prowadzić do obrażeń, porażenia prądem, pożaru lub uszkodzenia sprzętu. Użytkowanie oznacza akceptację ograniczonej gwarancji Intellinet Network Solutions.

Ogólne zasady bezpieczeństwa

- **Przeznaczenie:** Tylko do użytku wewnętrznego, w środowiskach niekrytycznych.
- **Trzymać z dala od dzieci:** Urządzenie nie jest zabawką.
- **Ryzyko uduszenia:** Opakowania trzymać z dala od dzieci i niemowląt.

Bezpieczeństwo elektryczne

- **Zasilacz:** Używaj tylko oryginalnego lub zatwierdzonego zasilacza. Inny sprzęt uniważnia gwarancję.

- **Wilgoć i ciepło:** Chronić przed wodą, wilgocią i źródłami ciepła. Nie suszyć ciepłem.
 - **Porty:** Nie wkładać obcych przedmiotów. Porty utrzymywać w suchości i czystości. Odłączyć przed czyszczeniem.
- Obsługa i konserwacja**
- **Czyszczenie:** Odłączyć przed czyszczeniem. Używaj suchej szmatki. Nie zanurzać
 - **Uszkodzenia:** W przypadku uszkodzeń lub kontaktu z wodą – przerwać użytkowanie i skontaktować się z pomocą techniczną.
 - **Naprawy:** Nie rozkręcaj urządzenia. Nieautoryzowane naprawy są niebezpieczne i unieważniają gwarancję.
- Środowisko i zdrowie**
- **Materiały wybuchowe:** Nie używać w pobliżu materiałów łatwopalnych.
 - **Ciepło:** Urządzenie może się nagrzewać. Zapewnij wentylację.
 - **Urządzenia medyczne:** Może zakłócać ich działanie. Wyłączyć w przypadku problemów.
 - **Podrażnienia skóry:** Materiały mogą powodować podrażnienia. W razie objawów przerwać użycie.

ITALIANO

Leggere e conservare queste istruzioni. Il mancato rispetto può causare lesioni, scosse elettriche, incendi o danni al dispositivo. L'uso implica l'accettazione della garanzia limitata di Intellinet Network Solutions.

Sicurezza generale

- **Uso previsto:** Solo per uso interno e non critico.

WARRANTY INFORMATION • GARANTIEINFORMATIONEN • GARANTÍA • GARANTIE • GWARANCJI • GARANZIA intellinet-network.com

EN MÉXICO: Póliza de Garantía Intellinet Network Solutions — Datos del importador y responsable ante el consumidor IC Intracom México, S.A.P.I. de C.V. • Av. Interceptor Poniente # 73, Col. Parque Industrial La Joya, Cuautitlán Izcalli, Estado de México, C.P. 54730, México. • Tel. (55) 1500-4500 • La presente garantía cubre los siguientes productos contra cualquier defecto de fabricación en sus materiales y mano de obra. A. Garantizamos productos de limpieza, aire comprimido y consumibles, por 60 días a partir de la fecha de entrega, o por el tiempo en que se agote totalmente su contenido por su propia función de uso, lo que suceda primero. B. Garantizamos los productos con partes móviles por 3 años. C. Garantizamos los demás productos por 5 años (productos sin partes móviles), bajo las siguientes condiciones: 1) Todos los productos a que se refiere esta garantía, ampara su cambio físico, sin ningún cargo para el consumidor. 2) El comercializador no tiene talleres de servicio, debido a que los productos que se garantizan no cuentan con reparaciones, ni refacciones, ya que su garantía es de cambio físico. 3) La garantía cubre exclusivamente aquellas partes, equipos o sub-ensambles que hayan sido instaladas de fábrica y no incluye en ningún caso el equipo adicional o cualesquiera que hayan sido adicionados al mismo por el usuario o distribuidor. • Para hacer efectiva esta garantía bastará con presentar el producto al distribuidor en el domicilio donde fue adquirido o en el domicilio de IC Intracom México, S.A.P.I. de C.V., junto con los accesorios contenidos en su empaque, acompañado de su póliza debidamente llenada y sellada por la casa vendedora (indispensable el sello y fecha de compra) donde lo adquirió, o bien, la factura o ticket de compra original donde se mencione claramente el modelo, número de serie (cuando aplique) y fecha de adquisición. Esta garantía no es válida en los siguientes casos: Si el producto se hubiese utilizado en condiciones distintas a las normales; si el producto no ha sido operado conforme a los instructivos de uso; o si el producto ha sido alterado o tratado de ser reparado por el consumidor o terceras personas.

REGULATORY STATEMENTS

FCC Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of Federal Communications Commission (FCC) Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: reorient or relocate the receiving antenna; increase the separation between the equipment and the receiver; connect the equipment to an outlet on a circuit different from the receiver; or consult the dealer or an experienced radio/TV technician for help.

CE

- ENGLISH :** This device complies with the requirements of CE 2014/30/EU (UKCA Electromagnetic Compatibility Regulations 2016) and / or 2014/35/EU (UKCA Electrical Equipment [Safety] Regulations 2016). The Declaration of Conformity for is available at:
- DEUTSCH :** Dieses Gerät entspricht der CE 2014/30/EU und / oder 2014/35/EU. Die Konformitätserklärung für dieses Produkt finden Sie unter:
- ESPAÑOL :** Este dispositivo cumple con los requerimientos de CE 2014/30/EU y / o 2014/35/EU. La declaración de conformidad esta disponible en:
- FRANÇAIS :** Cet appareil satisfait aux exigences de CE 2014/30/EU et / ou 2014/35/EU. La Déclaration de Conformité est disponible à:
- POLSKI :** Urządzenie spełnia wymagania CE 2014/30/EU i / lub 2014/35/EU. Deklaracja zgodności dostępna jest na stronie internetowej producenta:
- ITALIANO :** Questo dispositivo è conforme alla CE 2014/30/EU e / o 2014/35/EU. La dichiarazione di conformità è disponibile al:

support.intellinet-network.com/barcode/716673

support.intellinet-network.com/barcode/716680

All trademarks and trade names are the property of their respective owners.

Alle Marken und Markennamen sind Eigentum Ihrer jeweiligen Inhaber.

Todas las marcas y nombres comerciales son propiedad de sus respectivos dueños.

Toutes les marques et noms commerciaux sont la propriété de leurs propriétaires respectifs.

Wszystkie znaki towarowe i nazwy handlowe należą do ich właścicieli.

Tutti i marchi registrati e le denominazioni commerciali sono di proprietà dei loro rispettivi proprietari.



intellinet-network.com



North America

IC Intracom America
550 Commerce Blvd.
Oldsmar, FL 34677, USA

Asia & Africa

IC Intracom Asia
4-F, No. 77, Sec. 1, Xintai 5th Rd.
Xizhi Dist., New Taipei City 221, Taiwan

Europe

IC Intracom Europe
Löhbacher Str. 7, D-58553
Halver, Germany

All trademarks and trade names are the property of their respective owners. © IC Intracom. All rights reserved. Intellinet Network Solutions is a trademark of IC Intracom, registered in the U.S. and other countries.