

UK 30-Bay AC Charging Cart Instructions

Models 181174 v2, 181433 v2



Important: Read before use.




Shown: Black model (#181174)

For additional benefits:

Scan to register your product warranty

or visit: register.manhattanproducts.com/r/181174
register.manhattanproducts.com/r/181433

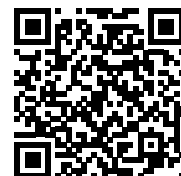

181174 (Black)



181433 (White)



*Actual product appearance may vary

For specifications, please visit manhattanproducts.com. Register your product at register.manhattanproducts.com/r/181174, register.manhattanproducts.com/r/181433 or scan the QR code on the cover.

Using the Lock

The Default Combination and Turning the Wheels

The default combination is 0-0-0-0 (A-1). The wheels are only able to be turned to the left

To Unlock

Key Method: Turn the key in the lock as shown (A-2).

Combination Method: Turn the wheels to the correct code.

Once the cabinet is unlocked, pull up from the bottom of the handle and turn it 90° to the right; then open the door.

To Lock

Close the door, turn the handle 90° to the left and push it back into its closed state. Once the cabinet is secure:

Key Method: Turn the key back 90° and remove it from the lock.

Combination Method: Scramble the combination wheels.

To Set a New Combination (B)

Remember to record and safely store the new combination after you set it. This is a mechanical lock, which cannot be reset directly if the code is forgotten.

- 1 Make sure the Combination button on the back of the handle is in the Normal position.
- 2 Push the Combination button to the Set position.
- 3 Turn the combination wheels to your desired code. **NOTE: make sure to record and securely store the new combination.**
- 4 Once the new code is set, push the Combination button back to the Normal position.

To Find the Forgotten Combination

- 1 Remove the combination wheel box from the handle by unfastening the screws that secure it in place (C-1).
- 2 Turn the combination wheels to the left to find the cutouts on the adjacent smaller wheels. The number next to the cutout is the correct number in the combination (C-2).
- 3 Once the correct combination is noted and stored securely, re-fasten the combination wheel box to the handle using the screws.

Setup (D)

- 1 Unlock unit door(s) and open them.
- 2 To fit a larger device, remove an appropriate slot divider. Push the divider to the back of the cabinet and lift it up. Replace a divider by placing it into the slot and pulling it toward you.
- 3 Connect devices to power outlets with appropriate cables. Secure cables with wire clips on dividers.
 - Connect power cables to power outlets, feeding cables through holes on back panel.
 - Load devices into the bays.
 - Connect cables to devices.

Charging (E)

- 1 Open the compartment and take the power cord
- 2 Connect the power cord to the unit and a power outlet
- 3 Push the button to turn on the power supply and start charging. te cables. Secure cables with wire clips on dividers.



WASTE ELECTRICAL & ELECTRONIC EQUIPMENT

Disposal of Electric Equipment (applicable in the E.U. and other countries with separate collection systems)

 This symbol on the product or its packaging means that this product must not be treated as unsorted household waste. In accordance with EU Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), this electrical product must be disposed of in accordance with the user's local regulations for electrical or electronic waste. Please dispose of this product by returning it to your local point of sale or recycling pickup point in your municipality.

WARRANTY AT

manhattanproducts.com

GENERAL PRODUCT SAFETY INSTRUCTIONS

- This product is intended for indoor use only. Do not expose to rain, moisture, or excessive humidity.
- Keep away from heat sources, open flames, and direct sunlight.
- Use the brakes on the casters to prevent unintentional rolling.
- Only use the included power cable or an equivalent rated C13 to AC plug cable.
- Do not use with daisy-chained power strips or extension cords.
- Unplug the cart from the mains before cleaning or performing any maintenance. Clean only with a dry or slightly damp cloth. Do not use chemicals, sprays, or water.
- Ensure the ventilation slots are not obstructed. Proper airflow is essential for cooling and safe operation.
- Regularly check power cables, locks, and casters for signs of wear or damage.

REGULATORY STATEMENTS

CE / UKCA

THIS device complies with the requirements of CE 2014/30/EU (UKCA Electromagnetic Compatibility Regulations 2016) and / or 2014/35/EU (UKCA Electrical Equipment [Safety] Regulations 2016). The Declaration of Conformity for is available at:

support.manhattanproducts.com/barcode/181174

support.manhattanproducts.com/barcode/181433

POWER INFORMATION	
	181174 / 181433
Input	220-240 VAC, 50-60 Hz, 10.0 A
Power (max.)	2300.0 W



North & South America
IC Intracom Americas
550 Commerce Blvd.
Oldsmar, FL 34677, USA

Asia & Africa
IC Intracom Asia
4-F, No. 77, Sec. 1, Xintai 5th Rd.
Xizhi Dist., New Taipei City 221, Taiwan

Europe
IC Intracom Europe
Löhbacher Str. 7, D-58553
Halver, Germany

All trademarks and trade names are the property of their respective owners.

© IC Intracom. All rights reserved. Manhattan is a trademark of IC Intracom, registered in the U.S. and other countries.



manhattanproducts.com

