











 


 

 
 






RoboPlay Pack Product Parts

Name	Picture	Name	Picture
Linkbot-I (Joints 1 and 3 can move, Joint 2 is fixed)	 1	Snap Connector Cap	 8
36" USB Cable	 1	Circle Connector	 2
Snap Connector	 30	Screwdriver*	 1
Gripper Pair	 2	Hacky Sack	 1
Bridge Connector	 4	A pack of screws and nuts	 1
L Connector	 4	Cube Connector	 8
3" Rectangle Connector	 4	Triangle Connector	 4
4" Rectangle Connector	 4	Link Block Connector	 4
5" Rectangle Connector	 4	Link Blocks	 10 of each color
T Connector	 4	#6-32 X 5/16" Screw	 25
U Connector	 2	8"x10" Resealable Bag	 1
Small Ball Caster	 2		

*Warning: Screwdrivers are to be used by students in grades 3 and above under the supervision of instructors.