

# Tea Pot Use & Care

Please read all instructions before using your Ceramic Tea Pot.

We hope that you enjoy your new Chantal tea pot. While doing so please remember the following

## Important Warnings and Instructions:

Before first use, wash the inside and outside with hot soapy water, rinse and dry.

- Do not use on stove.
- Boil water in separate pot (like a Chantal Teakettle).
- Always use a potholder when handling tea pot or tea pot with infuser.
- Allow boiling water to settle for 20 seconds before handling or pouring.
- When placing on tables after heating or washing please use trivets to protect from heat and/or moisture.
- Do not use steel wool, scouring pads, oven cleaners, bleach or strong abrasive cleaners.
- The tea pot is microwave and dishwasher safe.
- We recommend using Chantal Enamel and Ceramic Cleaner to make your pot "shine".
- **DO NOT** place Chantal tea pots with stainless infusers in the microwave



## Helpful Hint:

We recommend using filtered water - its tastes better and will allow the full flavor of the tea to be enjoyed.

For more helpful information about your Chantal tea pot refer to our website at [www.chantal.com](http://www.chantal.com) or you may call customer service at 800-365-4354.

5425 North Sam Houston Parkway West • Houston, Texas 77086  
Ph: 281-587-7800 • Fax: 281-444-1253 • [www.chantal.com](http://www.chantal.com)  
© 2021 Chantal Corp. • All Rights Reserved.

This information comprises intellectual property of Lentrade, Inc. d/b/a Chantal Corp.  
The unauthorized use or reproduction of this content without the express written consent of Chantal is prohibited.

 **chantal**<sup>®</sup>  
0421\_Ceramic Teapot U&C\_WEB