

Usage and Maintenance Instructions

Daytona XLR Mobility Scooter - MS03038




Daytona XLR

Product Code: MS03038

Thank you for purchasing your CareCo Daytona Scooter. We are delighted you have chosen CareCo (UK) Ltd for your mobility needs.

Standard Packing List:

- 1 Owner's Manual
- 2 Keys
- 2 x 50 amp Batteries
- Battery Charger
- 1Basket
- 2 Armrests
- 1Headrest
- 2 Mirrors
- 1 Scooter Power Unit

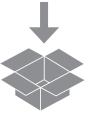

2

Disclaimer

We ask that you read this manual completely before operating your new Daytona Scooter.

CareCo (UK) Ltd cannot be held responsible for any damage or injury incurred due to improper or unsafe use of the CareCo Daytona Scooter.

CareCo (UK) Ltd specifically disclaims responsibility for any bodily injury or property damage that may occur during any use that does not comply with applicable laws

Congratulations on the purchase of your new Daytona Scooter. The Daytona combines cutting edge technology with attractive design and practicality which is highly functional in today's world. We at CareCo (UK) Ltd know that you have chosen a scooter that will give you years of dependable operation and will also enhance the quality of your life by providing you with the mobility to experience an active daily lifestyle.

Even though your new Daytona Scooter is both user-friendly and designed for maximum manoeuvrability in the tightest spaces, we ask that you please read, understand and follow all of the instructions and suggestions in this manual before you operate your scooter for the first time. The safe use of your new scooter is very important to us.

If you feel that you do not understand the instructions and suggestions presented in this Owner's Manual, or if, for any reason, you do not feel capable of performing the activities necessary to assemble, disassemble, operate or maintain your Daytona Scooter, please contact CareCo Customer Services on 0845 611 8022.

CareCo (UK) Ltd cannot be held responsible for personal injury or property damage resulting from the unsafe or the improper use of any of our broad range of health and personal mobility products. Also, CareCo (UK) Ltd cannot be held responsible for personal injury or property damage resulting from attempts to follow instructions, suggestions, and guidelines presented in this Owner's Manual.

Our Research and Development Department, our Quality Control Department, and our Engineering Departments have used the latest product specifications and the latest product design information to manufacture your Daytona Scooter. CareCo (UK) Ltd reserves the right to implement changes into our product lines when those changes become desirable or necessary. If such changes are implemented into our product line, there may be minor differences between the product you purchased and the illustrations and instructions in this Owner's Manual.

We at CareCo (UK) Ltd would appreciate hearing about the dependability of your Daytona Scooter and about the convenience of mobility it has provided for you. We would also appreciate hearing about the service you received from our Company.

CareCo (UK) Ltd. Hubert Road Brentwood Essex

CM14 4JE

Customer Services Phone:

0845 611 8022

Fax:

01277 204245

www.careco.co.uk

For more information about our products and services, or to send us your comments, please visit our website at www.careco.co.uk or email: cs@careco.co.uk



Contents

- 1. Preface and introduction
- 2. Safety notice
 - 2.1 Before driving
 - 2.2 While driving
 - 2.3 Labelling
- 3. Parts information Parts description
- 4. Operation
 - 4.1 Control panel
 - 4.2 How to operate your scooter
- 5. Battery charging and care
 - 5.1 Charging the battery
 - 5.2 Battery 13
- 6. Inspection and maintenance
 - 6.1 Inspection
 - 6.2 Regular checking record
 - 6.3 Battery, fuse and tyres
 - 6.4 Storage
 - 6.5 Manually moving the scooter
- 7. Trouble shooting and specification
- 8. Warranty

1. Preface and introduction

Please carefully read this owner's manual before using your Daytona Scooter. Improper use of the vehicle could result in injury and/or traffic accidents.

This owner's manual includes operating instructions for every aspect of the scooter including assembly instructions.

• The symbols used in this manual are explained below. Read especially the notes marked with these symbols:-

Warning	*	Improper usage could result in serious injury or death.
Attention	F	Improper usage could lead to injury and/or damage to your scooter.
Suggestion		Follow these instructions to keep your vehicle in a good operating order.

- This manual includes a copy of the repair and maintenance record chart and warranty information. Please keep it in a safe place or in the scooter.
- If someone else uses the scooter, please make sure that you provide them with the instruction manual for their consideration.
- As designs change some illustrations and pictures in the manual may not correspond to the vehicle that you purchased. We reserve the right to make design modifications.

Our scooters have been designed and manufactured to provide a comfortable and secure, yet affordable, solution for some mobility requirements.

Suggestion

To maximise the efficiency and service life of your batteries, please fully charge before their first use.

2. Safety notice

2.1 Before driving

The user needs to be familiar with the usage and operation of this vehicle before driving. Therefore, please always keep the following safety notices in mind:-

The same traffic rules apply to the use of this vehicle as apply to pedestrians

For your safety, please therefore follow the rules that apply to pedestrians.

- Ride on the pavement, single carriage roads, or pedestrian areas only. Never ride on motorways or dual carriageways.
- Please do not drive your scooter after consuming alcohol or when you are tired.
- Please be careful when driving your scooter in low light. It has not been designed for use at night.
- Be extremely cautious when driving your scooter on busy streets or in shopping malls.

Practice operating your vehicle

Before using the scooter in busy or potentially dangerous areas, familiarise yourself with the operation of your scooter. Practice in a wide and open area such as a park. In order to avoid accidents with your scooter whilst driving, please take care when accelerating, stopping, turning, reversing, and travelling up and down ramps.

- Turn the speed dial to a low speed position for your initial practice.
- Be sure someone accompanies you for safety when driving on the roads for the first time.
- Only use higher speed settings when you are confident that you can easily operate and control your scooter.

The scooter is only to be used by one person at a time

Do not carry passengers on your scooter (including children)

Do not use this vehicle to carry or haul goods

- For the maximum weight that can be carried, please refer to 'MAX USER WEIGHT' in '7. SPECIFICATION'
- Maximum loading weight for the basket is 3 kg.

2.2 While driving

Do not alight from the vehicle whilst it is moving

- Such action may cause you to lose balance and risk injury from falling.
- Ensure that your clothes do not tangle in the wheels.

Do not use your scooter under any of the following conditions:-

- On roads with heavy traffic or roads that are muddy, gravelly, bumpy, narrow, snowed over, icy, or canal tow
 paths not guarded by a fence or hedge. Keep away from places where the wheels are likely to get stuck.
- Do not drive at night or in rain, snow, fog or strong winds.
- Do not drive your vehicle in an 'S' pattern or make erratic turns.
- Do not take the scooter onto escalators.
 - Under no circumstances should the scooter be used as a seat in another vehicle (cars, buses, trains, etc).

Electrical equipment

- Do not use a mobile phone or other wireless communication devices whilst driving.
- Always switch off the scooter and remove the ignition key before using a mobile phone.
- Do not charge a mobile phone or any other electrical device from your scooter's battery.

Automatic Power Shut Down

In order to avoid accidentally draining the batteries, your scooter is equipped with an automatic power shut down facility. If the scooter is left switched on, after remaining undisturbed for a period of 30 minutes, it will automatically turn off. When this happens, simply switch your scooter off and back on and it will be ready to use once again.

Ramps, inclines and descents

- Do not drive onto ramps that are greater than the specified gradient. Refer to the section entitled 'CLIMBING ANGLES' in '7. SPECIFICATION'.
- Always use a low speed setting when ascending or descending a gradient.
- Do not drive on roads with uneven surfaces or potholes.
- Slow down when driving uphill.
- Do not make sudden turns when driving on gravel roads or ramps.
- Always lean forward when climbing a steep hill.

Starting and driving

- 1. Make sure the seat is installed properly.
- 2. Make sure the tiller has been secured properly.
- 3. Fold down the armrests so you can rest your arms on them.
- 4. Turn the power switch to 'ON'. If necessary, turn on the headlights.
- 5. Check the battery indicator to see whether there is enough power for your journey. If you have any doubt about the remaining power, please recharge the batteries before departure.
- 6. Set the speed dial to a position you feel safe and comfortable with.
- 7. Check the forward / reverse speed lever works correctly.
- 8. Make sure the electromagnetic brake works correctly.
- 9. Before driving, check your way is clear. Engage the 4 mph switch if you are driving on the pavement.

Warning!

- Do not set in the freewheel mode when driving on a gradient.
- Always re-engage the anti-freewheel device before use. Failure to do so may result in injury.
- To protect your safety, the power will automatically cut off and the electromagnetic brake system will activate while you are driving down a steep slope. This will limit the speed to a safe level. Turn the power on again to re-start your scooter.

Maximum User Weight Limit

Refer to section entitled 'MAX. USER WEIGHT' in '7. SPECIFICATION'. Overloading past the weight limit may lead to damage of your scooter or cause it to malfunction which could endanger your safety. The warranty does not cover this type of damage.

Attention

- 1. Do not push both RH & LH sides of the speed control lever simultaneously control of your scooter will be affected
- 2. Do not turn the power switch to OFF while driving as this will lead to an emergency stop and possible risk of accident and injury.
- 3. Do not set to the highest speeds while driving indoors.
- 4. Do not adjust the speed dial while driving a sudden change in speed may cause danger to you and others; and may cause damage to your scooter.
- 5. Do not place magnetic devices near the area of the operation handle as this could affect the safe operation of your scooter.
- 6. Do be careful whilst driving in heavy traffic or crowded areas.
- 7. When reversing the vehicle, beware of people or objects behind you.

Stopping

- 1. Release the speed control lever completely. The vehicle will naturally brake and stop.
- 2. Turn the power switch to OFF. Remove the key.

Driving on the pavement

- Ensure the speed limit switch is set to the slowest setting when using the scooter on the pavement.
- This will limit the scooter to a maximum speed of 4 mph. It is an offence to travel at more than 4 mph on the pavement.
- The limit switch can be set to the fastest setting for use on the road or on private ground.

2.3 Labelling

Please carefully read all labels on the scooter before driving it. For your future reference, do not remove them.

Never lift the scooter up by the front or rear shroud

Warning

Do not operate the scooter unless the handle bar is in a lock position.

Do not lean against or pull forward on the handle bar while mounting or dismounting from the scooter. Serious harm or injury can occur.

The manufacturer cannot accept responsibility for any personal injury or property damage which may occur as a result of improper use of its products.

Warning:

Radio waves may affect scooter control.

Radio wave sources, such as radio stations, amateur radio (HAM) transmitters, two-way radios, and mobile phones, can affect powered motorised scooters. Following the warning listed below should reduce the chance of unintended brake release or powered scooter movement which could result in serious injury.

- 1. Do not turn ON hand-held personal communication devices, such as citizens band (CB) radios and mobile phones, while the powered scooter is turned ON.
- 2. Be aware of nearby transmitters, such as radio or TV stations, and try to avoid coming close to them.
- 3. If unintended movement or brake release occurs, turn the powered scooter OFF as soon as it is safe.
- 4. Be aware that adding accessories or components, or modifying the powered scooter, may make it more susceptible to interference from radio wave sources. (Note: There is no easy way to evaluate their effect on powered scooter.)
- 5. Report all incidents of unintended movement or brake release to the powered scooter manufacturer, and note whether there is a radio wave source nearby.



3. Parts information

3.1 Parts description

- 1. Indicator Lamp
- 4. Tiller Adjust Lever
- 7. Side Reflector
- 10. Rear Reflector
- 2. Charger Socket Cover
- 5. Head Lamp
- 8. Rear Lamp
- 11. Fold up and Width adjustable armrests
- 3. Basket Bracket
- 6. Seat
- 9. Anti-tip Wheel
- 12. Rear Pocket



Daytona XLR Mobility Scooter - MS03038

10

4. Operation

4.1 Control panel

- 1. Speed dial
- 2. Horn button
- 3. Indicator lamp switch
- 4. Head light / rear light button
- 5. Battery indicator
- 6. Emergency lamp switch
- 7. Indoor / outdoor switch

4.2 How to operate your scooter

Power switch

Turn the key to power on or off
On: power is turned on
Off: power is turned off

Speed dial

Turn the speed dial to determine the maximum Speed of the scooter. Turn the dial clockwise to Increase the speed setting and turn the dial Anticlockwise to decrease the speed setting.

Forward, reverse, and braking

- Push the speed control lever forwards with your right thumb and the vehicle will move forward.
- Push the speed control lever forwards with your left thumb and the vehicle will move backward.
- The horn will beep when the vehicle is in reverse.
- If the speed control lever is released while either going forward or reverse, the electromagnetic brake in the motor will be activated and the vehicle will stop.

Indicator lamp switch


- The light will flash and the indicator will make a beeping sound when turning the switch to the left or right.
- Return the switch back to the middle, the indicator will be cancelled.

Horn Button

Press the horn button to sound the horn. Release the button to stop the horn.

Light Button

- Push the light button to switch the front and rear lights on.
- Push the button again to turn the lights off.

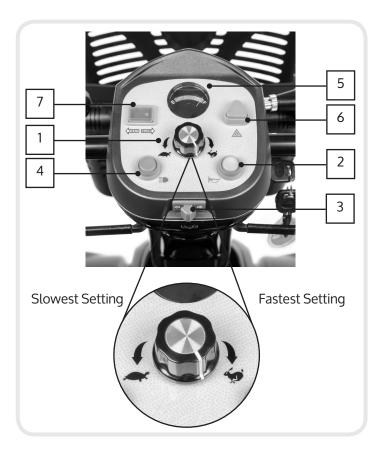




Battery Indicator

The battery indicator on the tiller console uses a colour code to indicate the approximate power remaining in your batteries. Green indicates (40-100%) capacity, yellow a low charge (10-30%), and red indicates that an immediate recharge is necessary.

• The remaining power shown on the battery indicator will vary according to driving time and how you drive. Repeated starting, stopping and climbing will consume the power more quickly.

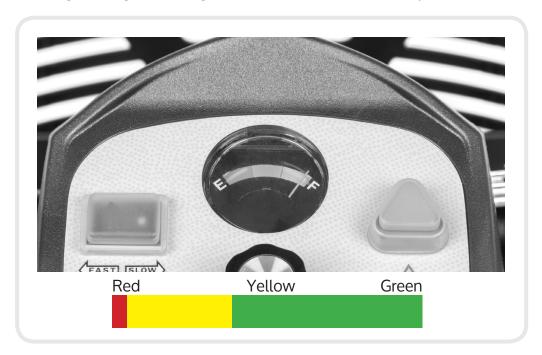

Suggestion

- 1. You should recharge the batteries after each time the vehicle is used to ensure maximum range. The batteries should be charged at least twice a week even if the scooter is not used.
- 2. After charging or replacing the batteries, drive the vehicle for 2-3 minutes to make sure the battery capacity is sufficient.
- 3. In winter, the batteries may respond more slowly and the battery range may be reduced.
- 4. When driving on a slope or hill, the battery indicator light might move up and down. This is normal and there is no need for concern.
- 5. Even if the batteries are used properly, their capacity will reduce in time and this will result in reduced range compared to brand new batteries. When the batteries' range is approximately 50% of that when new, it is time for replacements. Please contact CareCo regarding replacement batteries. If you continue to use the old batteries, the performance of your scooter may be affected.
- 6. The battery range will be reduced when frequently driving uphill or on rough ground, as this leads to greater consumption of power.
- 7. The batteries have a six-month warranty covering manufacturing defects. This warranty does not cover faults due to incorrect battery recharging.

Braking

Electro-magnetic brake: Release the speed control lever completely - the electromagnetic brake will be activated automatically and the scooter will stop.

Warning

When on a slope NEVER switch the vehicle to the freewheel mode. The electromagnetic brakes will NOT be applied and this may result in injury.

Seat

- The seat can be turned to 45 degrees or 90 degrees.
- Pull the seat adjustment lever forward and swivel seat.
- Release the lever, and then continue swivelling the seat until it locks in position.

Attention

- Return the seat to the forward position before driving.
- Ensure the speed switch is set to the slowest setting when using the scooter on the pavement it is an offence to travel faster than 4mph on the pavement.

How to adjust the width between armrests

Loosen the knobs at the back of the seat frame first, then adjust the armrest width by sliding the armrest. Once satisfied with the width, tighten the knob.

How to re-position the seat

The seat can be moved backward and forward for a comfortable driving position. To slide the seat, pull the lever at the front of the seat and reposition as required.





Tiller Adjustment


The tiller can be adjusted to suit each driver:-

- 1. Loosen the lever to adjust the tiller to the required position.
- 2. Then tighten the lever to secure the tiller.



Main Circuit Breaker (Reset Button)

When the voltage in your scooter's batteries becomes low or the scooter is heavily strained because of excessive loads or steep inclines, the main circuit breaker may trip to protect the motor and electronics from damage.

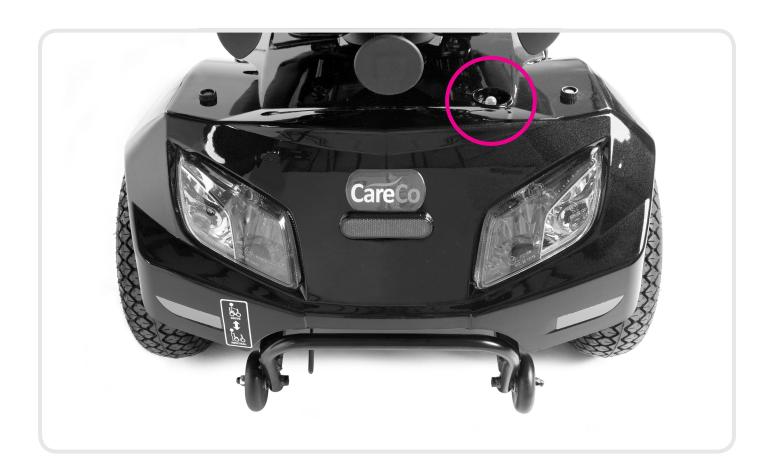

14

5. Battery charging and care

5.1 Charging the batteries

Follow the procedure below step by step:

- 1. Turn the power switch to off
- 2. Connect the charger's power cord into the power outlet.
- 3. Open the charging socket cap on the scooter's tiller. Then connect the charger's round plug to the charging socket.
- 4. Turn on the switch on the charger.
- 5. Both the charger's red and orange leds will be lit when beginning to charge. The charging duration is about 8 hours. To ensure optimum performance a 12-14 hour charge is recommended. However, we do not recommend a charging of more than 24 consecutive hours.
- 6. Both the charger's LEDs will be lit during the charging process. The orange LED will turn green after 1-4 hours but continue to charge for between 8 14 hours.
- 7. Turn off the charger; disconnect the power cord and the round plug from charger socket on the scooter.

Warning

- The fan inside the charger will be activated accordingly when you turn on the charger. If the fan does not work when connected to the charger or the green light is not showing, DO NOT use this charger. The charger may overheat and cause a fire as a result.
- There is a red LED present on the charger to illustrate operation. If this LED does not illuminate the charger is defective please contact CareCo Customer Service on 0845 611 8022 or email: cs@careco.co.uk

Attention

- While gripping or folding the handle bar, beware of trapping fingers or hands in the handle area.
- When returning the battery pack to the battery pack cavity of the shroud, again, beware of trapping fingers or hands.

A flap at the end of battery pack can be opened to place your bag (not over 3 kg).

Warning

- 1. Keep away from flammable objects while charging due to danger of fire or explosion of batteries.
- 2. Do not smoke while charging as the batteries may release hydrogen gas. Always charge your batteries in a well-ventilated area.
- 3. Never connect or disconnect the plug or cord with wet hands while charging. Do not connect or disconnect the plug or cord when they are wet as this may cause an electric shock.

NOTE: The immovable function will be activated when your scooter is in charging status; your scooter will not move.



Attention - Please follow the rules below to avoid accidents while charging:-

- 1. Please use the CareCo charger only, and recharge the batteries to their full capacity every time You may damage the batteries and scooter if you use a charger which is not to the correct specification.
- 2. Charge in a well ventilated area not directly exposed to sunlight. Do not charge in areas that are humid or exposed to rain or damp conditions.
- 3. Do not charge in temperatures less than 10°C or higher than 50°C as the charger may not work well and the batteries may become damaged.

5.2 Batteries

- Do not expose the batteries to temperatures below 10°C or above 50°C when charging or storing the vehicle. Temperatures below or above the suggested temperature range can cause the batteries either to freeze or over heat. This will damage the batteries and shorten their life.
- These batteries are maintenance free and there is no need to refill with water.
- You are required to charge the batteries on a regular basis. Even if the scooter is not used, you should charge the batteries at least twice a week.
- The batteries carry a six-month manufacturer's warranty. This warranty only covers issues relating to manufacturing faults, and not faults relating to failure to charge the batteries as instructed above.

Suggestion – How to maximise your batteries' efficiency and service life

- 1. Fully recharge your new batteries before their first use.
- 2. Be sure to fully charge the batteries every time. The battery life will be seriously shortened if the batteries are repeatedly used without being fully charged.
- 3. Always complete the charging until the orange LED light turns green. NEVER stop charging before it is complete.
- 4. Keep your batteries fully charged whenever possible.
- 5. If you do not use your scooter for a long time, it should be charged at least twice a week to keep the battery in a fully usable condition.
- 6. The ambient temperature will affect charging time. Charging time will be longer in the winter.
- 7. After charging, do not leave the charger socket plugged in to the scooter, as this will cause a power drain on the scooter and temporarily reduce its range.

Cleaning the battery

If the battery is contaminated by water, battery acid, dust or other substances, it will discharge quickly. The battery supplied with the scooter is sealed and as such is maintenance free with no risk of battery leakage. Please follow the steps below to clean the battery:-

- 1. Turn the scooter power switch to OFF.
- 2. Remove the seat and dust cover.
- 3. Remove the shroud and unplug the terminal of the taillight and signal lights.
- 4. Use a clean cloth to wipe off the soiled area.
- 5. Take out the battery.
- 6. Clean the battery with a clean cloth. If the terminal is covered by white powder, wipe clean using warm water.

Warning

- 1. The wiring system and charger are placed correctly in the battery pack during assembly by the manufacturer. Do not attempt to re-locate the wiring system by yourself. The improper layout of the wiring system may result in the wires being pinched by the battery box, which could result in an electronic system failure.
- 2. Be sure the battery wires are connected to their correct battery terminal.

Suggestions

If necessary, ask for help from CareCo for advice about maintaining and replacing the battery. Contact Customer Services on 0845 611 8022 or email: cs@careco.co.uk

Suggestions

- 1. Make sure the terminals are installed properly and replace the cover.
- 2. Do not use the battery to charge telecom equipment or other items.
- 3. Battery efficiency will vary with outside conditions; the driving distances will be shorter in the winter. If the vehicle is not used for a long time, please charge the battery at least once a week.
- 4. Replace both batteries together.



6. Inspection and maintenance

6.1 Inspection

- Clean the scooter with a damp cloth and dust down approximately once a week to preserve the appearance of the scooter.
- Adjust the tiller height and return to the original position and swivel the seat once a week to ensure the parts adjust and remove smoothly and easily when required.
- Check for signs of wear and tear on the tyres and the upholstery on a regular basis.
- For optimum performance and to increase the lifespan of your scooter, it is recommended that you have your scooter serviced once a year.

6.2 Regular checking record

To make sure your scooter is correctly serviced, contact CareCo regarding regular maintenance checks. This should be at intervals of six months following an initial inspection after one month. These checks may be chargeable.

YEAR	1	2	3	4	YEAR	1	2	3	4
Service Dates			_ 3	4	Service Dates			3	4
Controller					Upholstery				
On/ Off Switch					Seat				
Control Lever					Back				
					Armrests				
Braking Boint					Electrics				
Recharge Point									
Batteries					Connections Condition				
Levels					Lights				
Connections					Test Run				
Discharge Test					Forwards				
Wheels and Tyres	ĺ				Reverse				
Wear					Emergency Stop				
Pressure					Left Turn				
Bearings					Right Turn				
Wheel Nuts					Slope Test				
Motors					Over Obstacles				
Wirring					List Items repaired				
Noise									
Connections									
Brake									
Chasis									
Condition									
Steering									

6.3 Battery, fuse and tyres

Battery

Refer to the section entitled '5.2 Battery' in '5. Battery charging and care'.

Fuse

If the battery charger is turned on and no LEDs are lit, check the fuse.

Suggestions

Ask for help from CareCo to inspect or replace the fuse, as the tiller shroud has to be removed before the fuse can be replaced. Contact Customer Services on 0845 611 8022 or email: cs@careco.co.uk

Tyres

The condition of the tyres depends on how you drive and use your scooter.

- Inspecting tyre tread
- Please check the tread groove regularly. Replace the tyres when the tread groove is less than 0.5 mm.

Attention

- 1. When tread depth is below 0.5mm the scooter may not grip well making braking distances longer. Therefore replace the tyres as soon as they are found to have insufficient tread depth.
- 2. The tyre pressure should be kept at about 26 PSI (approx. 1.8KG/cm) for the best ride and handling.

Attention

When carrying out maintenance of your vehicle, please turn the power switch to OFF and remove the charger cords.

Suggestions

- Do not splash water directly onto your scooter when washing as this could lead to malfunction of the system electrics.
- Do not use petrol or solvents as these may damage the shrouds.
- Do not use wax.

6.4 Storage

Make sure the vehicle is stored as follows:-

- The seat is set in the 'Forward' position
- The Power switch is turned to 'OFF'



Suggestions

Store your Daytona scooter out of direct sunlight, rain and damp conditions. When storing for a length of time, please charge the battery to full power and then disconnect the battery terminal. For details contact CareCo Customer Services on 0845 611 8022 or email: cs@careco.co.uk

6.3 Manually moving the scooter

- Turn the power switch OFF before moving.
- Lift the scooter by the chassis, not by the bumpers. Lifting the scooter by the bumpers could cause damage or injury.
- For your safety, always ask for help. 2 or 3 persons will be needed when moving or lifting the vehicle.

20

7. Trouble shooting and specification

Symptom	Remedy
The scooter will not switch on:	Try recharging the batteries. Check the fuse and circuit breaker in the scooter.
The scooter switches on, but the scooter will not move:	Ensure there is enough power in the batteries; if not, recharge. Ensure the freewheel lever is engaged in the 'DRIVE' position.
The scooter appears slow:	Check the battery power level and recharge. Check the speed dial is not set to slow.
The seat turns when in operation:	Slowly rotate the seat until it drops into place and is secure.
The handlebar appears loose:	Tighten the height adjustment handle to secure the handlebar.
Horn sounds involuntarily:	Ensure that the wigwag paddle is released. Switch the scooter off and on. Recharge the batteries. If problem persists contact CareCo.

Fault Code Diagnostics

The LED lights will 'blink' if there is a problem with your Daytona scooter. The list below will assist you in identifying any possible malfunction.



Fault Codes	Description	Meaning		
1	Low Battery Voltage	The battery needs charging or there is a bad connection to the battery. Check the connections to the battery, if the connections are good, try charging the battery.		
2	Motor Disconnected	There is a bad connection to the motor. Check all connections between the motor and the controller.		
3	Motor Wiring Trip	The motor has a short circuit to a battery connection. Contact your service agent.		
4	Park brake lever not in right position	The freewheel switch is activated or the manual brake disengagement mechanism is operated. Check the position of the switch or lever.		
5	No implication			
6	Inhibit Active	The S-drive is being inhibited from driving. Inhibit 2 is active. This may be because the battery charger is connected or the seat is not in the driving position.		
7	Throttle Potentiometer Trip	A throttle fault is indicated. Make sure that the throttle is in the rest position before switching on the scooter		
8	Possible Controller Trip	A controller fault is indicated. Make sure that all connections are secure.		
9	Solenoid Brake Trip	The parking brakes have a bad connection. Check the parking brake and motor connections. Make sure the controller connections are secure.		
10	High Battery Voltage	An excessive voltage has been applied to the controller.		

Model Reference	CareCo Daytona
Dimension (L x W)	135 x 66 cm
Total Weight	117 kg
Battery	50AH
Charger	4A
Front Tyre	13"
Rear Tyre	13"
Driving System	Direct drive the rear wheels (with differential gear)
Brake System	Electromagnetic brakes
Control Method	By speed control lever
Top Speed	8mph
Climbing angle	>6°
Maximum driving distance	30 miles
Maximum user weight	182 kg (400 lbs)

The manufacturer reserves the right to modify the specification if necessary. The final specification is subject to the individual scooter you purchase from CareCo.

Note: Maximum driving distance is based on an ambient temperature of 20°C, a 75kg driver and brand new fully charged batteries; with a constant driving speed of 6 mph on a flat surface.



8. Warranty

Warranty

There is a comprehensive twelve-month warranty from the date on which your new CareCo Daytona scooter is delivered. The warranty covers the scooter for repairs or replacement during this period. For more detail, please see the Warranty Conditions below.

Warranty Conditions:

- 1. Any work or replacement part installation must be carried out by an authorised service agent.
- 2. To apply the warranty should your scooter require attention please contact CareCo Customer Service (cs@careco.co.uk).
- 3. Should any part of the scooter require repair or full or part replacement, as a result of a manufacturing or material defect within warranty period, the work will be carried out free of charge. Warranty period:
 - a) Frame: 2-year limited warranty
 - b) Electronic parts: 12 months limited warranty
 - Note: The warranty is not transferable
- 4. Any repaired or replaced parts will be covered by this warranty for the balance of the warranty period on the scooter.
- 5. Parts replaced after the original warranty has expired will by covered by a three months warranty.
- 6. Consumable items supplied will not generally be covered during the normal warranty period unless such items require repair or replacement clearly as a direct result of a manufacturing or material defect.

 Such items include (among others): upholstery, tyres and batteries.
- 7. The above warranty conditions apply to brand new scooters purchased at the full retail price. If you are unsure whether your scooter is covered, check with CareCo Customer Services.
- 8. Under normal circumstances, no responsibility will be accepted where the scooter has failed as a direct result of:
 - a) The scooter part not having been maintained in accordance with the manufacturer's recommendations.
 - b) Failure to use the manufacturer's specified parts
 - c) The scooter or part having been damaged due to neglect, accident or improper use
 - d) The scooter or part having been altered from the manufacturer's specifications or repairs having been attempted before the service agent is notified

Please note CareCo's contact details in the box below. In the event of your scooter requiring attention, contact them and give all relevant details so they can act quickly.

The manufacturer reserves the right to alter, without notice, any weights, measurements or other technical data shown in this manual. All figures, measurements and capacities shown in this manual are approximate and do not constitute specifications.

Name	CareCo Customer Services
Address	CareCo (UK) Ltd
	Hubert Road
	Brentwood, Essex
Tel	0845 611 8022
Postcode	CM14 4JE