

MOONLIGHT & MELODIES **nightlight soother**


CLEANING & CARE: Unplug before cleaning. Clean with dry cloth only.

INCLUDES: Soother, USB cord. (Power adapter in select territories)

INSTRUCTIONS FOR USE:

Connect USB cord and adapter into Soother. Plug adapter into wall socket. If power adapter is not included, plug USB cord into USB power adapter with output 5.0 V DC, 550mA.

Place Soother in an upright position on a flat level surface, out of children's reach.

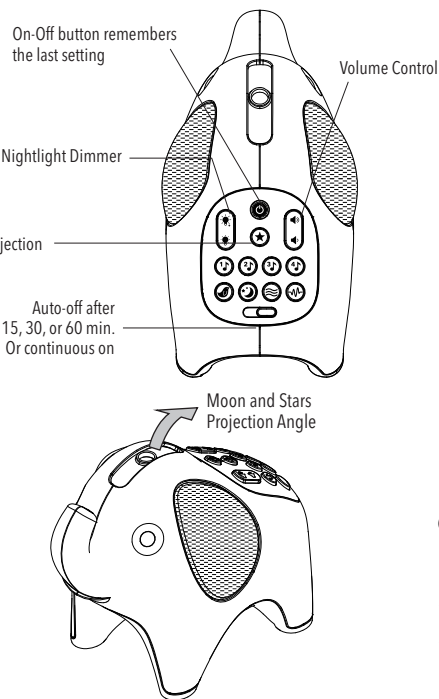

To select a sound, press the button of your choice. To mute sound, press it again.



CONSUMER INFORMATION: SAFETY AND DISPOSAL

Do not dispose of Waste Electrical Electronic Equipment (WEEE), including batteries, in unsorted municipal waste; collect separately. Dispose of at WEEE collection sites per local regulation. WEEE contains chemicals that are hazardous to the environment and human health. The end-user's participation is critical to the success of WEEE collection.



Do not dispose of WEEE in trash.

FCC INFORMATION: ICES-003 INFORMATION: CAN ICES-3 (B)/NMB-3(B):

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TC technician for help.

⚠ WARNING: This is an electric lamp, not a toy. To avoid risk of fire, burns, electric shock and injury, it should not be played with or placed where small children can reach it.

To reduce the risk of electric shock: always unplug the appliance from the electrical outlet immediately after using and before cleaning; do not reach for an appliance that has fallen into water - unplug it immediately; do not place or store appliance where it can fall or be pulled into a tub or sink; do not place in or drop into water or other liquid. To reduce the risk of burns, fire, electric shock or injury to persons: close supervision is necessary when this appliance is used by or near children.

Cord may be a strangulation hazard. Keep out of reach of children. Do not use with extension cords.

Discard packaging materials properly.

⚠ CAUTION: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT SAFETY INSTRUCTIONS: The Soother is only to be connected to the included power adapter. No serviceable or replacement parts inside. Misuse can cause electrical shock. The ventilation should not be impeded by covering the product with items, such as newspapers, tablecloths, curtains, etc. No naked flame sources, such as lighted candles, should be placed on the apparatus. Do not use in tropical areas. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus. Do not use if liquid has entered the product. Inspect entire product frequently and discard at first sign of damage.

Power Off-Standby Switch. Switch product function off or switch to standby mode. Product may appear to be turned off while in standby mode if no function switch has been activated or product is malfunctioning.

Hazardous Live-electrical part.

Product is for indoor use only.

Alternating current only.

Direct current only.

Please read all instructions. Rating Label is located on the bottom of the product.

AS/NZS RCM

Energy rating ERP

EU Compliance

USB

Direct current power input connector on Soother. The positive connector is internal and the negative connector is exterior.

The power adapter is a class II electrical device.

Dispose of in accordance with local law. Separate collection for EEE.

© 2016 Skip Hop
50 W 23 ST, NY, NY 10010
In the US: 877.4.SKIPHOP
hello@skiphop.com
www.skiphop.com
Made in China

Meets or exceeds applicable safety standards.

Fox Williams
10 Finsbury Square
London EC2A 1AF, UK



Only use the attachments/accessories specified by manufacturer.

External power supply unit manufacturer: 3-4F, Baiyisheng Technology Mansion, Baihua Community Second Industrial Park, Guangming Sub-district, Guangming New District, Shenzhen, China

US model number: ZAU-F050055A-01. Input: 100-240 V~, 50/60 Hz, 0.2A; Output: 5.0 V DC, 550mA

EU model number: ZAG-01A050055U01. Input: 100-240 V~, 50/60 Hz, 0.2A; Output: 5.0 V DC, 550mA

UK/HK model number: ZAB-B050055A-01. Input: 100-240 V~, 50/60 Hz, 0.2A; Output: 5.0 V DC, 550mA