

## **AMANA FURNITURE SHOP FIT-UP QUARTZ CLOCK INSTRUCTIONS:**

### **1. TO SET THE TIME:**

- Gently pull the movement from the front of the clock. This may require slight use of your fingertips or fingernails to get the movement started. Keep the movement parallel with the clock case as you pull. Use the time adjustment wheel to set the correct time. To reinstall, align the movement in the clock case with the numeral “12” at the top and press firmly and evenly, keeping the movement parallel with the clock case until the movement is snug. If the “12” is not centered at the top, the movement must be removed before it can be realigned. **Do not attempt to twist or turn it into place.**

### **2. BATTERIES:**

- The movement type determines the battery size. These battery sizes should be readily available at most discount and home improvement stores. Insert the battery according to the positive (+) and negative (-) markings in the battery compartment of the movement.
- Oftentimes, the battery size is listed inside the battery compartment. However, if it is not and you are unsure about which size to use, please call 319-622-3291 or 1-800-247-5088 for our assistance.

### **3. WARRANTY:**

- All Amana quartz movement clocks have a one (1) year warranty on the movement. If you have any additional questions about your Amana clock, once again please call 319-622-3291 or 1-800-247-5088. You may also e-mail us at [furniture@amanafurniture.com](mailto:furniture@amanafurniture.com)