

INSTRUCTIONS FOR AMANA QUARTZ FLOOR CLOCK

Dear Amana Customer,

Thank you for investing in an original Amana clock. These instructions are intended to provide information needed to set up and operate the clock. Please read these instructions carefully before you begin. Please contact us at the Amana Furniture Shop if you have any questions.

NOTE:

Locate the clock pendulum before disposing of any material.

OPERATING INSTRUCTIONS (see attached diagram)

Detach the clock face from the cabinet by grasping the side of the dial board and carefully lifting up.

Unlock pendulum holder from its shipping position on the back of the pendulum driver by gently sliding to the right until it hangs freely.

Before inserting the batteries, make sure to set the time to 5:45 a.m. by turning the hand-setting knob on the movement.

Insert a battery into the pendulum driver (1 D size) and into the clock movement (2 C size). Insert the batteries according to (+) and (-) marking in the battery compartment.

Place the clock into its location and using the levelers on the bottom of each foot, level the clock cabinet.

Carefully hang the pendulum onto the pendulum hanger.

To set the time and melody, please turn the hand **CLOCKWISE**. If the present time is P.M., make sure the hour hand passes through 12 o'clock until the desired time is shown. During time setting you will hear sounds, but continue until the desired time is shown. Once the desired time is set, the melody will sound correctly.

The 4x4 mode will not work correctly during the first hour after time is set. After that, however, it works perfectly. This is a normal condition for this movement.

Place clock dial back onto clock by aligning the metal bracket on the dial board and the bracket on the clock body.

MELODY FUNCTION

MONITOR: (a) To demonstrate the hourly sound, select the melody by (e) button and press the "MONITOR" button.

VOLUME: (b) Rotary volume

SET: (c) Advances the strike count one hour for every push of the button.

RESET: (d) Resets the clock as if the batteries had been removed and re-inserted. If you press this button, you must again follow the directions above as if placing new batteries into the clock.


SELECT: (e) Melody select.

SOUND: (f) Sound ON/OFF selection.

NIGHT OFF: Night shut off – Sound turns off from 11:00 p.m. to 5:45 a.m. automatically.

24Hr ON: Sound turned on all 24 hours.

OFF: Sound turned completely off.

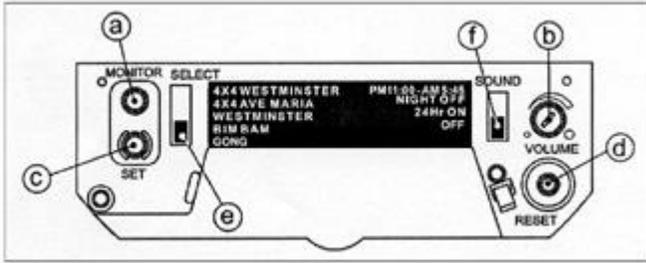

MELODY OPTIONS

4x4 WESTMINSTER – Westminster Chime and Strike at the top of the hour; Westminster Chime at 15, 30 and 45 minutes respectively.

4x4 AVE MARIA – Ave Maria Chime and Strike at the top of the hour; Ave Maria Chime at 15, 30 and 45 minutes respectively.

WESTMINSTER – Westminster Chime and Strike at the top of the hour only.

BIM-BAM – Bim-Bam Chime at the top of the hour (e.g. 1 o'clock = 1 strike of Bim-Bam; 2 o'clock = 2 strikes of Bim-Bam).

GONG – Hourly strikes at the top of the hour and on the half hour.

MAINTENANCE

Please treat your Amana clock case as you would any piece of fine furniture. Always avoid any oils or polishes that contain waxes, silicones or any other product that may build up over time.

If you have any questions about your clock, please contact us at the following:

Amana Furniture and Clock Shop

724 48th Ave.

PO Box 260

Amana, IA 52203

319-622-3291

1-800-247-5088

Fax: 319-622-6075

Email: furniture@amanafurniture.com

www.amanafurniture.com