

AMANA FURNITURE SHOP KINNICK CLOCK INSTRUCTIONS

Go Hawks!!

TO SET TIME OR REPLACE BATTERY -- Gently pull movement from clock. This may require slight use of fingertips or fingernails to get movement started. Keep movement parallel with the clock case as you lift. Use the time adjustment wheel to set correct time. To reinstall the movement, align movement in clock case with the numeral "12" to the top and press firmly and evenly, keeping the movement parallel with the clock case until the movement is snug against the clock case. If the "12" is not centered at the top, the movement must be removed before it can be realigned.

All Amana quartz movement clocks have a one (1) year warranty on the movement.
If you have any questions about your Amana Clock, please call 319-622-3291 or 1-800-247-5088.
You may also e-mail us at furniture@amanafurniture.com