

INSTRUCTIONS FOR WC-4310, WC-4320, WC-4340, WC-4350 AMANA WALL CLOCKS

Dear Amana Customer,

Thank you for investing in an original Amana wall clock. These instructions are intended to provide information needed to set up and operate the clock. Please read these instructions carefully before you begin. Please contact us at the Amana Furniture Shop if you have any questions.

UNPACKING THE CLOCK

Carefully unpack and remove the clock from its container. On the WC-4310, WC-4320 and WC-4340 models only, locate the pendulum before disposing of any material. You may wish to save the container for future transportation of the clock.

OPERATING INSTRUCTIONS (see attached diagram)

Again, on the WC-4310, WC-4320 and WC-4340 models only, unlock the pendulum holder from its shipping position by gently sliding to the right until it hangs freely. Carefully place pendulum on hanger.

Insert the batteries according to (+) and (-) marking in the battery compartment. Set the time to 5:45 a.m. by turning the hand-setting knob on the movement, then push the RESET button.

To set the time and melody, turn the hand-setting knob on the movement. If the present time is P.M., make sure the hour hand passes through 12 o'clock until the desired time is shown. During time setting you will hear sounds, but continue until the desired time is shown. Once the desired time is set, the melody will sound correctly.

The 4x4 mode will not work correctly during the first hour after time is set. After that, however, it works perfectly. This is a normal condition for this movement.

MELODY FUNCTION

MONITOR: (a) To demonstrate the hourly sound, select the melody by (e) button and press the "MONITOR" button.

VOLUME: (b) Rotary volume

SET: (c) Advances the strike count one hour for every push of the button.

RESET: (d) Resets the clock as if the batteries had been removed and re-inserted. If you press this button, you must again follow the directions above as if placing new batteries into the clock.


SELECT: (e) Melody select.

SOUND: (f) Sound ON/OFF selection.

NIGHT OFF: Night shut off – Sound turns off from 11:00 p.m. to 5:45 a.m. automatically.

24Hr ON: Sound turned on all 24 hours.

OFF: Sound turned completely off.

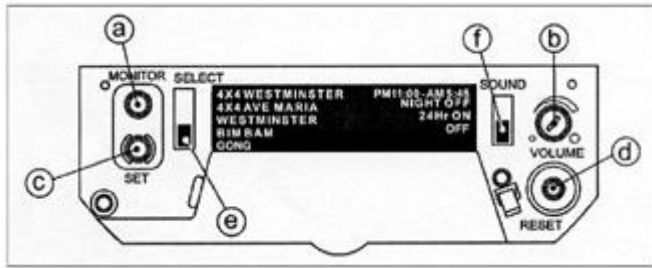

MELODY OPTIONS

4x4 WESTMINSTER – Westminster Chime and Strike at the top of the hour; Westminster Chime at 15, 30 and 45 minutes respectively.

4x4 AVE MARIA – Ave Maria Chime and Strike at the top of the hour; Ave Maria Chime at 15, 30 and 45 minutes respectively.

WESTMINSTER – Westminster Chime and Strike at the top of the hour only.

BIM-BAM – Bim-Bam Chime at the top of the hour (e.g. 1 o'clock = 1 strike of Bim-Bam; 2 o'clock = 2 strikes of Bim-Bam).

GONG – Hourly strikes at the top of the hour and on the half hour.

HANGING THE WALL CLOCK

Use a nail, screw or toggle bolt suitable for your type of wall to hang the clock securely to the wall.

MAINTENANCE

Please treat your Amana clock case as you would any piece of fine furniture. Always avoid any oils or polishes that contain waxes, silicones or any other product that may build up over time.

If you have any questions about your clock, please contact us at the following:

Amana Furniture and Clock Shop

724 48th Ave.

PO Box 260

Amana, IA 52203

319-622-3291

1-800-247-5088

Fax: 319-622-6075

Email: furniture@amanafurniture.com

www.amanafurniture.com