


## GLC-Class Cross-country vehicle model 253 as of 2015







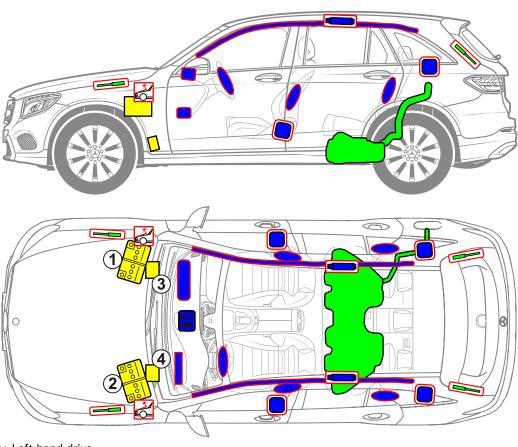

- 1 Main battery, Left-hand drive
- 2 Main battery, Right-hand drive
- 3 Additional battery, Left-hand drive
- 4 Additional battery, Right-hand drive



Airbag



Gas generator



Seat belt tensioner



Restraint systems control unit



Pedestrian protection



Gas-filled strut



Fuel tank



12 V Battery




### GLC-Class HYBRID PLUS Cross-country vehicle model 253 as of 2015









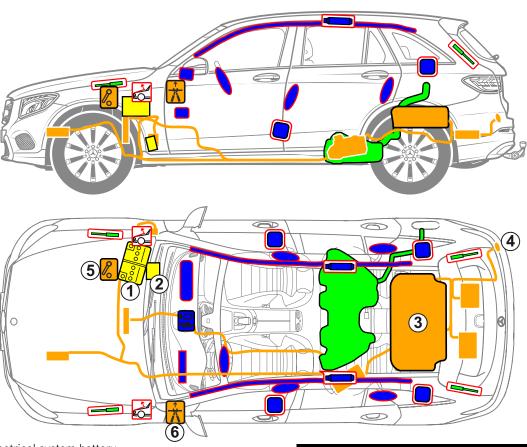

- 1 On-board electrical system battery
- 2 Additional battery
- 3 High-voltage battery
- 4 HV charge socket
- 5 High-voltage disconnect device
- 6 Alternative high-voltage disconnect device

### Note

The alternative high-voltage disconnect device is only to be operated when the high-voltage disconnect device in the engine compartment is inaccessible.



Airbag



Gas generator



Seat belt tensioner



Restraint systems control unit



Gas-filled strut



Pedestrian protection



Fuel tank



Battery 12 V



High-voltage battery



High-voltage components



High-voltage disconnect device



Alternative high-voltage disconnect device

### GLC-Class HYBRID PLUS Cross-country vehicle model 253 as of 2015





#### High-voltage disconnect device

The high-voltage disconnect device is located in the engine compartment next to the battery.



Operate release (1) / Pull out switch (2)

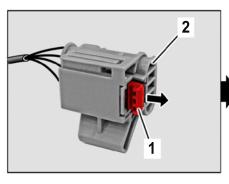

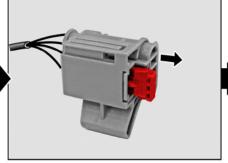



#### Alternative high-voltage disconnect device:

The alternative high-voltage disconnect device is located behind the cover in the cockpit. It is marked with an information label.



#### Note

The alternative high-voltage disconnect device is only to be operated when the high-voltage disconnect device in the engine compartment is inaccessible.






Remove cover (1) of fuse box / Cut line at marked location (2)



## GLC-Class HYBRID PLUS Cross-country vehicle model 253 as of 2015



#### Vehicle identification

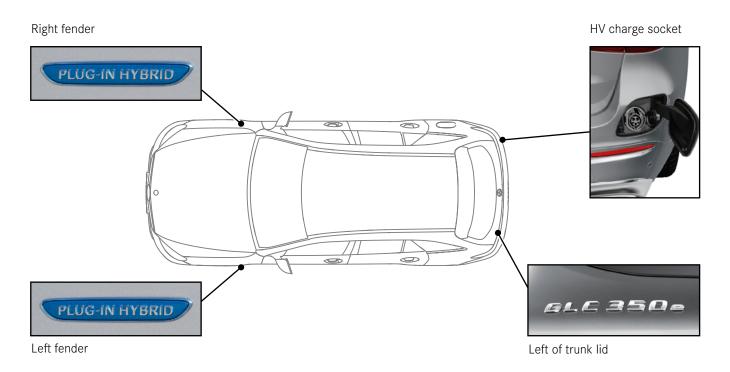




GLC-Class Coupé model 253 as of 2016







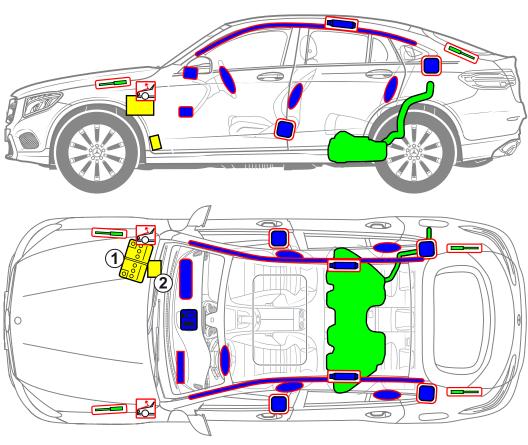

- 1 Main battery
- 2 Additional battery



Airbag



Gas generator



Seat belt tensioner



Restraint systems control unit



Pedestrian protection



Gas-filled strut



Fuel tank



12 V Battery




GLC-Class HYBRID PLUS Coupé model 253 as of 2016









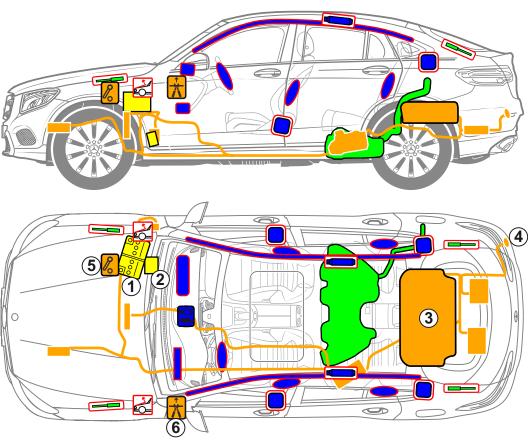

- 1 On-board electrical system battery
- 2 Additional battery
- 3 High-voltage battery
- 4 HV charge socket
- 5 High-voltage disconnect device
- 6 Alternative high-voltage disconnect device



Airbag



Gas generator



Seat belt tensioner



The alternative high-voltage disconnect device is

only to be operated when the high-voltage dis-

connect device in the engine compartment is

Restraint systems control unit



Gas-filled strut



Pedestrian protection



Fuel tank

Note

inaccessible.



12 V Battery



High-voltage battery



High-voltage components



High-voltage disconnect device



Alternative highvoltage disconnect device





High-voltage disconnect device


The high-voltage disconnect device is located in the engine compartment next to the battery.



Operate release (1) / Pull out switch (2)

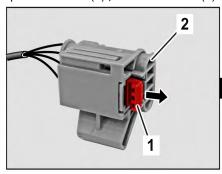

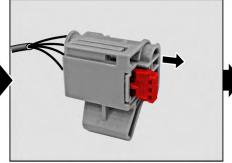

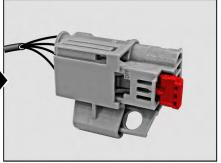

Alternative high-voltage disconnect device:

The alternative high-voltage disconnect device is located behind the cover in the cockpit. It is marked with an information label.




### Note

The alternative high-voltage disconnect device is only to be operated when the high-voltage disconnect device in the engine compartment is inaccessible.







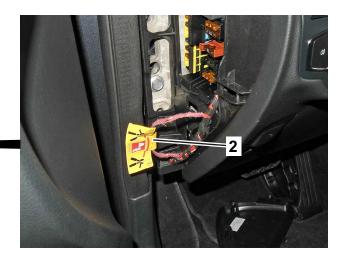

# GLC-Class HYBRID PLUS Coupé model 253 as of 2016



Vehicle identification

