





IM
IM5 (5doors/ 5 seats/ electric), 2025-

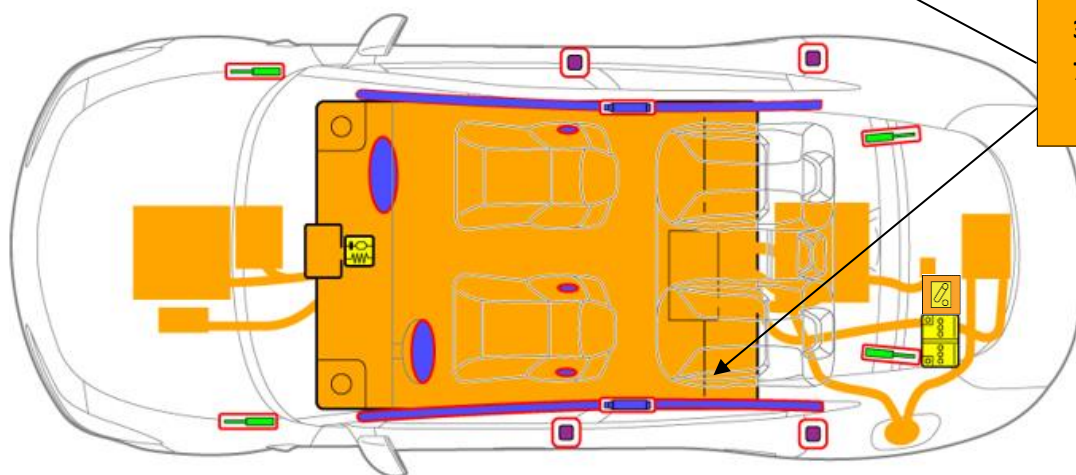

Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO 17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.

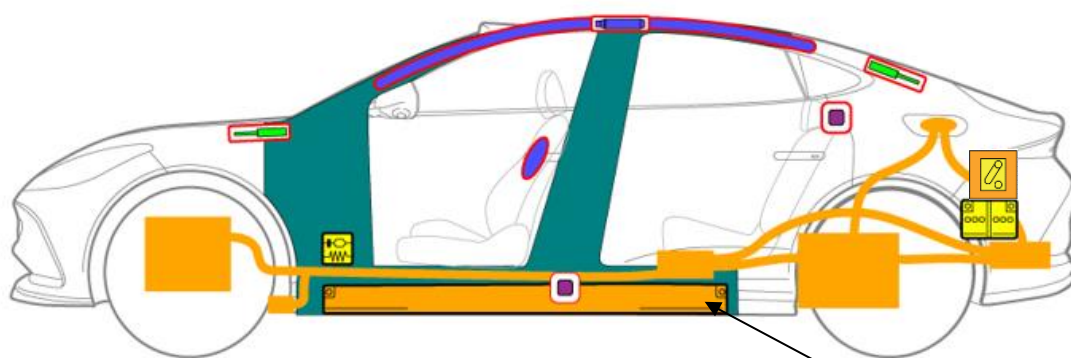

358.4V
750.7V
Li-ion

	Airbag		Stored gas inflator		Seat belt pretensioner		Gas strut / Preloaded spring
	High strength zone		SRS control unit		Battery low voltage		Battery pack, high-voltage
	High voltage power cable		Low voltage device that disconnects high voltage		High voltage component		
ID Nr.		Version Nr.		Version date		page	
IM5		1.0		06/2025		Page 1 of 4	

	IM IM5 (5doors/ 5 seats/ electric), 2025-		
1. Identification/Recognition			



Lack of Engine Noise Does Not Mean Vehicle is Off: Silent Movement or Instant Restart Capability Exists Until Vehicle is Fully Shut Down. Wear Appropriate PPE.





Charge port

IM5


2. Immobilisation/Stabilisation/Lifting

 Immobilise the Vehicle

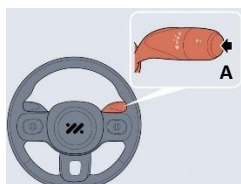

- 1: Place in P position(A).
- 2: Tap "Settings - General - Vehicle Power Supply- Power Off" or attach the NFC card to pillar B or use the NFC card or use remote key(B) to turn off the vehicle power supply.

Lifting points

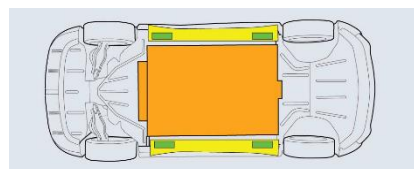


- Appropriate stabilisation-lifting points
- Appropriate stabilisation points vehicle on side
- High voltage battery


Use caution to ensure you never come into contact with the high voltage battery or other high voltage components while lifting or manipulating the vehicle.

3. Disabling Direct Hazards / Safety Regulations



Main Disabling Method

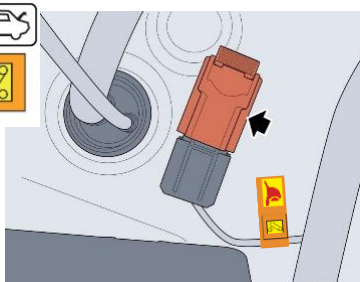

In cases of emergency, the high voltage system can be isolated by removing the manual service disconnect device (master safety device).


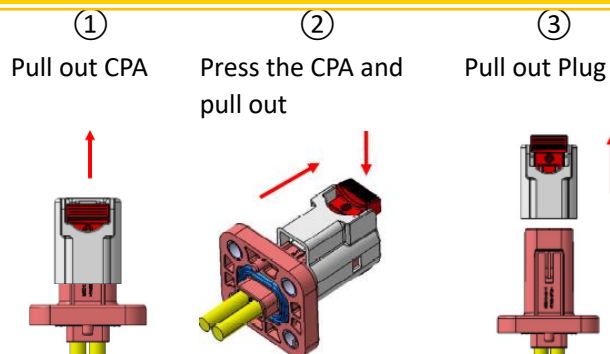


Alternative Disabling Method

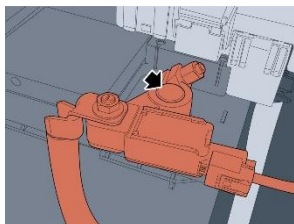 

The vehicle power system can be shut down normally. Power off and disconnect the negative cable of 12V low-voltage battery.

 
Access to low voltage battery

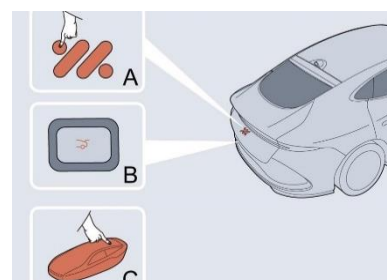


ID Nr.	Version Nr.	Version date	page
IM5	1.0	06/2025	Page 2 of 4

	IM IM5 (5doors/ 5 seats/ electric), 2025-		
---	--	---	--

4. Access to the Occupants

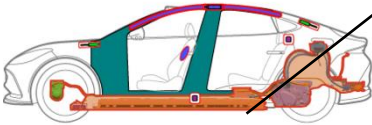


HV Parts

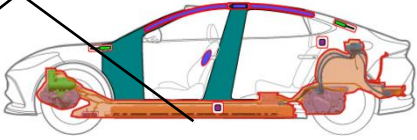


Glass types

- Front window: Laminated glass
- Rear window: Tempered glass
- All door window : Laminated glass

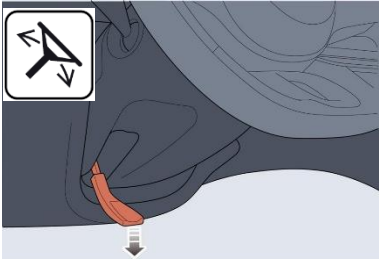

Fully release the locking lever, the steering wheel can be adjusted in 4 directions.

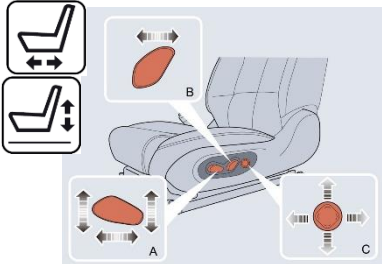

A. Seat forward/backward, cushion angle, and cushion height adjustment (cushion angle and cushion height adjustment for the driver seat only)

B. Backrest angle adjustment

C. Four-way adjustment of lumbar support (for the driver seat only)



When the door cannot be opened by pressing the door button or cannot be opened in other cases, you can pull the inner emergency handle to open the door, and contact the Authorised Repairer as soon as possible.

5. Stored Energy / Liquids / Gases / Solids

	  	12V	 The battery assembly cover should never be breached or removed under any circumstances, including fire. Doing so may result in severe electrical burns, shocks, or electrocution.
	     	358.4V 750.7V	
	 	Coolant:15L(75kWh) 18L(100kWh 2WD) 18.5L(100kWh 4WD) Refrigerant: 0.96±0.02kg	  When coolant leaks from the battery pack, it can become unstable with a risk of thermal runaway. Check battery pack temperature with a thermal imaging camera.

6. In Case of Fire



Use Large Amounts of Water.





Battery Re-Ignition!





Do Not Submerge Vehicle to Extinguish Battery.

- Wear a full set of insulated protection equipment and use specialized insulated tools.
- Disconnect the high-voltage output immediately when conditions permit.
- Continuously spray with a large amount of continuous water.
- Ensure the high-voltage battery is completely extinguished and cooled to avoid reignition.
- To recover the vehicle, do not tow it directly, use a rescue vehicle instead.

ID Nr.	Version Nr.	Version date	page
IM5	1.0	06/2025	Page 3 of 4


	IM IM5 (5doors/ 5 seats/ electric), 2025-		
---	--	---	--

7. In Case of Submersion

- Wear a full set of insulated protection equipment and use specialized insulated tools.
- Avoid touching the metal conductor of the damaged high-voltage device.
- If there is no hissing sound or foam being emitted by the high voltage battery pack, the vehicle can be salvaged by professional organizations.
- After recovery from deep or flood water the vehicle high voltage system must be isolated. For the specific method of disconnecting high-voltage power, please refer to Chapter 3. Isolate the vehicle by placing it in an open location after disconnecting the high voltage.
- To transfer the vehicle, do not tow it directly but use a recovery vehicle instead.


8. Towing / Transportation / Storage

- Personnel are prohibited from staying in the vehicle when towing and transporting the vehicle.
- When using a transporter to ship the vehicle always ensure the parking brake is applied, and the vehicle must be secured as illustrated.
- The vehicle can be towed from the site only when you make sure there is no safety risk. If the battery pack is deformed, leaks, smokes, etc., the safety risk should be solved first.
- Before towing the vehicle, switch on the hazard warning lamps, close all doors and lock the vehicle. The drive wheels MUST be suspended above the ground.
- When towing, DO NOT accelerate or brake suddenly, this can cause accidents.

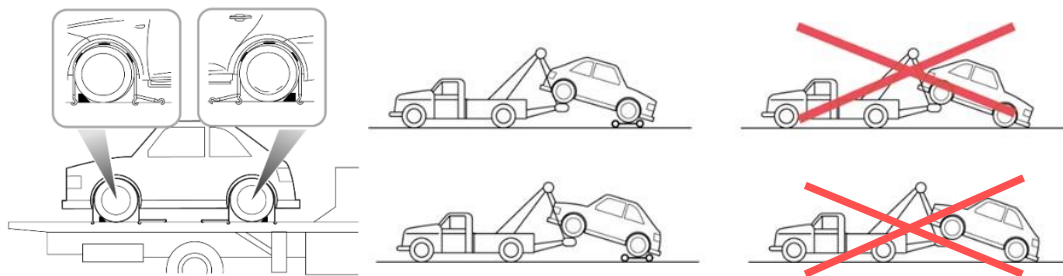

Please consult the Owner's Handbook for detailed instructions.

 10. Explanation of Pictograms Used

	Electric Vehicle		Warning, Electricity		Airconditioning component		Lifting point		Use thermal Infrared camera
	Steering wheel, tilt control		Seat adjustment, longitudinal		Seat height adjustment		Use water to extinguish the fire		Hazardous to human health
	Flammable		Corrosives		Explosive		Acute toxicity		Bonnet; hood
	Remove smart key /starter key								
ID Nr.		Version Nr.		Version date		page			
IM5		1.0		06/2025		Page 4 of 4			