



MITSUBISHI ECLIPSE CROSS (PHEV)

5 doors / 5 seats / Station wagon (2021 -)





1. Identification / recognition

Features on vehicle exterior





 
2. Immobilisation / stabilization / lifting

How to determine if vehicle is ON / OFF





Support positions for Jack and Lift



- O: Support position for Garage Jack
- O: Support position for Jack or Axle stands or Lift

3. Disable direct hazards / safety regulations


1. How to disconnect the 12V auxiliary battery negative terminal

Wait 1 minutes after turning off the POWER SWITCH.







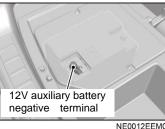




NE0012EEM0

2. How to disconnect the "Power unit control" fuse

If you cannot locate this fuse, remove all fuses and relays in the fuse box.

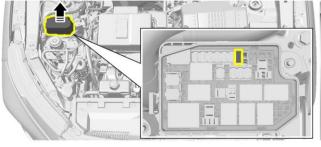







NR0013EAM0

3. Use insulating Personal Protective Equipment (PPE) (Rubber insulating gloves, Rubber soled insulating)









Next page

How to shut down High voltage (pull out the service plug)

Wait 5 minutes after disconnecting the 12V auxiliary battery negative terminal



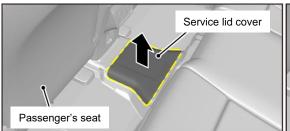

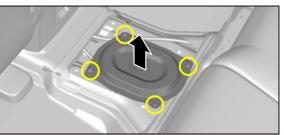

NE0015EEM0

ID No.	Version No.	Version Date.	Page
GLW-ANRS-EN01	03	8/2024	2/4





MITSUBISHI ECLIPSE CROSS (PHEV)


5 doors / 5 seats / Station wagon (2021 -)





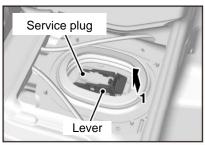

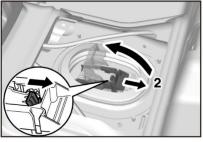

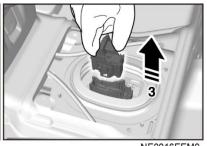




NE0016EEM0

4. Access to the occupants

 Windows






1: Laminated glass

2 - 6: Tempered glass

Steering adjustment

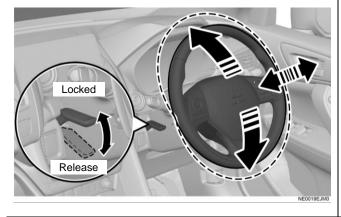

Seat adjustment





Manual Seat

- 1 : Forward or backward
- 2 : Recline the seatback
- 3 : Seat height (driver's side only)

Power Seat


- 1 : Forward or backward
- 2: Recline the seatback
- 3: Seat cushion angle
- 4 : Seat height

Vehicle CUT Zones




CUT ZONE

Risk of high voltage shock and airbag deployment

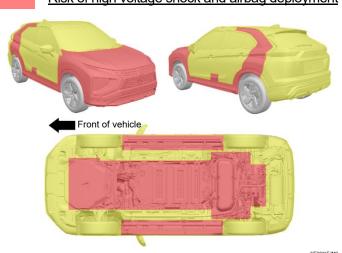

High-tensile and Ultra-high-tensile steel panels location

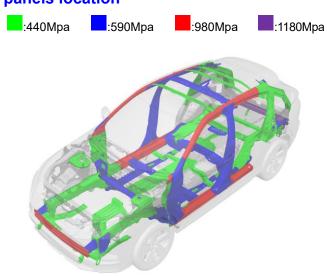

Version No. Version Date. Page



MITSUBISHI ECLIPSE CROSS (PHEV)

5 doors / 5 seats / Station wagon (2021 -)





5. Stored energy / liquids / gases / solids

Fluids / gases used in this vehicle

Fuel tank	45 liters	000	00	12V auxiliary battery	LN2 (59Ah)
Li-ion drive battery	13.8 kWh	粋		Refrigerant (air conditioner)	HFC-134a: 520 – 560 g HFO-1234yf: 495 – 535 g



In case of fire



Use large amount of water

















RE-IGNITION POSSIBLE!



Never use seawater or any water containing salt.

7. In case of submersion

Submerged Vehicle

- If the vehicle is submerged or partially submerged, first pull the occupants out of the vehicle and water.
- Then shut down the high voltage system. (Refer to 3.-2. How to disconnect the "Power unit control" fuse and 3.-4. How to shut down High voltage (pull out the service plug))
- · If the vehicle is submerged, the drive battery may generate flammable hydrogen gas.
- · If the vehicle is submerged, water may enter the drive battery.

8. Towing / transportation / storage

How to Transport



9. Important additional information

For the detail, please refer to Emergency Response Guide.

10. Explanation of pictograms used										
	Keyless operation key distance	4	7	Warning, Electricity		•	Risk of damaging human health			
	Caution	*	_	Warning, low temperatu		•	Risk of flammability			
	Open Hood			Service plug		•	Risk of an explosion			
	Open Tailgate			Fuse box disabling high voltage			•	Risk of corrosive material / substances		
**	Air-conditioning component	No.)	Use water to extinguish the fire			•	Risk of acute toxicity		
□\lambda IR \lambda	Use thermal infrared camera									
ID		ID	No. Vers		ersion No. Vo		ersion Date.	Page		
		GL	-W-ANRS-EN01	03		8/	2024	4/4		