


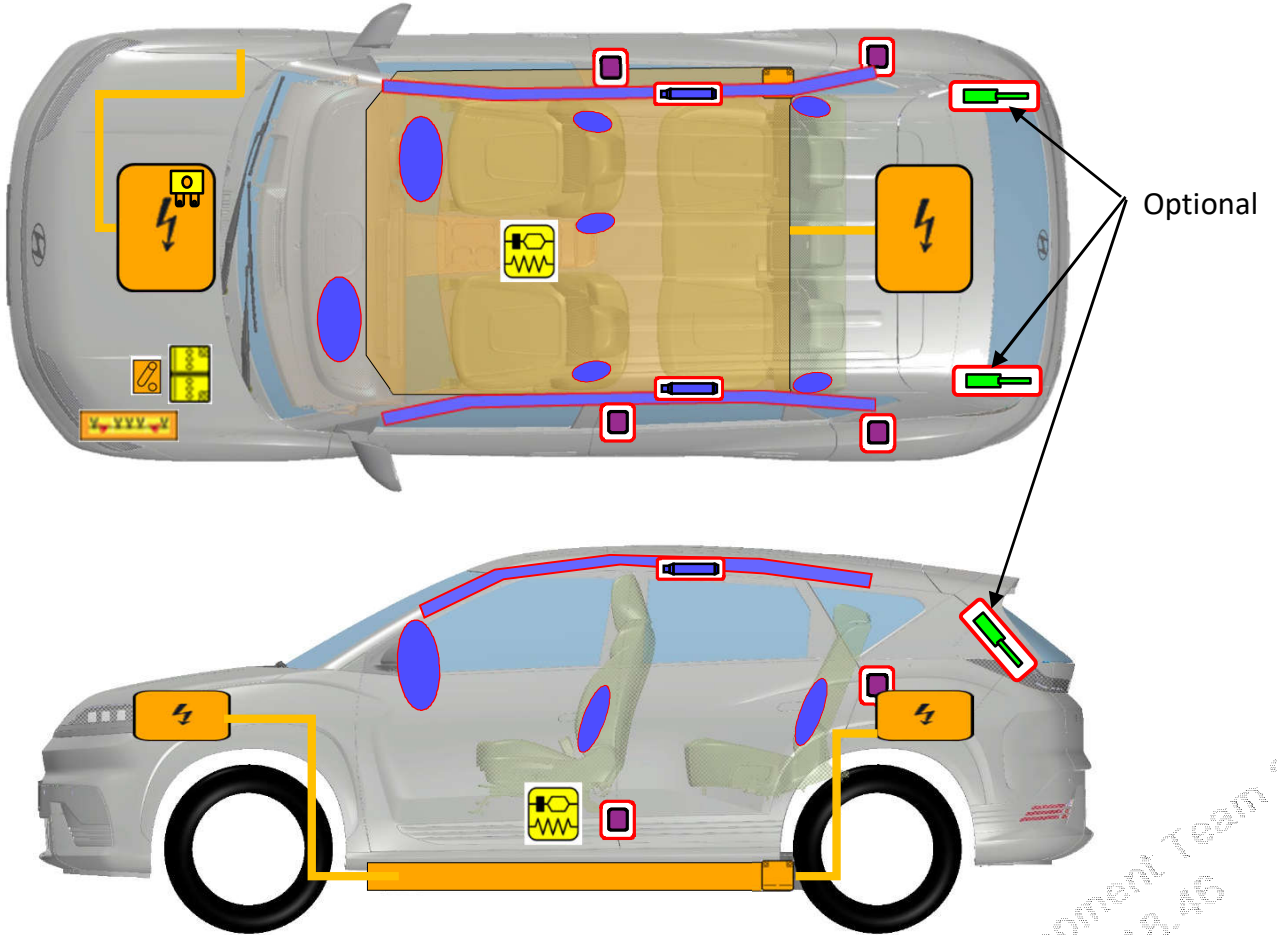


 
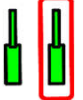












Reserved for holes (paper version)



	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control Unit		Cable Cut
	Battery low-voltage		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		High voltage component
	High voltage Battery		High voltage power cable		High voltage device that disconnects high voltage		Fuse box disabling high voltage		
 
# 1. Identification / recognition

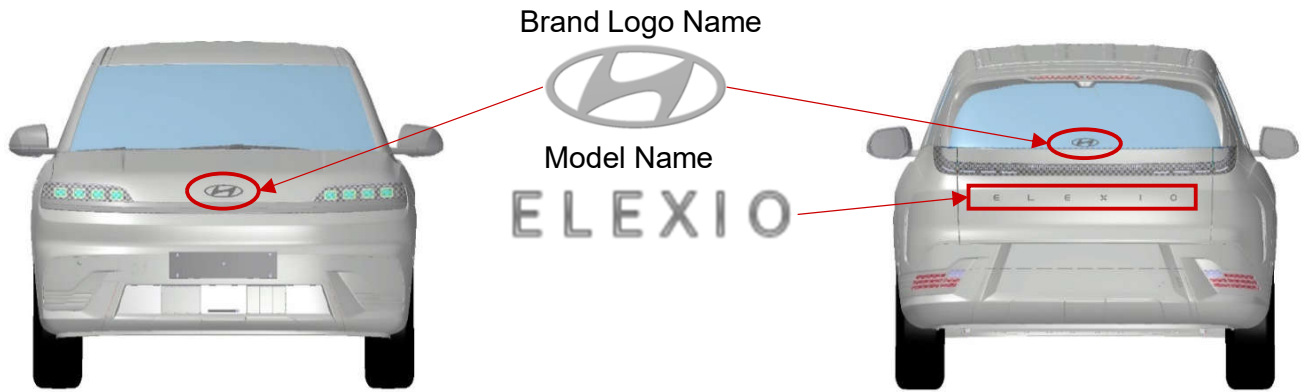

# 2. Immobilisation / stabilisation / lifting

## ■ Immobilisation




1. Chock the wheels and pull the switch to set the parking brake.




2. For automatic transmission vehicles, shift into park (P) gear.

## ■ Lifting points under the vehicle: ▲

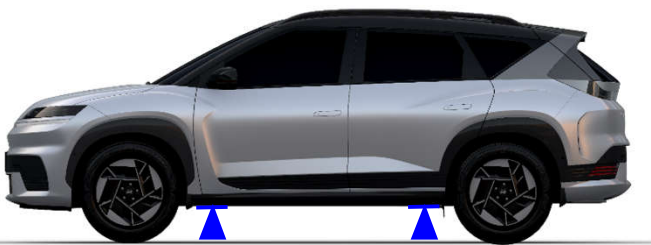


## ■ JACK/SUPPORT POSITION

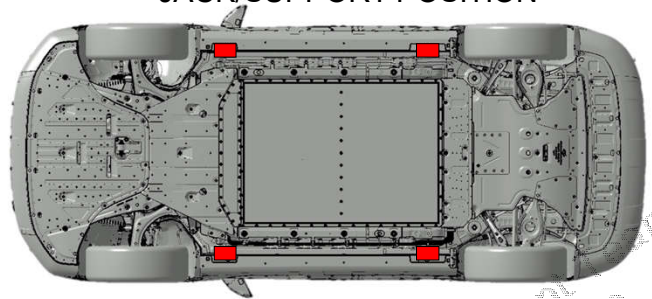


# 3. Disable direct hazards / safety regulations

**⚠ IN CASE OF AN ACCIDENT, WHERE AIRBAGS AND SEATBELT PRETENSIONER WERE ACTIVATED, THE HV-SYSTEM SWITCH'S OFF AUTOMATICALLY. FOR ALL OTHER CASES USE THE DISABLING METHODS BELOW ⚠**

## ■ Access to the battery

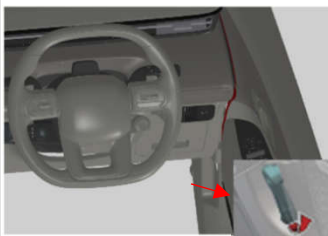

1. Pull the release lever.

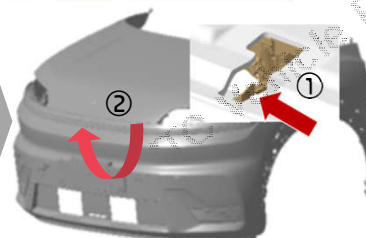

2. Push the secondary latch ①, up side and lift the hood ②



3. Remove front passenger room cover (LH), find the disconnect service interlock connector

■ Access to disable the 12V Battery:



1. Pull the release lever



2. Push the secondary latch ① up side and lift the hood ②



3. Battery in the engine compartment

■ Disabling:

Turn the ignition switch off


Access to battery shown above

Disconnect the negative(-) terminal


Disconnect the positive(+) terminal

4. Access to the occupants


■ Steering column adjustment:

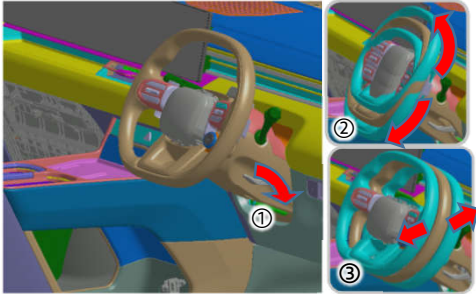


■ Seat adjustment:

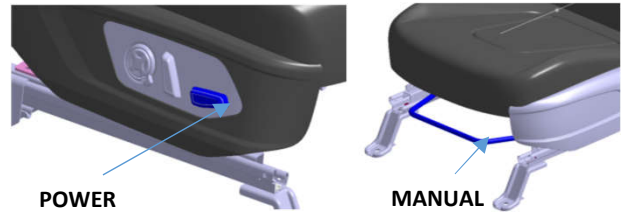

■ Vehicle body : Hardened Steel(150K↑)

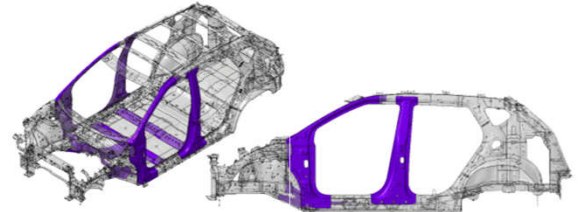


■ Glass:

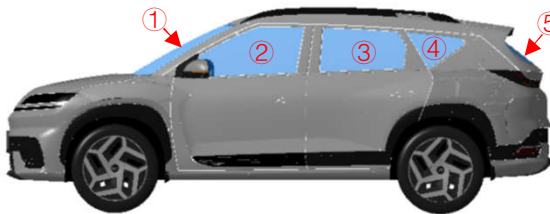


1. Laminated
2. Tempered, Laminated (OPT)
3. Tempered
4. Tempered
5. Tempered

■ Door handle:

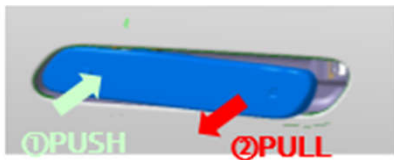

When the door outer handle doesn't pop-up, push the front side inwards.

■ Tailgate:

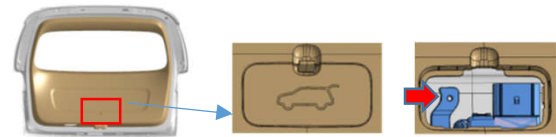

1. Remove the emergency cover,
2. Slide the latch in the direction of arrow to unlock the tailgate.

5. Stored energy / liquids / gases / solids

		<p>12V</p>
		<p>399.4V</p>




WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL IMAGING CAMERA



## 6. In case of fire



**Use large amount of water**

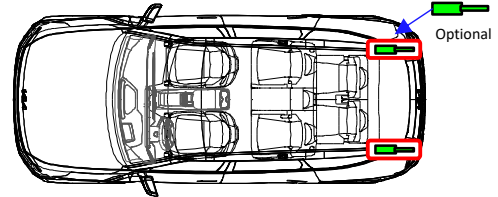

**BATTERY RE-IGNITION!**



**Gas strut!**

Risk of missile effect of tailgate.



## 7. In case of submersion




Do not touch any of the high-voltage components or cables including the high voltage cut-off switch, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled out of the water.



## 8. Towing / transportation / storage

**OK**

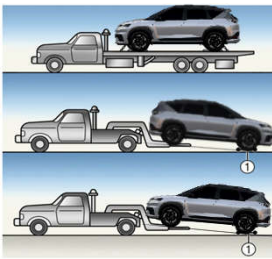

Notice: The use of wheel dollies or flatbed is recommended. Use a wheel lift or flatbed equipment.

**Not OK**



Notice : Do not tow the vehicle Forwards with the rear wheels on the ground as this may cause damage to the vehicle.



Towing hock located in the tool case in the tailgate

The hook must be used only temporary towing. Store at safe distance from other vehicles

## 9. Important additional information

For the detail, please refer to the Emergency Response Guide

## 10. Explanation of pictograms used

	Electric Vehicle		Warning, Electricity		Bonnet
	General warning sign		Warning low temperature		Boot
	Corrosives		Hazardous to the human health		Flammable
	Explosive		Acute toxicity		Environmental hazard
	Use thermal Infrared camera		Use water to extinguish the fire		