




Genesis GV70

SUV, 5 doors
From March 2021



Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO 17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.

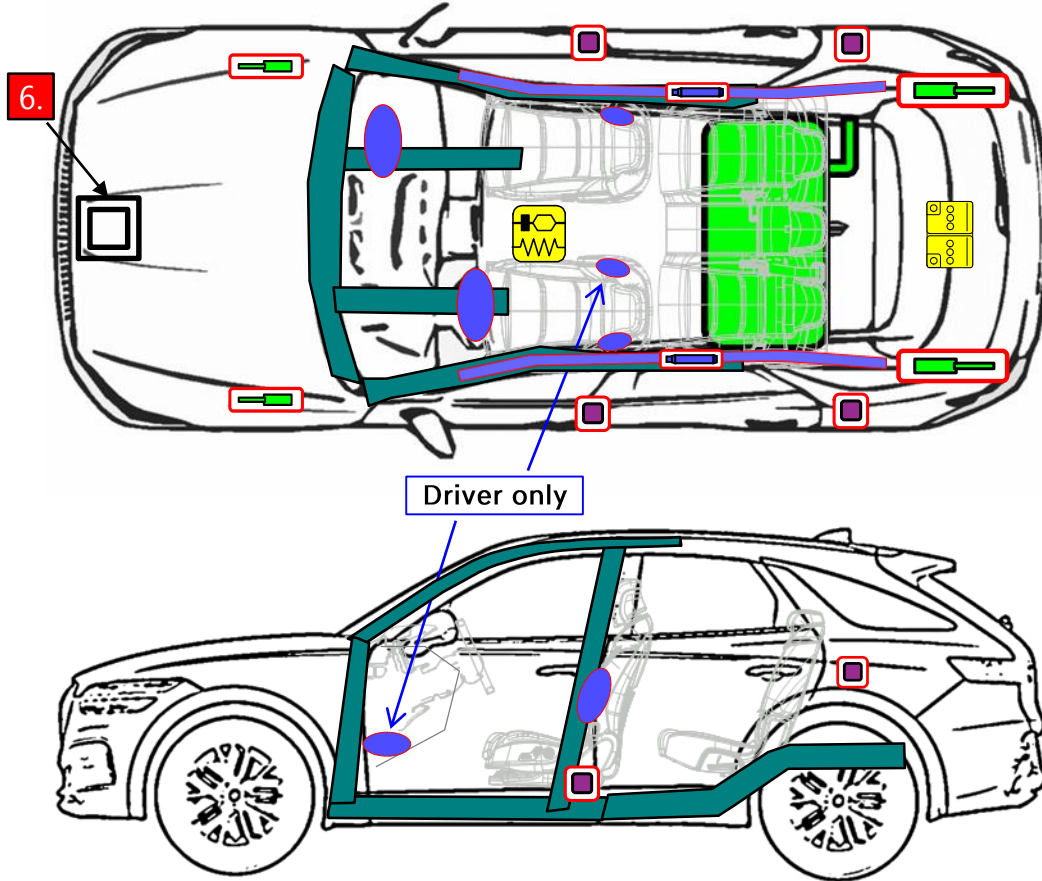

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut/ Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack		High voltage power cable/ component		High voltage disconnect		Fuse box disabling high voltage system		Ultra capacitor, high voltage

	ID No.	Version No.	Version date	Page
	KMT-JK1-RSI-01-202102	01	02/2021	1 of 4

1. Identification / recognition

Brand Emblem



AWD
All Wheel Drive

2.2D

Diesel

2.5T

Gasoline

Fuel door



Diesel



Gasoline


GV70

Car Name

2. Immobilisation / stabilisation / lifting

■ Immobilization

1

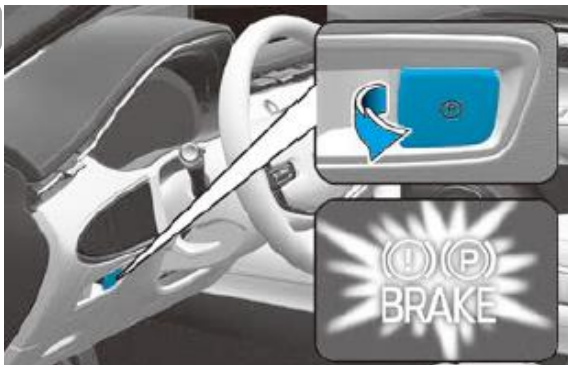



1. Chock the wheels and pull the switch to set the parking brake.

2



2. For automatic vehicles the shift lever to the park(P) position.


■ Lifting points under the vehicle :■

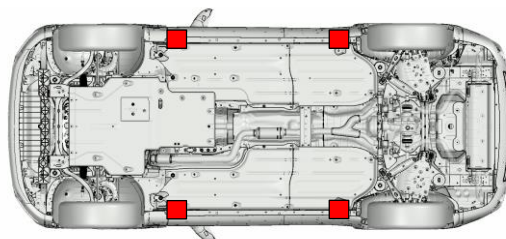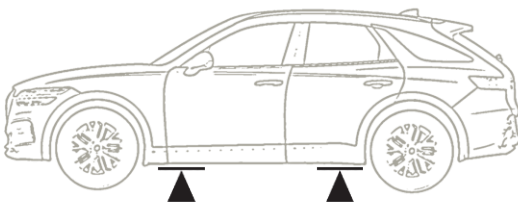


	ID No.	Version No.	Version date	Page
	KMT-JK1-RSI-01-202102	01	02/2021	2 of 4

3. Disable direct hazards / safety regulations

■ Access to the battery

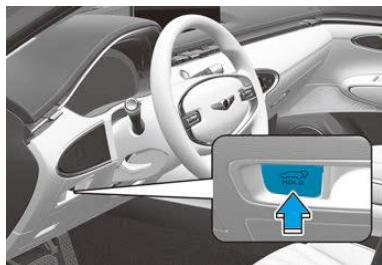

or

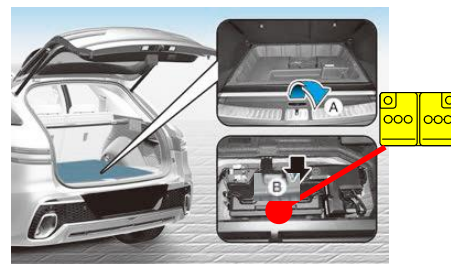

1. Press and hold the tailgate open button located on the instrument panel to open the power tailgate.

1. Press the tailgate open button located outside the tailgate while carrying the smart key to open the power tailgate.

2. To access the battery, remove the clip (A) and release the cover (B).

■ Disabling procedure



① Turn the ignition switch off

② Disconnect the negative(-) terminal

③ Disconnect the positive(+) terminal


4. Access to the occupants

■ Glass

1-2 : Laminated


3 : Tempered, Laminated(OPT)

4-5 : Tempered

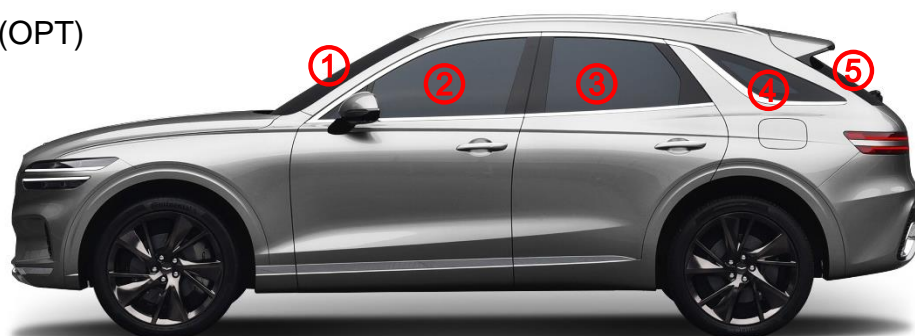

■ Vehicle body

Hardened Steel

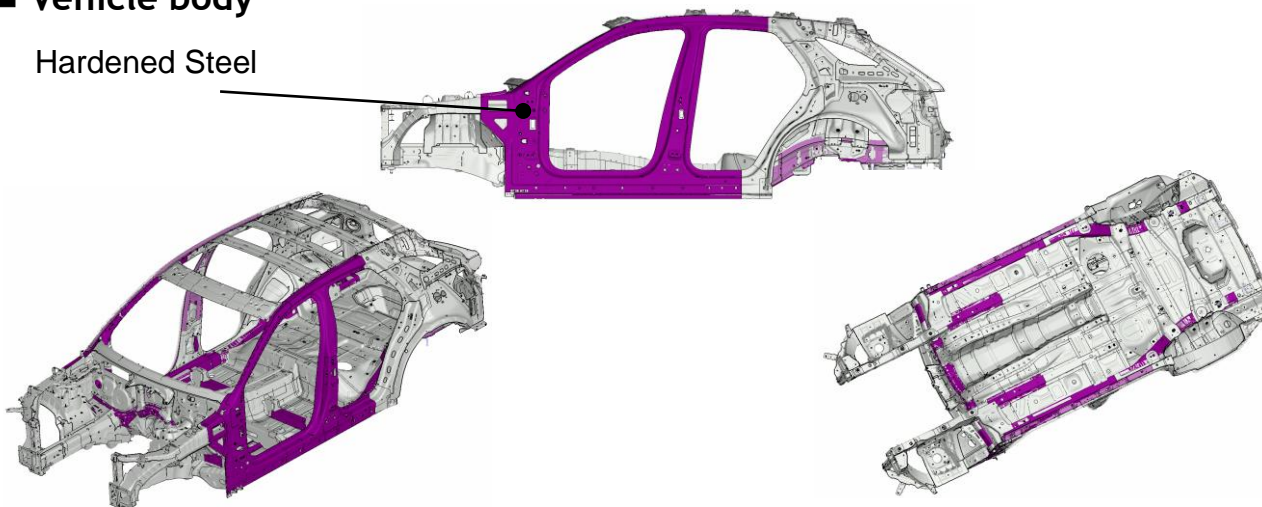

ID No.	Version No.	Version date	Page
KMT-JK1-RSI-01-202102	01	02/2021	3 of 4

5. Stored energy / liquids / gases / solids

■ Fuel Tank

66ℓ

66ℓ

■ Battery




12 V

6. In case of fire


■ Gas Strut

→ Risk of missile effect

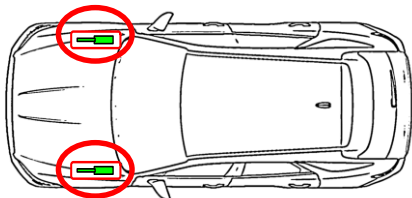


■ Pedestrian protection active system

→ Pyrotechnical actuator

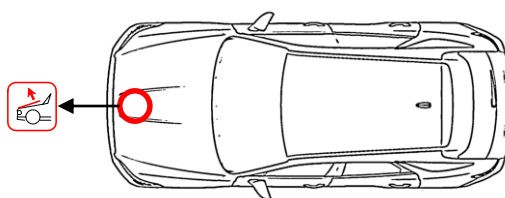


8. Towing / transportation / storage

OK :

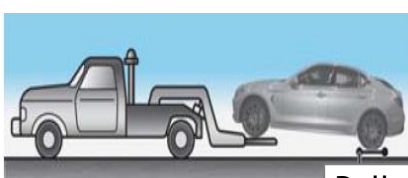

Dolly

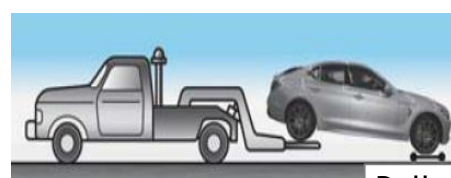


Dolly

Notice :

A towed AWD (All Wheel Drive) vehicle must have all its wheels off the ground. Keep it on a flatbed tow truck or use dollies

Not OK :

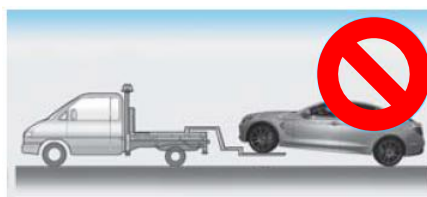

Notice :

Do not tow with sling-type equipment. Use a wheel lift or flatbed equipment. Do not tow the vehicle with the rear wheels on the ground as this may cause damage to the vehicle.


	ID No.	Version No.	Version date	Page
	KMT-JK1-RSI-01-202102	01	02/2021	4 of 4



Genesis Electrified GV70
SUV, 5 doors
From November 2021




Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO 17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.

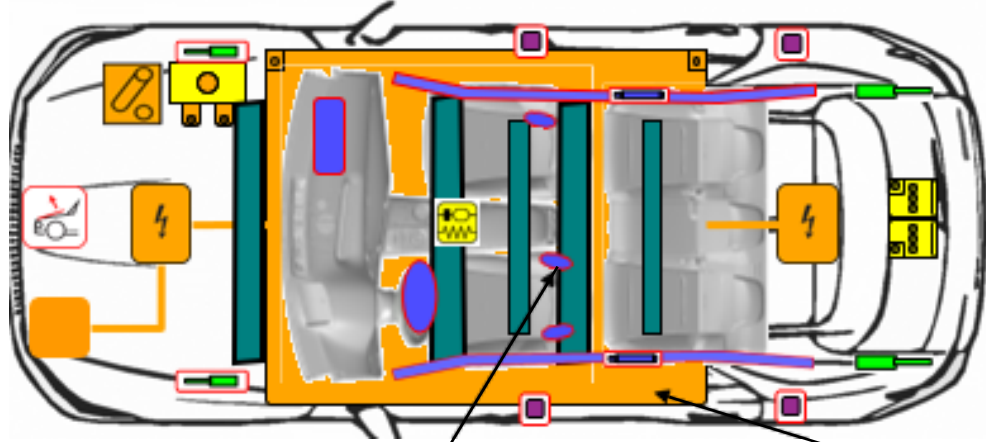

Driver side only

697V
Li-ion

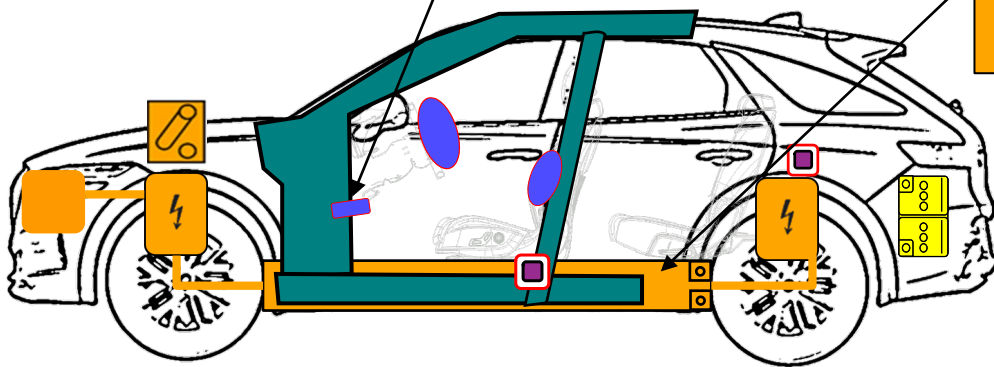

Reserved for holes (paper version)

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		High voltage component
	Battery low-voltage		Ultra-capacitor, low voltage		Fuel tank		Gas tank		Safety value
	Battery pack, high-voltage		High voltage power cable		High voltage device that disconnects high voltage		Fuse box disabling high voltage		High voltage ultra capacitor

1. Identification / recognition

Brand Emblem



Charging door



GV70


Car Name



2. Immobilisation / stabilisation / lifting

■ Immobilisation

1

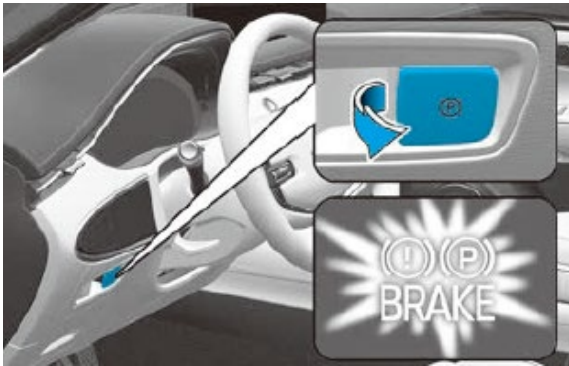



1. Chock the wheels and pull the switch to set the parking brake.

2




2. For automatic vehicles the shift lever to the park (P) position.

■ Lifting points under the vehicle: ■

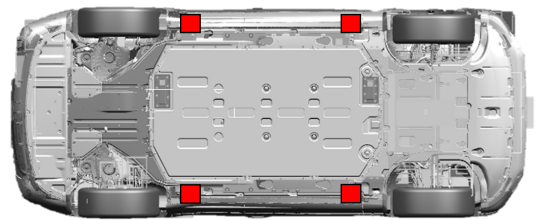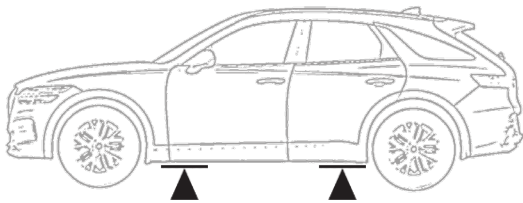


3. Disable direct hazards / safety regulations

■ Access to the battery

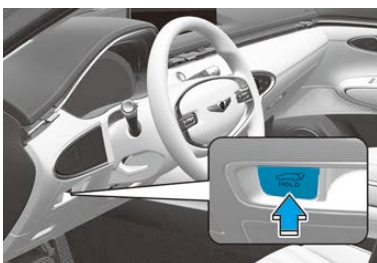

or

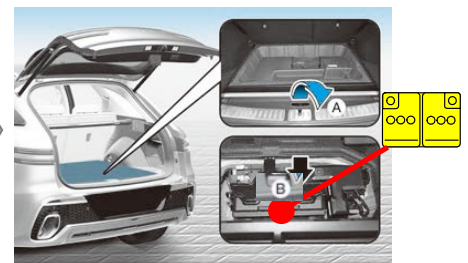

1. Press and hold the tailgate open button

2. remove the clip (A) and release the cover (B)

Disabling procedure

Low voltage battery

① Turn the ignition switch off



② Disconnect the negative(-) terminal

③ Disconnect the positive(+) terminal

High voltage battery

① Open cover of the fuse box in the PE compartment



② Pull up the yellow lever in the high voltage cut-off switch




OJKEVQ011046

4. Access to the occupants

Seat adjustment



Steering column adjustment

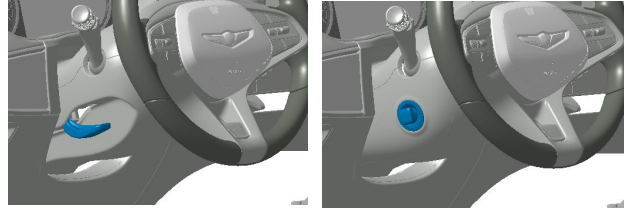


Glass

Vehicle Body





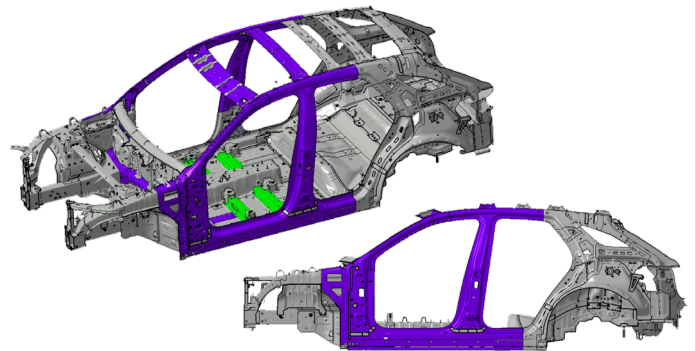


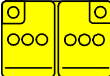











Hardened Steel(100K ↑)



1-2 : Laminated / 3 : Tempered, Laminated(OPT) / 4-5 : Tempered



5. Stored energy / liquids / gases / solids

	697V	     						
	12V	     						
	<table border="1"> <tbody> <tr> <td></td> <td>with heat pump</td> </tr> <tr> <td>R-134a</td> <td>900g</td> </tr> <tr> <td>R-1234yf</td> <td>900g</td> </tr> </tbody> </table>		with heat pump	R-134a	900g	R-1234yf	900g	   
	with heat pump							
R-134a	900g							
R-1234yf	900g							



 
When coolant leaks from the battery pack, it can become unstable with risk of thermal runaway. Check battery pack temperature with thermal imaging camera.



6. In case of fire




Use large amount of water



BATTERY RE-IGNITION!

■ **Gas Strut / Preloaded spring / Pedestrian protection active system**
Risk of missile effect of hood and tailgate.

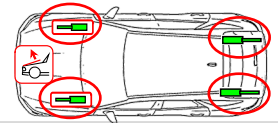


7. In case of submersion




Do not touch any of the high-voltage components or cables including the high voltage cut-off switch, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled out of the water.

8. Towing / transportation / storage

 OK:



Location front hook Location rear hook

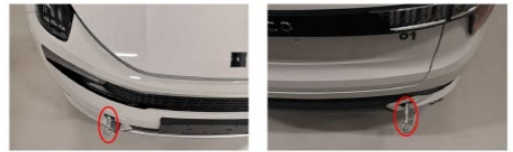

Not OK:



STORE AT SAFE DISTANCE FROM OTHER VEHICLES!

10. Explanation of pictograms used

	Electric vehicle		Warning, Electricity
	General warning sign		Flammable
	Corrosives		Hazardous to the human health
	Explosive		Acute toxicity
	Air-conditioning component		Warning; low temperature
	Use thermal Infrared camera		Use water to extinguish the fire
	Bonnet		