


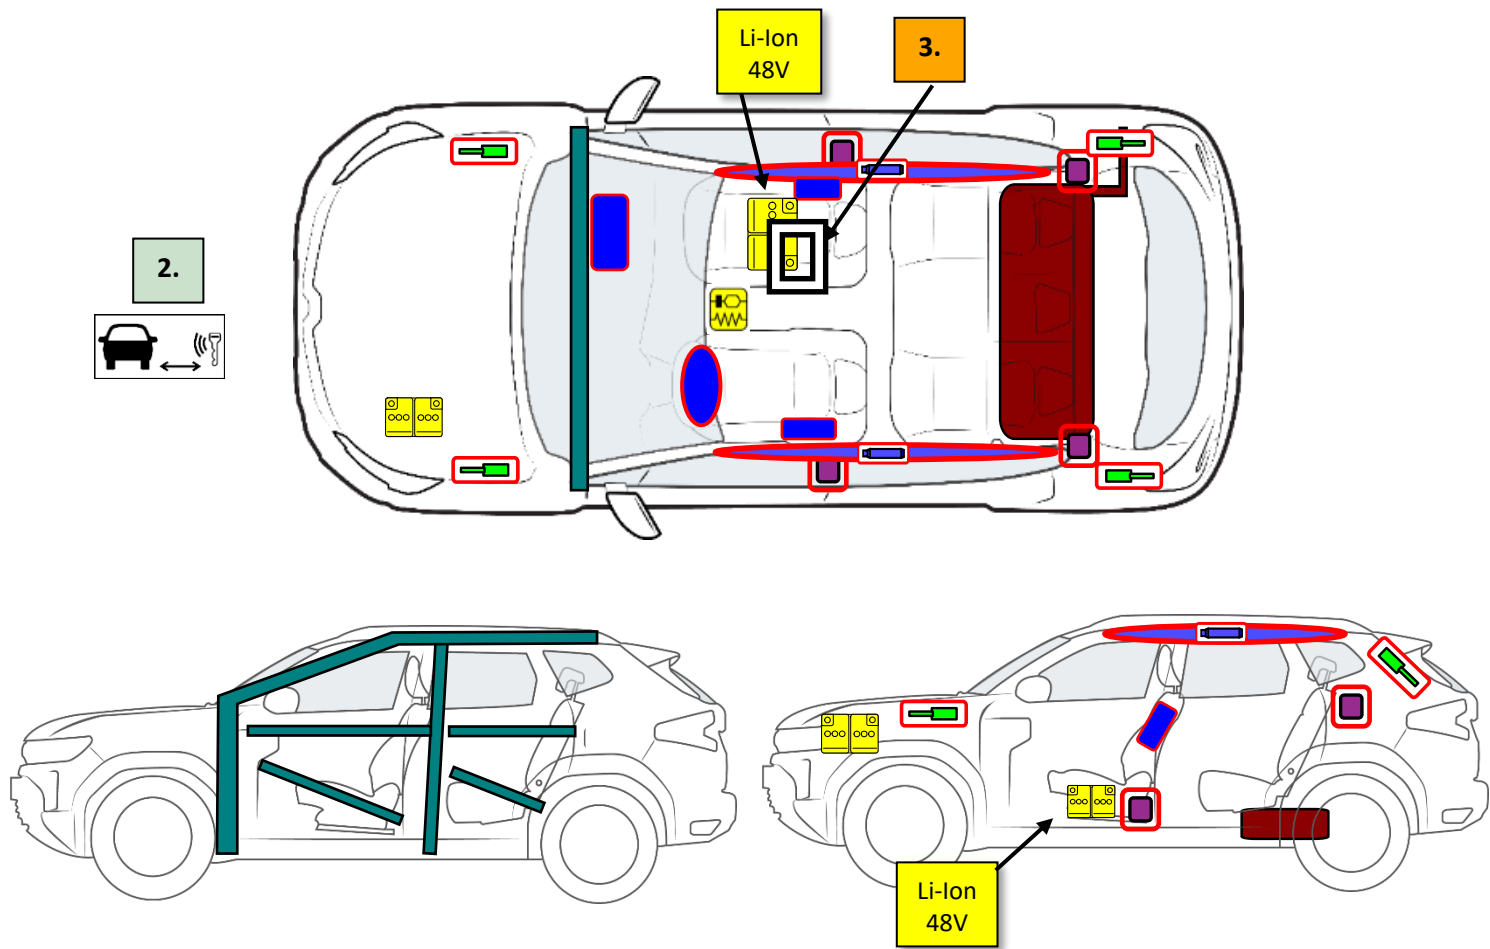

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		
	Battery low voltage		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		Fuel tank

1. Identification / recognition



2. Immobilisation / stabilisation / lifting

Immobilisation



 
or



Engine shutdown



or



3. Disable direct hazards / safety regulations

12 volts Battery



- 1 - Engine shutdown
- 2 - Disconnect the negative terminal (-)



Mild Hybrid :


48V
Li-Ion

48 Volts battery




Automatic safety by disconnecting the
12 Volts Battery


4. Access to the occupants

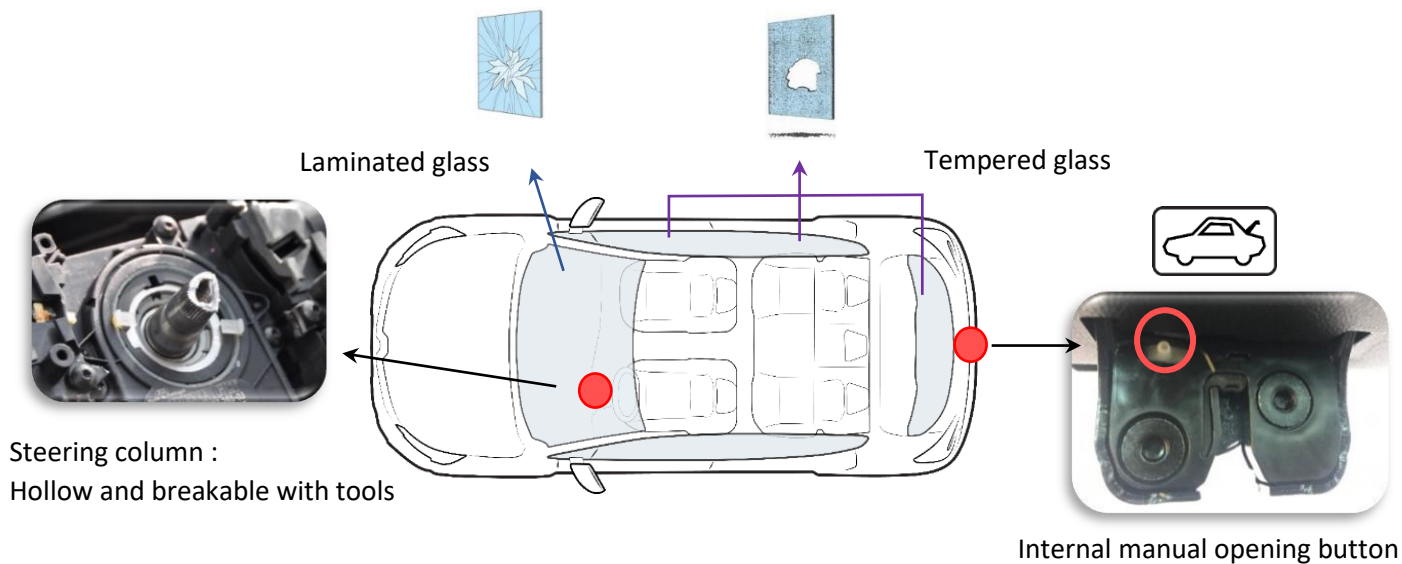

POSSIBLE MOVEMENT OF SEATS

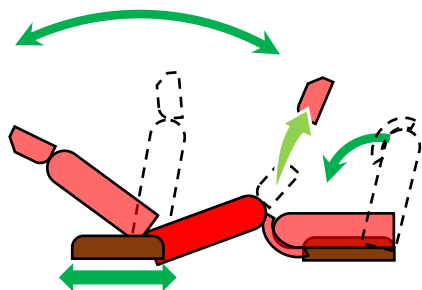

HARDENED STEEL

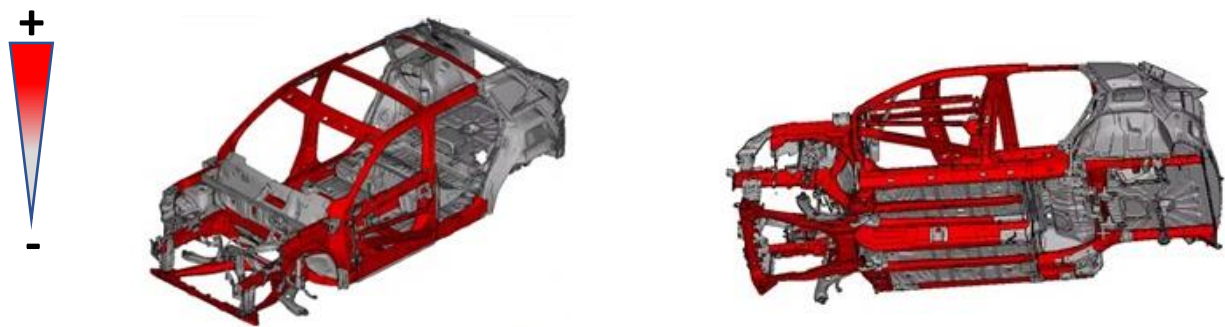

5. Stored energy / liquids / gases / solids


	50 l	  
	50 l	  

6. In case of fire

GAS STRUTS



Risk of missile effect of gas struts

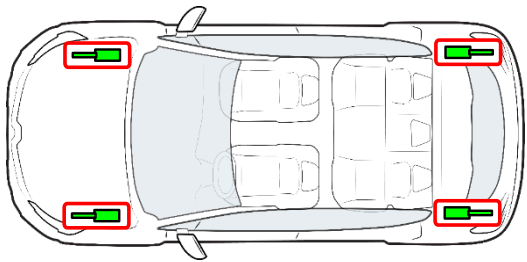

10. Explanation of pictograms used

	Vehicle on fuel of liquid group 2				
	Vehicle on fuel of liquid group 1				
	Remove smart key		Bonnet		Boot
	Flammable		Hazardous to the human health		Environmental hazard