


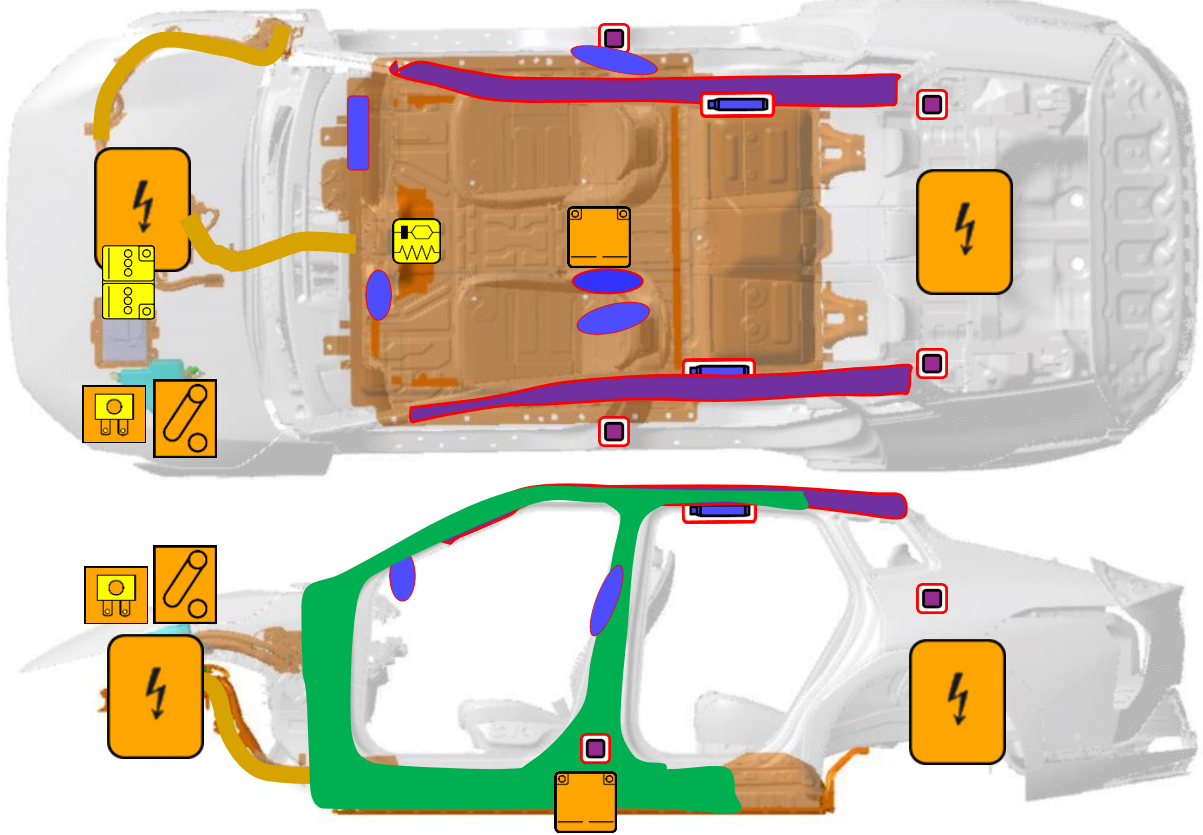

Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO 17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.




	Airbag		Stored gas Inflator		Seat belt pretensioner		SRS control unit
	Battery low-voltage		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention
	Battery pack, high-voltage		High voltage power cable		High voltage component		Service interlock connector
	Fuse Box (Location of Service interlock connector)						

1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN.

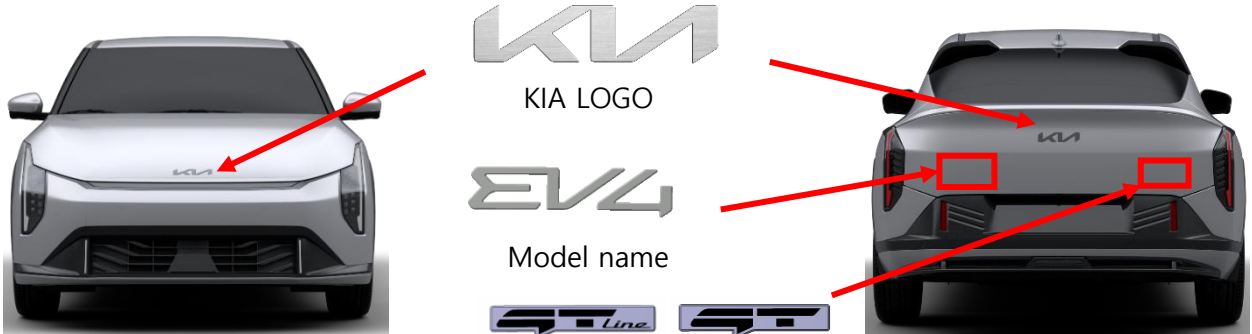

2. Immobilisation / stabilisation / lifting


Immobilization:



- ① Chock the wheels and pull the switch to set the parking brake.
- ② For automatic transmission vehicles shift into park (P) gear.

□ JACK/SUPPORT POSITION

Lifting points under the vehicle ▲

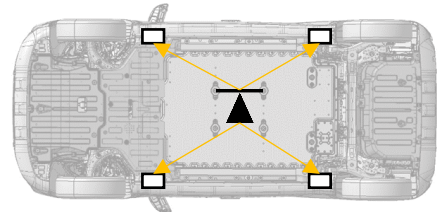

3. Disable direct hazards / safety regulations



IN CASE OF AN ACCIDENT, WHERE AIRBAGS AND SEATBELT PRETENSIONER WERE ACTIVATED, THE HV-SYSTEM SWITCH'S OFF AUTOMATICALLY. FOR ALL OTHER CASES USE THE DISABLING METHODS BELOW




Disabling High Voltage Battery:



Access :



Disabling:

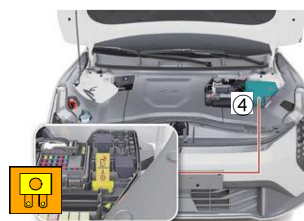

▲ "Service interlock connector" is NOT completely pulled out ▲

Pull the hood release lever to unlatch the hood ①. Go to the front of the vehicle, raise the hood slightly, push up the secondary hood release lever inside of the hood center ② and lift the hood ③.

- ④ Open the cover of Fuse Box (Firefighter helmet image is shown on the cover)
- ⑤ Pull up the "Service interlock connector" to OFF position (Grab and pull the orange color label)

Disabling 12V Battery:



Turn the ignition switch off.
Follow step ①-③ from disabling HV-method to get access to the 12V Battery



Disconnect the positive(+) terminal



Disconnect the negative(-) terminal

4. Access to the occupants

Steering column adjustment:

<manual>

 


Trunk lid



slide the latch in the direction of the arrow to unlock the trunklid.

Seat adjustment: Driver / Passenger






Manual




Power


Body

-  Mild
-  High-strength
-  Ultra-high-strength

Side

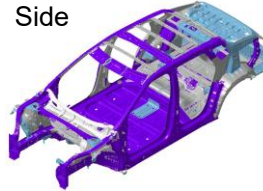

Bottom

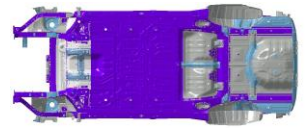


Door handle:







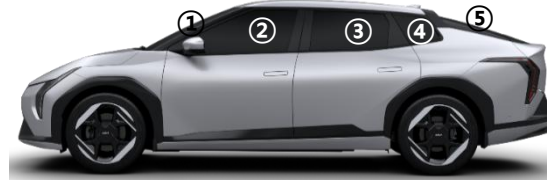










When the door Outer handle doesn't pop-out, push the front side inwards.



Glass : ①:Laminated ② : Tempered / Laminated (OPT)
③④⑤: Tempered




5. Stored energy / liquids / gases / solids

	400V			     
	12V			   
	냉매	w/o heatpump	heatpump	   
	R-1234yf	750g	850g	



 WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL IMAGING CAMERA




6. In case of fire



Use large amount of water



BATTERY RE-IGNITION!

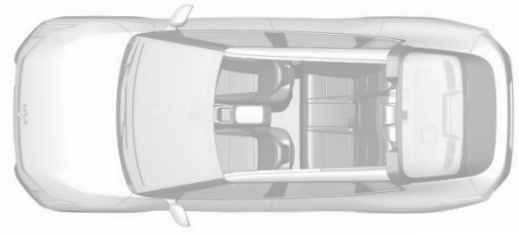

7. In case of submersion




Do not touch any of the high-voltage components or cables including the high voltage cut-off switch, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled out of the water.




8. Towing / transportation / storage

OK

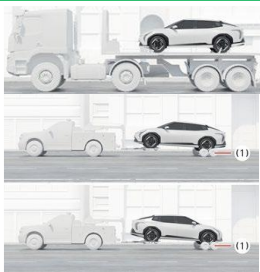


Notice: The use of wheel dollies or flatbed is recommended. Use a wheel lift or flatbed equipment.

Not OK

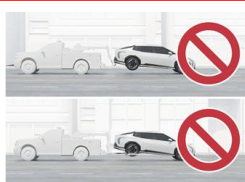

Notice : Do not tow with slingtype equipment.
Do not tow the vehicle with the front wheels on the ground as this may cause damage to the vehicle.

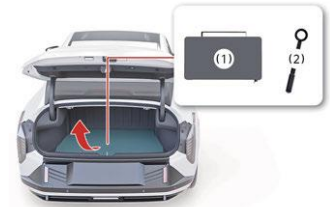

Towing hook located in the tool case in the trunklid

The hook must be used only temporary towing.
Store at safe distance from other vehicles

9. Important additional information

10. Explanation of pictograms used

	General warning sign		Warning, Electricity		Electric Vehicle
	Air-conditioning component		Use thermal Infrared camera		Use water to extinguish the fire
	Acute toxicity		Corrosives		Environmental hazard
	Explosive		Flammable		Hazardous to the human health
	Hood		Trunk Lid		