




# FORD Everest



E389435

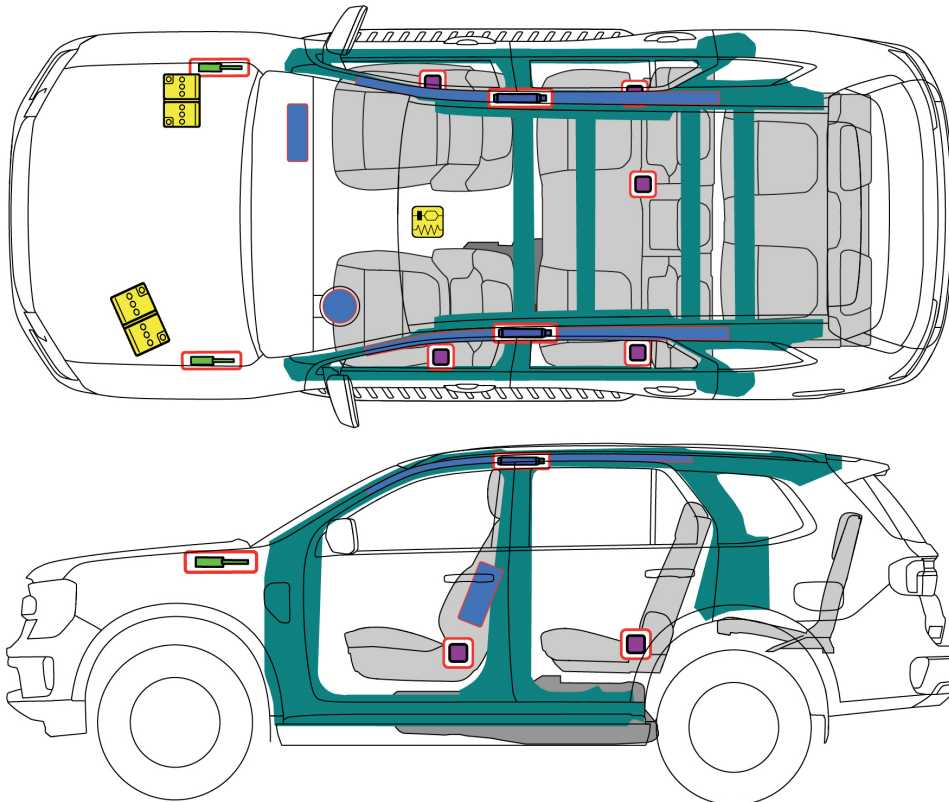

E389436

Note: The illustration shows the maximum possible range of equipment.

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / preloaded spring		High-strength zones		Zone requiring special attention		
	Battery pack, low-voltage		Ultracapacitor, lowvoltage		Fuel tank content Diesel		Gas tank		Safety valve
	Battery pack, high-voltage		High-voltage power cable		High-voltage disconnect		Fuse box, disabling high-voltage system		Ultracapacitor, highvoltage
	Low voltage device that disconnects high voltage		Fuse box disabling high voltage		High voltage component				



## 1. Identification/recognition



E392398

Label on the front grill and the rear tailgate.

## 2. Immobilisation / stabilisation / lifting


### Immobilize the vehicle

#### Vehicles with electronic parking brake




E392397

Apply the parking brake.

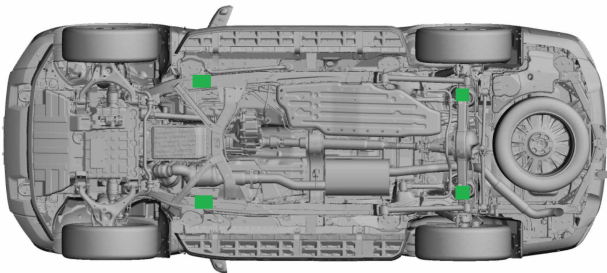

Jacking points

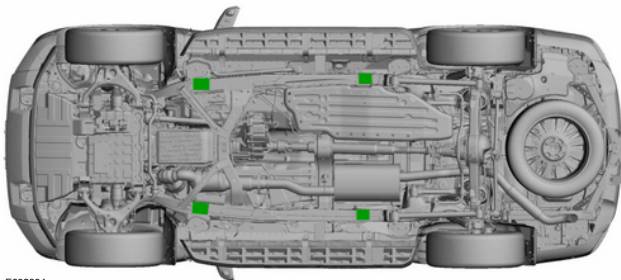


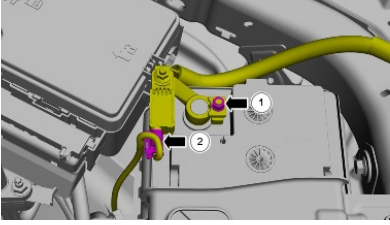

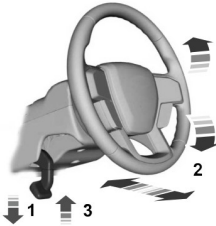
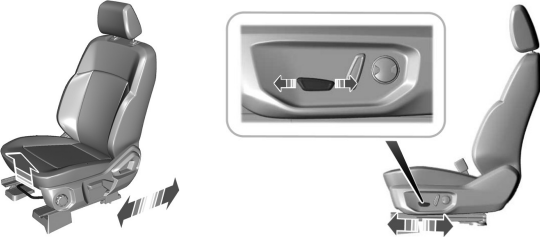


E392394

Jacking/Lifting points



# FORD Everest

<p><b>Turn off the ignition</b></p>   <p>E392396</p>	<p><b>NOTE:</b> Instead of a radio key, it is also possible to use a key card or smartphone app.</p> <p>Press the "START-STOP" button on the steering rack.</p>
<p><b>3. Disable direct hazards / safety regulations</b></p>	
<p><b>Disconnect the 12-volt battery</b></p>   <p>E375218</p>	<ol style="list-style-type: none"> <li>1. Loosen the nut.</li> <li>2. Disconnect the electrical connector and position aside the battery negative (-) terminal.</li> </ol>
<p><b>4. Access to the occupants</b></p>	
 <p>E392395</p>	<p>Glass types:</p> <ol style="list-style-type: none"> <li>1. Laminated safety glass</li> <li>2. Toughened safety glass</li> </ol>
	<ol style="list-style-type: none"> <li>1. Unlock the steering column</li> <li>2. Adjust the steering wheel</li> <li>3. Lock the steering column</li> </ol>
	<p>Battery power is required to operate the power seat.</p>



**5. Stored energy / liquids / gases / solids**

<p>E382962</p>	<p>76.5 l</p>
----------------	---------------

<p>E377212</p>	<p>12 Volt</p>
----------------	----------------

**6. In case of fire**

<p>E377214</p>	
----------------	--

**7. In case of submersion**

After rescuing the vehicle from the water, deactivate the high-voltage system (see Chapter 3) and allow the water to drain. Wear appropriate protective equipment!

**8. Towing / transportation / storage**

<p>E377229</p>	<p>Do not tow a vehicle that has been involved in an accident on its drive axles.</p>
----------------	---

**9. Important additional information**

**10. Explanation of pictograms used**

<p>flammable</p> <p>E377208</p>	<p>Hazards to the human health</p> <p>E377209</p>	<p>Environmental hazard</p> <p>E377207</p>	<p>Vehicle on fuel of liquid group 1</p> <p>E382962</p>	<p>Caution, danger</p> <p>E377206</p>	<p>Use lots of water to extinguish the fire</p> <p>E377205</p>	<p>Use thermal Infrared camera</p> <p>E377204</p>	<p>Remove smart key</p> <p>E377203</p>
<p>Bonnet</p> <p>E382960</p>							