




# BYD SHARK 6

(4-door Pick-up, 2024-)

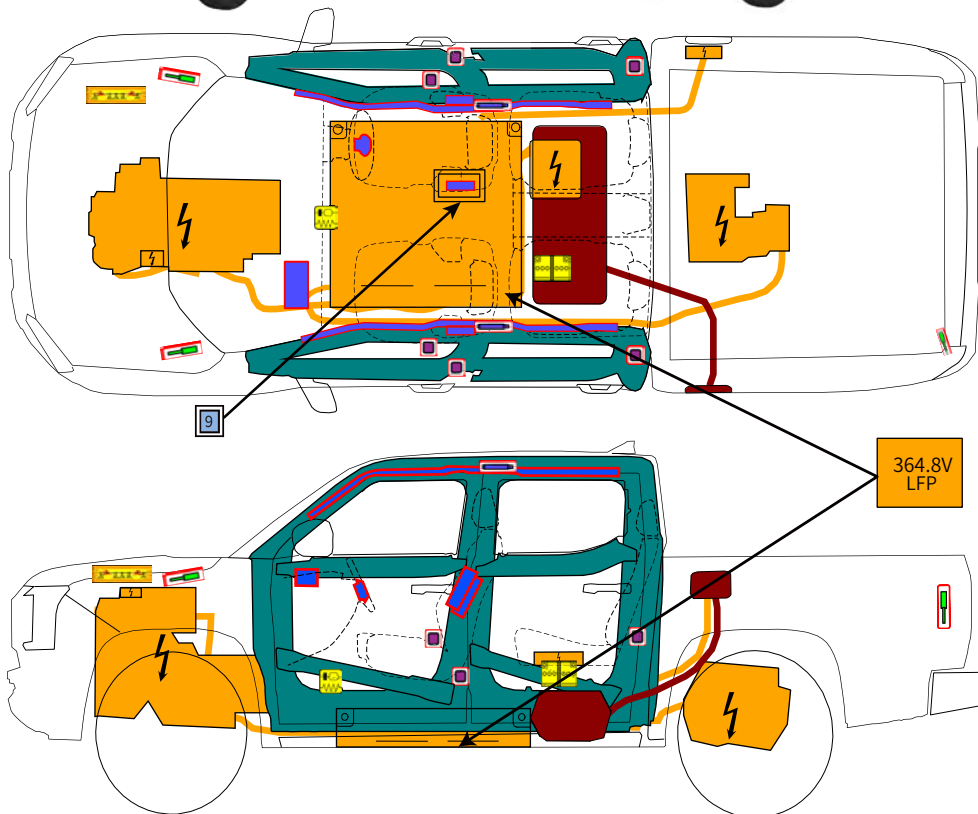

	Airbag		Battery low voltage		Battery pack, high-voltage		Cable cut
	Fuel tank content gasoline/ethanol		Gas strut/Preloaded spring		High strength zone		High voltage component
	High voltage power cable		Seat belt pretensioner		SRS control unit		Stored gas inflator
	Zone requiring special attention						



## 1. Identification / recognition



The electric motor is silent. The OK indicator light on the instrument cluster indicates that the current electric drive system is operational. Wear appropriate personal protective equipment.



## 2. Immobilisation / stabilisation / lifting

### Immobilise the vehicle



Shift into Park



Turn off the ignition


### Stabilisation-lifting points



■ Stabilisation-lifting points  
■ High-voltage battery

## 3. Disable direct hazards / safety regulations

### Main disabling method

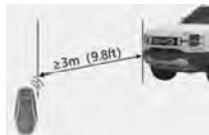

### Alternative disabling method



### Access to 12V battery



Do not touch, cut, or open high-voltage components and the high-voltage battery! Wear appropriate protective equipment!

In the event of an accident in which the airbags are deployed, the high-voltage system will be automatically deactivated. The high-voltage system is de-energised approximately 60 seconds after deactivation.



# BYD SHARK 6

(4-door Pick-up, 2024-)



## 4. Access to the occupants

High strength zone



Seat adjustment



Steering column adjustment



Glass types



- ① Laminated glass
- ② Tempered glass

## 5. Stored energy / liquids / gases / solids

		12.8V
		364.8V
		R1234yf 950±20g



When there is coolant leakage, the battery pack may become unstable and there is risk of thermal runaway. The battery pack temperature must be checked with a thermal imaging camera.



## 6. In case of fire



Extinguish the fire using large amounts of water.



BATTERY RE-IGNITION!

## 7. In case of submersion

After removing the vehicle from the water, shut off the high-voltage system (see Chapter 3) and drain water out of the vehicle. Appropriate personal protective equipment must be worn during this procedure.



## 8. Towing / transportation / storage

Front hook locations



Rear hook locations




Store at a safe distance from other vehicles!
















BATTERY RE-IGNITION!

## 9. Additional important information



Driver's seat has a far side airbag in addition to the side airbag.  
Location of far side airbag is shown in the mark  on page 1.

## 10. Explanation of pictograms used

	Acute toxicity		Air-conditioning component
	Bonnet		Corrosives
	Explosive		Flammable
	General warning sign		Hazardous to the human health
	Remove smart key		Use thermal Infrared camera
	Use water to extinguish the fire		Warning; Electricity
	Warning; low temperature		