

<u>Legend</u>

Airbag	Airbag inflator/ stored gas inflator	Seat belt pretensioner		SRS control unit
Gas strut, preloaded spring	High strength zone	Zone requiring special attention	000 000	Battery, low-voltage
Fuel tank content diesel				


This overview shows the maximum range of equipment of the vehicle.	ID No.	Version No.	Page No.	
	LGW-GWM P3012G-1-2	V1	1/4	






1. Identification / recognition



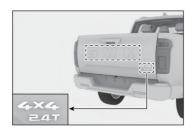

2. Immobilisation / stabilisation / lifting

Immobilize vehicle

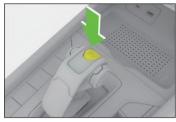








Stabilisation-lifting points

 

Jacking points

 
Support position

3. Disable direct hazards / safety regulations


the vehicle is stationary.

Disabling method


parking gear (P).





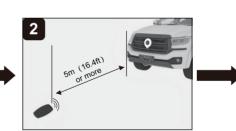

• Shut power off.

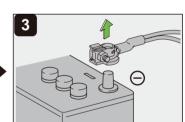



Access to 12V battery







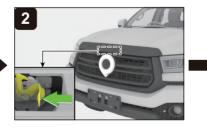

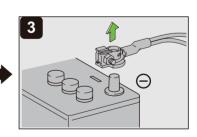

This overview shows the maximum range of equipment of the vehicle.	ID No.	Version No.	Page No.
	LGW-GWM P3012G-1-2	V1	2/4






4. Access to the occupants

High strength steel in body Seat adjustment








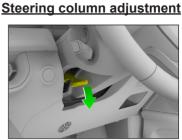

WHEN THE 12 V BATTERY IS DISCONNECTED, ELECTRICAL COMPONENTS CANNOT BE OPERATED.

 Glass types



5. Stored energy / liquids / gases / solids

000000	12 V
	78 ±3 L
菜	HFC-134a 480±10 g / 550±10 g

6. In case of fire



USE LARGE AMOUNTS OF WATER









7. In case of submersion

Proper personal protective equipment should be worn when handling any flooded vehicle. Pull the vehicle out of water as much as possible, immobilize the vehicle and disable the vehicle before starting any operation (refer to chapter 3).

Tilt the vehicle to one side to allow water to drain out of the vehicle.


This overview shows the maximum range of equipment of the vehicle.	ID No.	Version No.	Page No.
	LGW-GWM P3012G-1-2	V1	3/4






8. Towing / transportation / storage

Location front hook

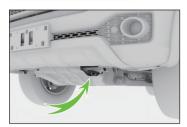

Location rear hook



 



STORE AT SAFE DISTANCE FROM OTHER VEHICLES!

9. Important additional information



Driver's seat has a far side airbag in addition to the side airbag. Location of far side airbag is shown in the mark 9. on page 1.

10. Explanation of pictograms used

Pictogram	Designation
<u>/</u>	Device to shut down power in vehicle
	Remove smart key
	Bonnet
<u>^</u>	General warning sign

Pictogram	Designation
	Flammable
	Explosive
	Corrosives

Pictogram	Designation
	Hazardous to the human health
(Signal Control of the Control of th	Use water to extinguish the fire
≉	Air-conditioning component

This overview shows the maximum range of equipment of the vehicle.	ID No.	Version No.	Page No.
	LGW-GWM P3012G-1-2	V1	4/4