


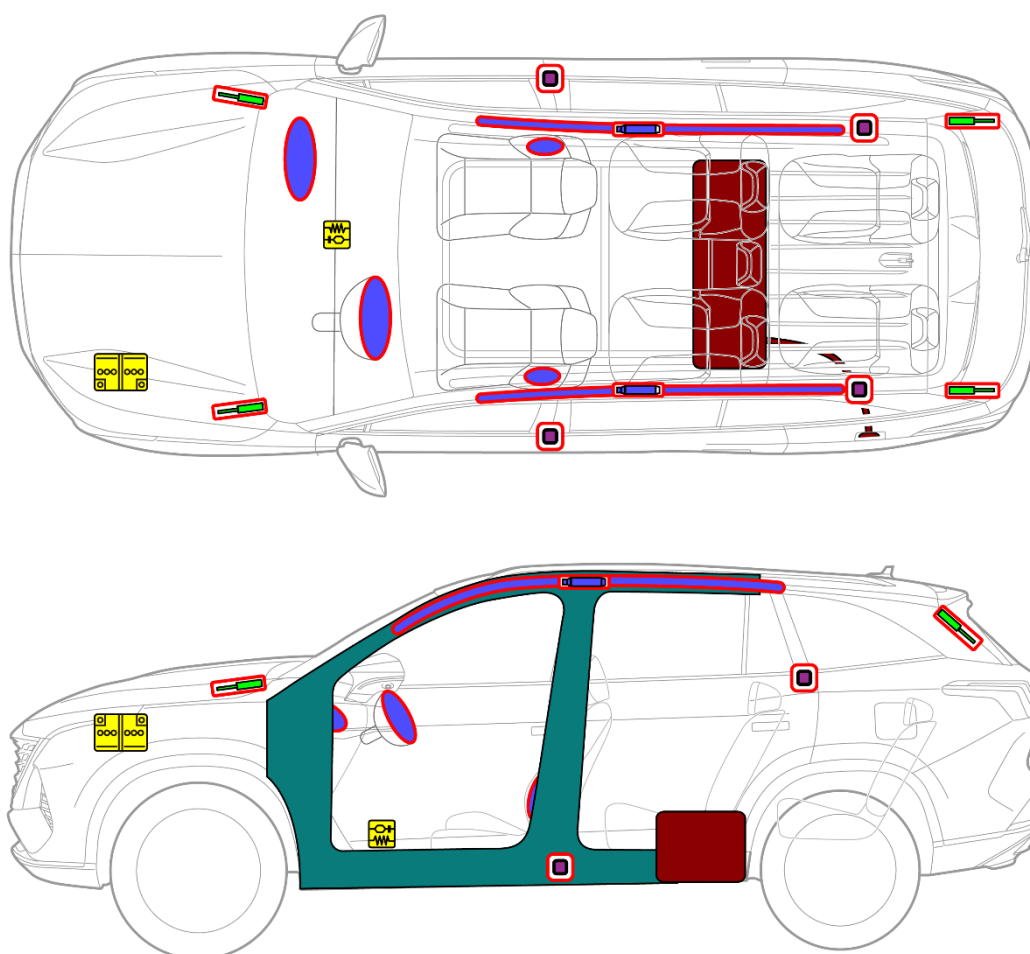

Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO 17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.



	Airbag		Stored gas inflator		Seat belt pretensioner		Gas strut / Preloaded spring
	High strength zone		SRS control unit		Battery low voltage		Fuel tank
ID Nr.	Version Nr.	Version date	page				
MG QS	1.0	02/2025	Page 1 of 1				



1. Identification/Recognition




LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.




2. Immobilisation/Stabilisation/Lifting

Immobilise the Vehicle

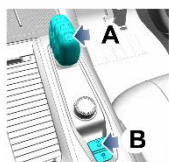

- A: Place in P position;
B: Apply the parking brake;
C: Operate the Start/Stop switch to shut down the power system.

Lifting points

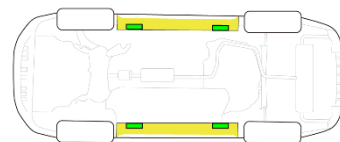


- Appropriate stabilisation-lifting points
■ Appropriate stabilisation points vehicle on side

Use caution to ensure you never come into contact with the fuel tank or harnesses while lifting or manipulating the vehicle.

3. Disabling Direct Hazards / Safety Regulations


ALTERNATIVE DISABLING METHOD

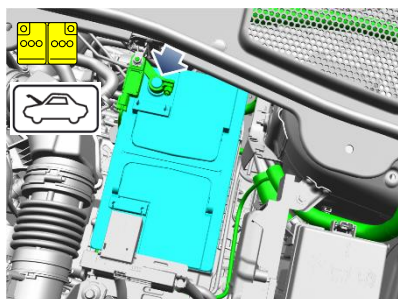

The vehicle power system can be shut down normally.

Power off and disconnect the negative cable of 12V low-voltage battery.

ACCESS to low voltage battery

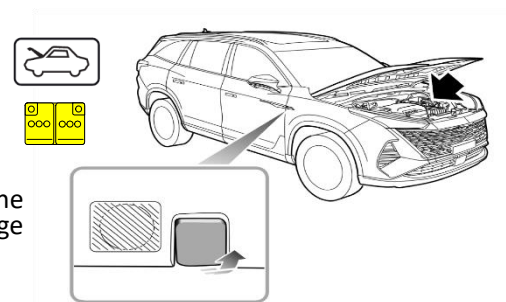


ID Nr.	Version Nr.	Version date	page
MG QS	1.0	02/2025	Page 2 of 4




4. Access to the Occupants

- ULTRA HIGH STRENGTH STEEL
- NO-CUT ZONES

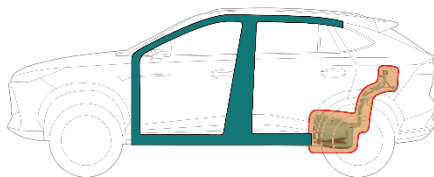


Glass types

- Front window: Laminated glass
- Rear window: Tempered glass
- Four door : Tempered glass

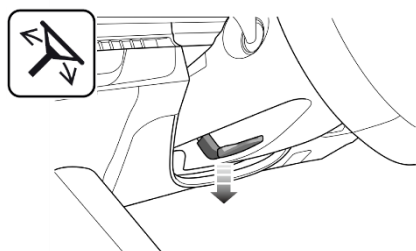

Fully release the locking lever, the steering wheel can be adjusted in 4 directions.

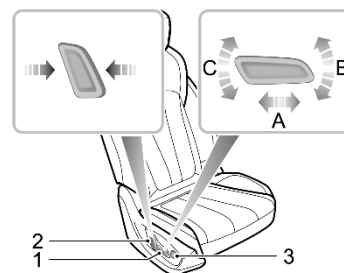

- 1、Cushion Height and Forward/Backward Adjustment
- 2、Backrest Adjustment
- 3、Lumbar Support

5. Stored Energy / Liquids / Gases / Solids

		12V
		Fuel tank:65 L
		Refrigerant:1140±20g

6. In Case of Fire



USE LARGE AMOUNTS OF WATER.



BATTERY RE-IGNITION!



DO NOT SUBMERGE VEHICLE TO EXTINGUISH BATTERY.

- Wear a full set of insulated protection equipment and use specialized insulated tools.
- Continuously spray with a large amount of continuous water.
- To recover the vehicle, do not tow it directly, use a rescue vehicle instead.

ID Nr.	Version Nr.	Version date	page
MG QS	1.0	02/2025	Page 3 of 4




7. In Case of Submersion

- Wear a full set of insulated protection equipment and use specialized insulated tools.
- To transfer the vehicle, do not tow it directly but use a recovery vehicle instead.

8. Towing / Transportation / Storage

- Personnel are prohibited from staying in the vehicle when towing and transporting the vehicle.
- When using a transporter to ship the vehicle always ensure the parking brake is applied, and the vehicle must be secured as illustrated.
- The vehicle can be towed from the site only when you make sure there is no safety risk.
- Before towing the vehicle, switch on the hazard warning lamps, close all doors and lock the vehicle. The drive wheels **MUST** be suspended above the ground.
- When towing, **DO NOT** accelerate or brake suddenly, this can cause accidents.
- When it is necessary to temporarily push or tow the vehicle from a dangerous situation or onto the transporter, the speed must remain below 3 mph (5 km/h) and be completed within 3 minutes.

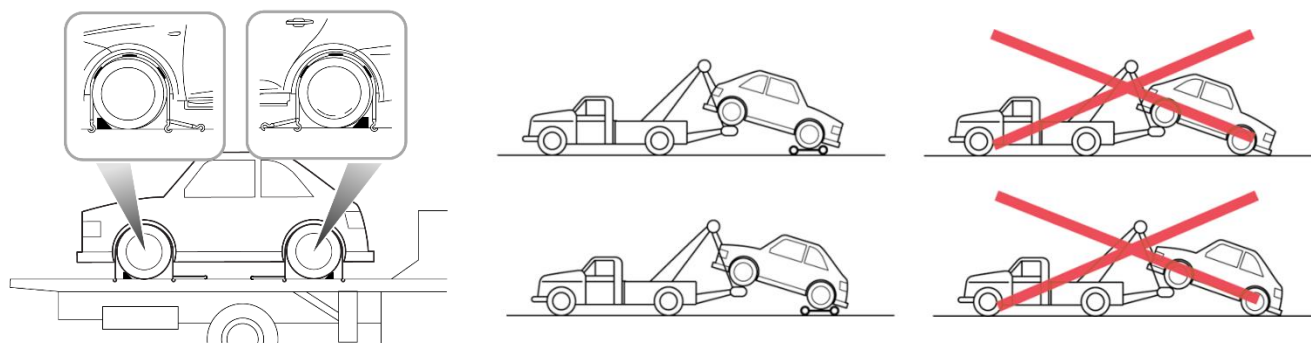

Please consult the Owner's Handbook for detailed instructions

10. Explanation of Pictograms Used

	Bonnet; hood		Remove smart key /starter key		Airconditioning component		Lifting point		Use thermal Infrared camera
	Steering wheel, tilt control		Seat adjustment, longitudinal		Fuel tank		Use water to extinguish the fire		Hazardous to human health
	Flammable		Corrosives		Explosive		Acute toxicity		
ID Nr.		Version Nr.		Version date		page			
MG QS		1.0		02/2025		Page 4 of 4			