



# **SUBARU Forester HYBRID**

5 door SUV CY:2025-

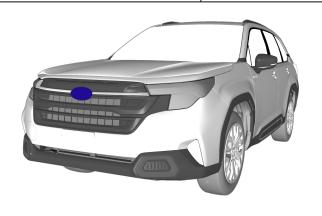





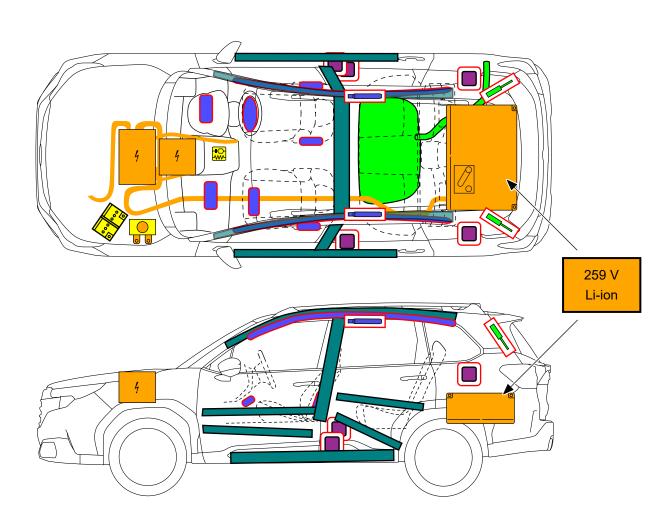


	Airbag		Stored gas inflator		Seat belt pretensioner	<b>P</b>	SRS control unit		
0 0	Battery low voltage		Gas strut / Preloaded spring		Fuel tank		High strength zone		Zone requiring special attention
	Battery pack, high-voltage	1	High voltage power cable		High voltage device that disconnects high voltage		Fuse box disabling high voltage	4	High voltage component
II		ID No.		Versio	n No.	Versio	n date	Page	
		JF2-T8	440AE	01		04 / 20	)25	1/4	

## 1. Identification / Recognition

■ Location of vehicle badges



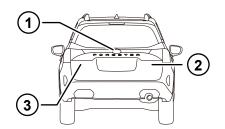






Never assume the e-BOXER is shut off simply because it is silent.

# 2. Immobilisation / Stabilisation / Lifting

■ Completely immobilize the vehicle




1. Chock wheels and set the parking brake.

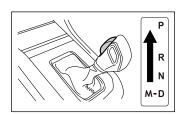


2. Shift the select lever to the Park position.

■ Stabilisation-lifting point

Crib at 4 points directly under the front and side sills.

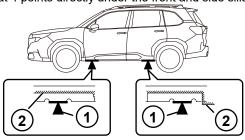

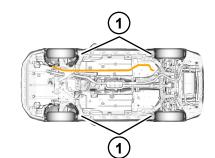

- 1 Cribbing Points
- 2 Side Sill Garnish
- High Voltage



Do not place cribbing under the orange colored power cables, exhaust system, or fuel system.

## 3. Disable direct hazards / Safety regulations

■ If any of the following systems are required to be operated, operate them BEFORE disconnecting the battery.

Power door lock Power window
Electric parking brake Power seat controls

Rear gate opener





Once the 12 Volt auxiliary battery is disconnected, power controls will not operate.

#### 1. High-voltage circuit cutoff and 12V circuit cutoff procedure

<Turn the ignition switch to OFF> : Keep off the high voltage circuit and 12V system circuit.



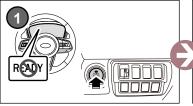

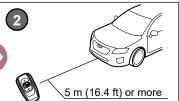

#### 2A. High voltage circuit interruption


<Remove the service plug>




- If cannot cut off the high-voltage circuit, do not touch, disconnect, or open the high-voltage components and high-voltage battery.
- · To prevent injury wear personal protective equipment suitable for organic solvents including SCBA.





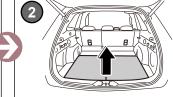

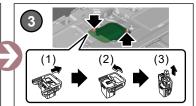

In case of a collision with airbag deployment and/or seat belt pretensioner activation, the propulsion system will be disabled. The restraint systems are still active.

ID No.	Version No.	Version date	Page	
JF2-T8440BE	01	04 / 2025	2/4	

#### 2B. <Alternative>12V circuit interruption





If the ground terminal of 12V battery cannot be removed, 12V circuit cannot be cut off. Be careful when working, as SRS Airbag System may suddenly expand due to a short circuit or impact on the harness, which may result in serious injury.

#### <Disconnect the ground terminal from battery sensor>





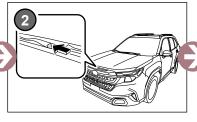


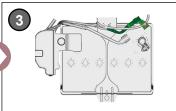


#### <Alternatively, remove the FUSE>






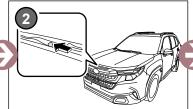

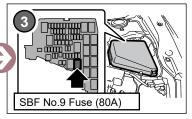


## 4. Access to the occupants

#### **■ Window Glass**

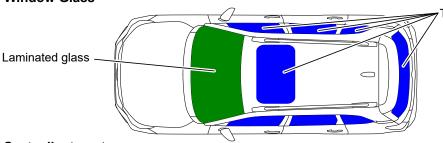

Tempered glass


#### ■ Seat adjustment

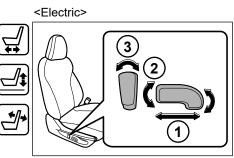





■ Steering Column adjustment

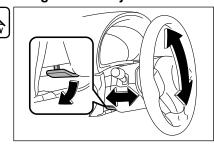

#### ■ High strength steel in Body







590 Mpa (6,016 kgf /cm², 85,549 psi)


980 MPa (9,993 kgf /cm2, 140,299 psi)

1,500 Mpa (15,295 kgf /cm<sup>2</sup>, 217,498 psi)

#### Door Latches



#### Roof Removal Area

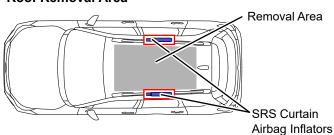

ID No.	Version No.	Version date	Page
JF2-T8440AE	01	04 / 2025	3 / 4

# 5. Stored energy / Liquids / Gases / Solids Li-ion : 259 V 12 V 63 L HFO-1234yf : 0.450 kg (0.99 lb)

# 6. In case of fire



**USE COPIOUS AMOUNTS OF WATER** 

If it is difficult to apply copious amounts of water to the high voltage battery, it is recommended to allow the high voltage battery to burn itself out.



**RE-IGNITION POSSIBLE!** 














## 7. In case of submersion



Do not touch the service disconnect plug, high voltage parts and wiring to prevent electric shock when the vehicle is submerged. Please shut off the hybrid system after completely pulling the vehicle out of the water.

## 8. Towing / Transportation / Storage

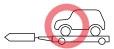





Store the vehicle at a safe distance from other vehicles.

04 / 2025

4/4





Less than 30 km/h (19 mph)

RE-IGNITION POSSIBLE!






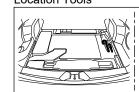

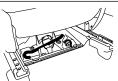

# 9.Important additional information

#### ■ Seat Cushion Airbag

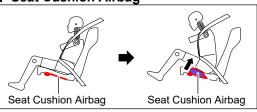

#### 10.Explanation of pictograms used

JF2-T8440AE


-	1 0									
H	Hybrid Electric Vehicle on fuel of liquid group 2		**		Air-conditioning component			Bonr	net	
(K)	Steering wheel, tilt control				Seat height adjustment		*	Seat adjustment, seat back		
	Seat adjustment, longitudinal		<u>^</u>		General warning sign		Warning, Electricity		ning, Electricity	
	Remove smart key		∐R ∭		Use thermal Infrared camera		<u> </u>	Flam	mable	
$\Diamond$	Gases under pressure				Explosive			Acute	e toxicity	
	Corrosives				Hazardous to the human health		Lift		g point; central support	
ID No.		ID No.	Vers		ersion No. Version		n date		Page	

01





# SUBARU Forester 5 door SUV CY:2025-



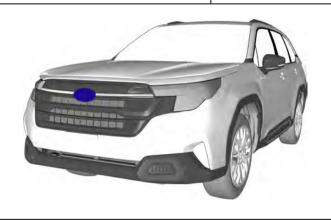



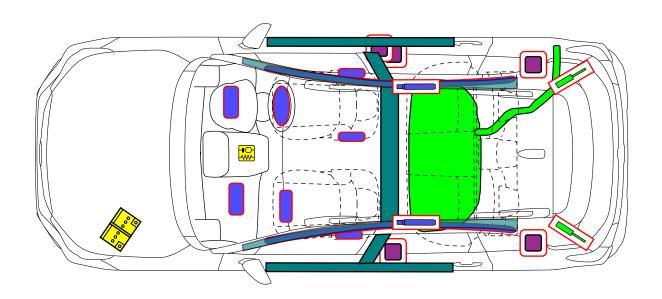


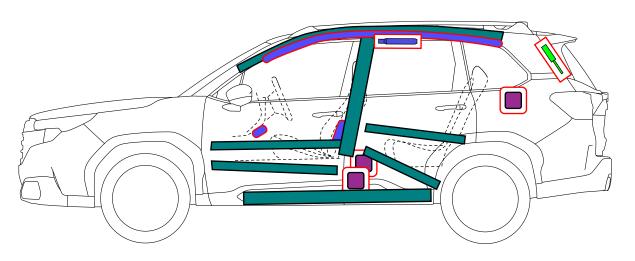


	Airbag		Stored gas inflator		Seat belt pretensioner	<b>■</b>	SRS control unit		
<mark>∞∞</mark> ∞∞	Battery low voltage		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		Fuel tank
		ID No.		Version No.		Version date		Page	
		JF2-T8	JF2-T8410AE		01		04 / 2025		

## 1. Identification / Recognition

■ Location of vehicle badges

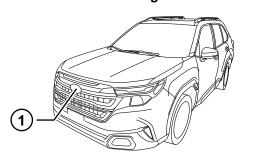


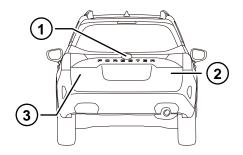




# 2. Immobilisation / Stabilisation / Lifting

■ Completely immobilize the vehicle

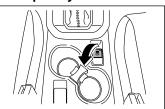


1. Chock wheels and set the parking brake.

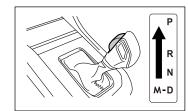


2. Shift the select lever to the Park position.

Stabilisation-lifting point

Crib at 4 points directly under the front and side sills.

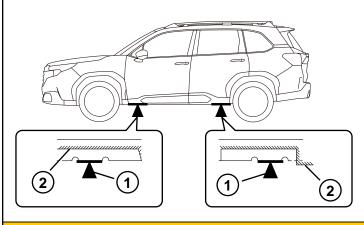

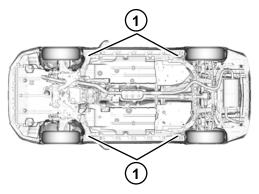

1 Cribbing Points

2 Side Sill Garnish

# 3. Disable direct hazards / Safety regulations

■ If any of the following systems are required to be operated, operate them BEFORE disconnecting the battery.


Power door lock Electric parking brake Power window Power seat controls


Rear gate opener





Once the 12 Volt auxiliary battery is disconnected, power controls will not operate.

■ Perform procedure Main or Alternative to completely shut off the vehicle.

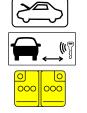

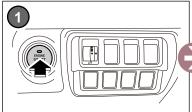


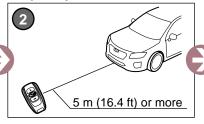


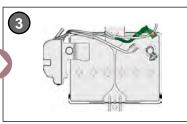


■ Access to Battery low voltage




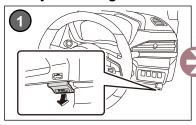

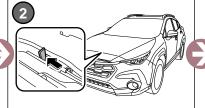

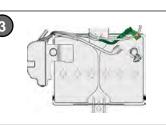

ID No. Version No.		Version date	Page
JF2-T8410AE	01	04 / 2025	2/4

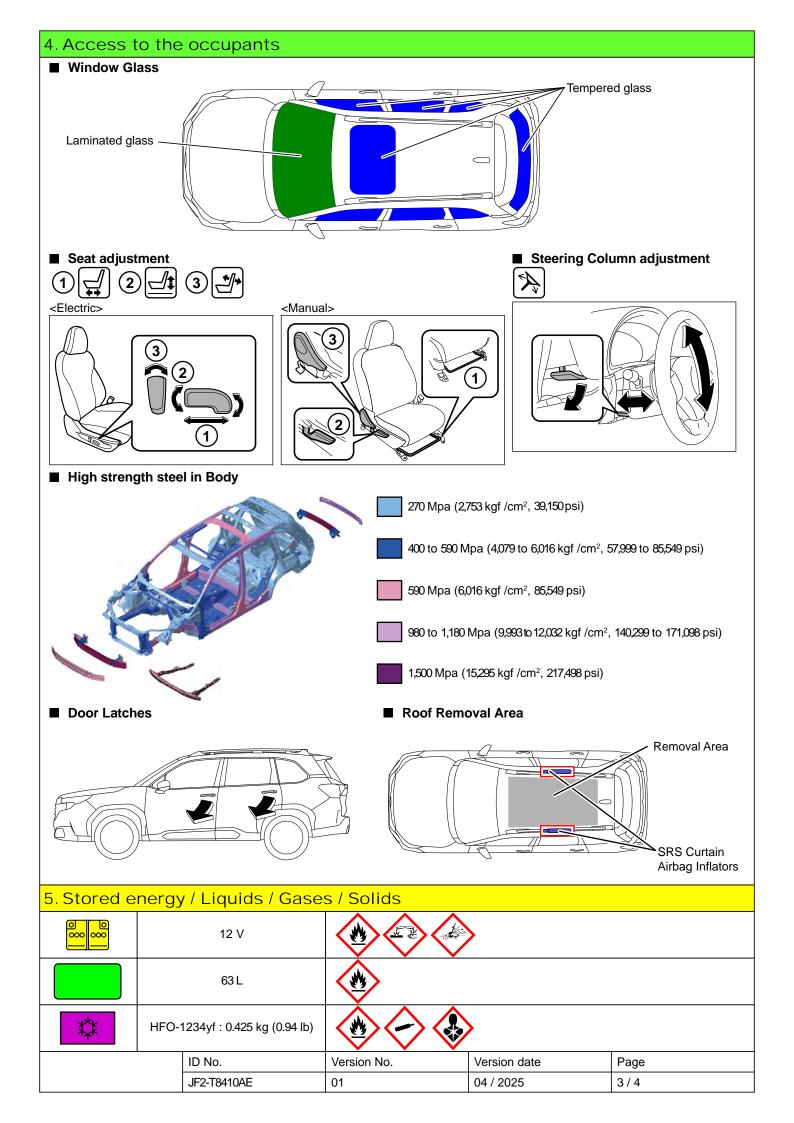

# 6. In case of fire









# 7. In case of submersion

If possible, remove the vehicle from the water and continue with the deactivation procedure for this vehicle (see chapter 3).

# 8. Towing / Transportation / Storage










Less than 30 km/h (19 mph)




**RE-IGNITION POSSIBLE!** 

Store the vehicle at a safe distance from other vehicles.

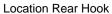




#### **Location Tools**

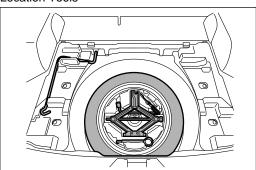

# 9. Important additional information

## ■ Seat Cushion Airbag

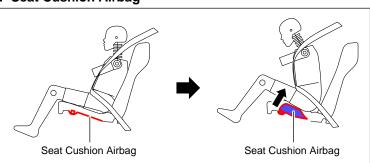

# 10. Explanation of pictograms used

B	Vehicle on fuel of liquid group 2		Batte		Battery Low Voltage		Fuel		tank
(K)	Steering wheel, tilt control		<b></b>		Seat height adjustment		Bonnet		net
<b>*/</b> *	Seat adjustment, seat back recline				Seat adjustment, longitudinal		Use thermal Infrared of		thermal Infrared camera
	Remove smart key		*		Air-conditioning component		<u>^</u>	General warning sign	
$\Diamond$	Gases under pressure			•	Explosive		<b>(M)</b>	Flam	nmable
	Corrosives				Hazardous to the human health		<b>T</b>	Lifting point; central support	
		ID No.		Version No.		Version date		Page	
		JF2-T8410AE		01		04 / 2025		4 / 4	