

Hyundai INSTER


5 doors, SUV September 2024








Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO 17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.

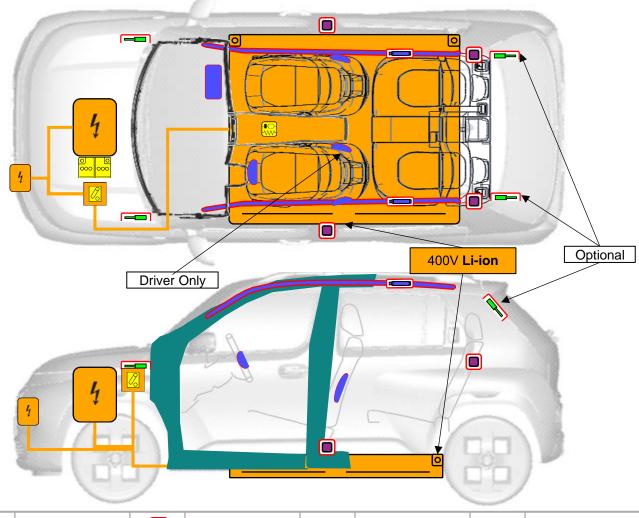

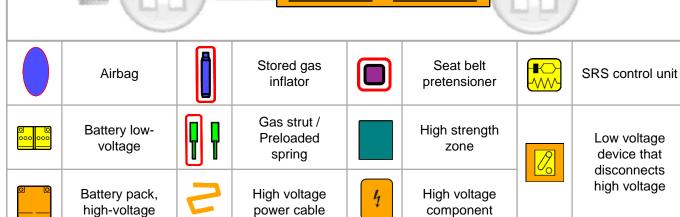


ID No.	Version No.	Version date:	Page
KMH-AX-RS-I-1-202412	01	2024	1 of 4

1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN.



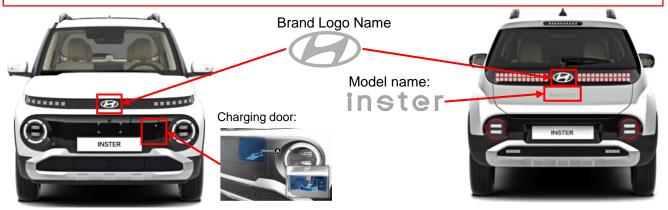

2. Immobilisation / stabilisation / lifting


Immobilisation:





- 1) Chock the wheels and pull the electronic parking brake switch to set the parking brake.
- 2) For automatic vehicles, While depressing the brake pedal shift the lever to P(park) position or press P button to make vehicle in P position

For stabilize vehicle, crib at four points directly under the front and rear pillars using wooden blocks or equivalent objects

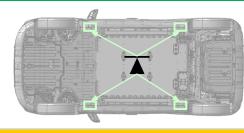

Lifting points under the vehicle:



3. Disable direct hazards / safety regulations

IN CASE OF AN ACCIDENT, WHERE AIRBAGS AND SEATBELT PRETENSIONER WERE ACTIVATED, THE HV-SYSTEM SWITCH'S OFF AUTOMATICALLY. FOR ALL OTHER CASES USE THE DISABLING METHODS BELOW

Disabling High Voltage Battery: Access:



1 Pull the lever on the



hood release driver side.



(2) Go to the front of the vehicle. Push the secondary hood release lever to the left.





 





Disabling:

(3) Open the cover with the firefiahter helmet

4 The



 (1)HV connected (2)HV disconnected



Wait 5+ minutes for the capacitor to discharge after removing the service Interlock.

service interlock is in the fuse box

ID No. KMH-AX-RS-I-1-202412 Version No. 01

Version date:

Page 2 of 4

2024

Disabling 12V Battery:





Turn the ignition switch off.
Follow step ①-③ from disabling HV-method to get access to the 12V Battery



Disconnect the negative(-) terminal



 
Disconnect the positve(+) terminal

4. Access to the occupants

Steering column adjustment:



Seat adjustment:











Manual

 
2nd row



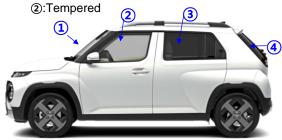

Vehicle body → Hardened Steel



 


Bottom

Boot:



Insert a long, flat object, such as a key, into the hole at the bottom of the tailgate trim. Slide the latch in the direction of the arrow to unlock the tailgate.

5. Stored energy / liquids / gases / solids

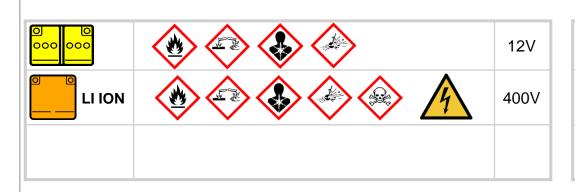



R-134a 625g







WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL IMAGING CAMERA

ID No.	Version No.	Version date:	Page
KMH-AX-RS-I-1-202412	01	2024	3 of 4

6. In case of fire



Use large amount of water

 














BATTERY RE-IGNITION!





7. In case of submersion




Do not touch any of the high-voltage components or cables including the high voltage cut-off switch, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled out of the water.




8. Towing / transportation / storage

OK

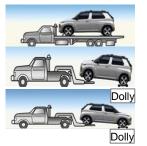


Notice: The use of wheel dollies or flatbed is recommended. Use a wheel lift or flatbed equipment.

 Not OK



 Notice: Do not tow with slingtype equipment (1). Do not tow the vehicle with the front wheels on the ground as this may cause damage to the vehicle (2).




Towing hock located in the tool case in the tailgate

The hook must be used only temporary towing.

Store at safe distance from other vehicles

9. Important additional information

10. Explanation of pictograms used

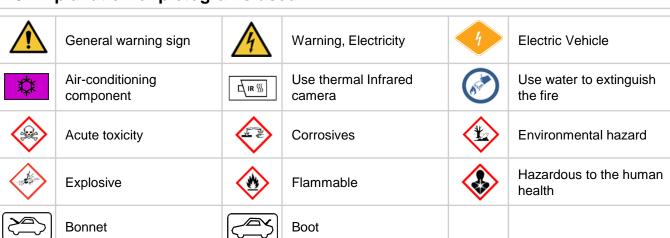

 ID No.
 Version No.
 Version date:
 Page

 KMH-AX-RS-I-1-202412
 01
 2024
 4 of 4