


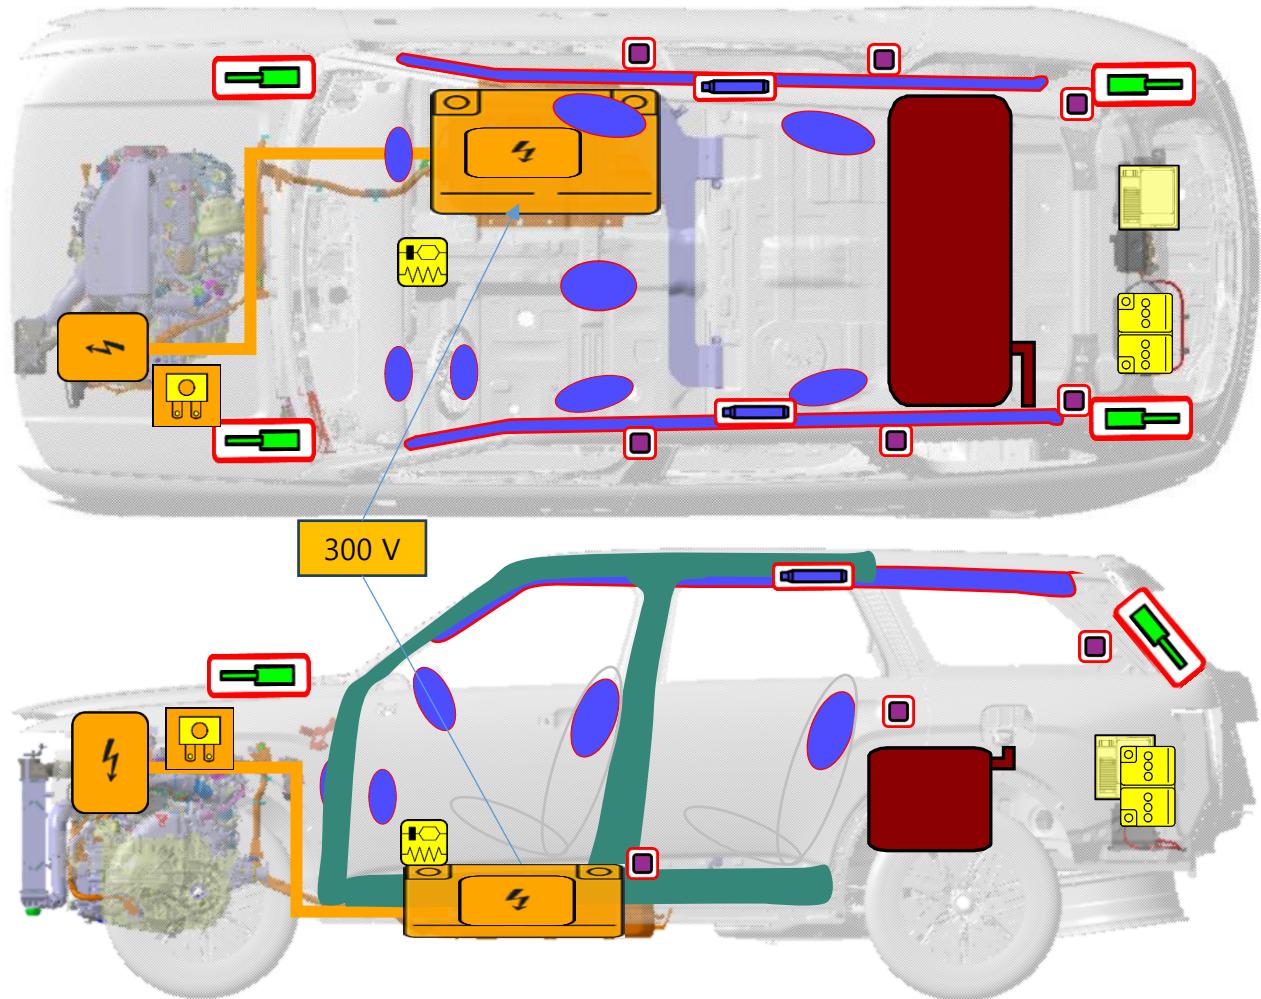

Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO 17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.




	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit
	Battery low-voltage		Gas strut / Preloaded spring		High strength zone		Fuel tank
	Battery pack, high-voltage		High voltage power cable		High voltage component		Fuse box disabling high voltage
	PLBM(Parking – Lithium-Ion 12V Battery Module)						

1. Identification / recognition




LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN.

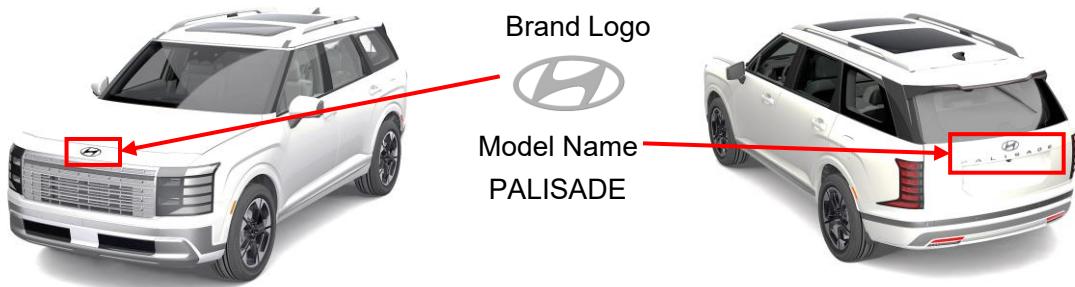

2. Immobilization / stabilization / lifting


Immobilization:

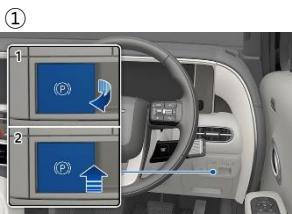

1. Chock the wheels and pull the EPB switch to set the parking brake.
2. For automatic shifter vehicles, press the Park (P) button while depressing the brake pedal to change to the parking mode.

To stabilize the vehicle, crib at four points directly under the front and rear pillars using wooden blocks or equivalent objects

Lifting points under the vehicle:

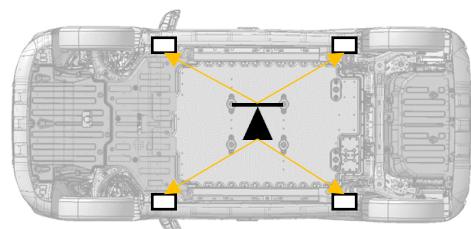

3. Disable direct hazards / safety regulations

IN CASE OF AN ACCIDENT WHERE AIRBAGS AND SEATBELT PRETENSIONER ARE ACTIVATED, THE HV-
SYSTEM SWITCH GOES OFF AUTOMATICALLY.





TO MANUALLY SHUT DOWN THE SYSTEM, USE THE DISABLING METHODS BELOW:



Disabling High-Voltage Battery:



1. Pull the hood release lever to open the hood.
2. Go to the front of the vehicle, open the hood slightly, pull the secondary hood release lever (1), at the center under the hood, upwards and wide open the hood (2).
3. Open the fuse box cover located in the engine bay.
4. Find the "Service Interlock" in the fuse box.

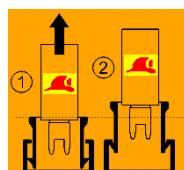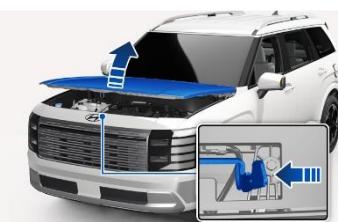

① HV connected
② HV disconnected

Disabling:



Pull "Service Interlock" upwards.

"Service Interlock" is not completely removable.

■ Disabling 12V Battery:



1. Press the power tailgate open/close button for 1 second. The tailgate opens or closes with a warning sound.



2. Locate 12v Battery



3. Disconnect (-) Terminal

4. Access to the occupants

Steering column adjustment :

<Manual>




<Automatic>



Lift Gate : How to operate it indoors in an emergency

1. Remove the opening cover at the bottom.
2. Move the latch in the direction of the arrow.
3. Push the lift gate.

Seat adjustment

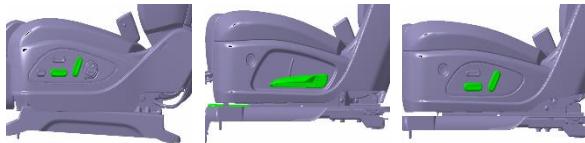

1st row POWER

2nd row MANUAL

2nd row POWER


3rd row WALK-IN SWITCH



If the walk-in switch does not work, pull the strap located on the lower right side of the seat.

High Strength Steel


Side

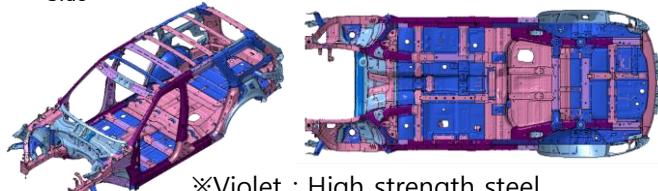

※Violet : High strength steel

Glass :

① : Laminated ②③: tempered (OPT : Laminated) ④⑤: tempered

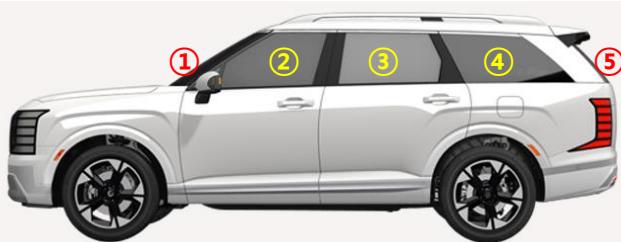

5. Stored energy / liquids / gases / solids

		69L	
		12V	R-1234yf
		300V	950±25g
		12V	



WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL IMAGING CAMERA.



6. In case of fire



 
Use a large amount of water



BATTERY REIGNITION!



Gas strut



Risk of missile effect of hood and tailgate.

7. In case of submersion



Do not touch any of the high-voltage components or cables including the high voltage cut-off switch, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been retrieved from water.



8. Towing / transportation / storage

OK



Notice: The use of wheel dollies (1) or flatbed is recommended. Use a wheel lift or flatbed equipment.

Not OK



Notice : Do not tow with sling-type equipment (1). Do not tow the vehicle with the front wheels on the ground as this may cause damage to the vehicle (2).

9. Important additional information

10. Explanation of pictograms used

	Gasoline vehicle		Fuel tank content gasoline/ethanol		Bonnet
	General warning sign		Air-conditioning component		Boot
	Corrosives		Hazardous to the human health		Flammable
	Explosive		Acute toxicity		Environmental hazard
	Use thermal infrared camera		Use water to extinguish the fire		Warning, Electricity
	Hybrid Electric Vehicle on fuel of liquid group 2				