




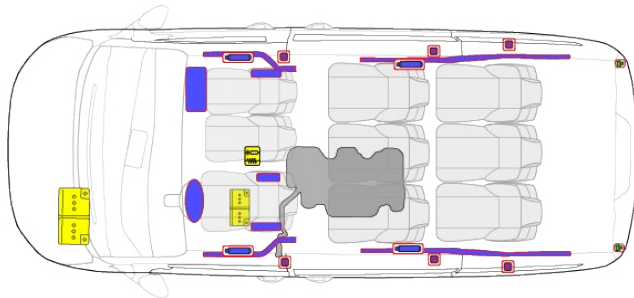

Left-hand drive vehicle:

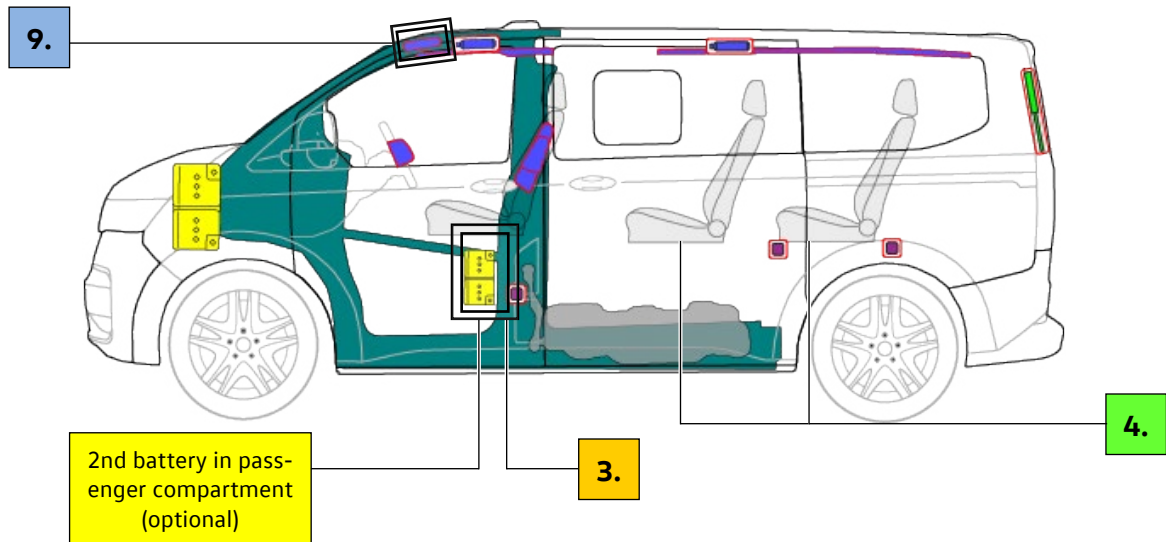


Right-hand drive vehicle:

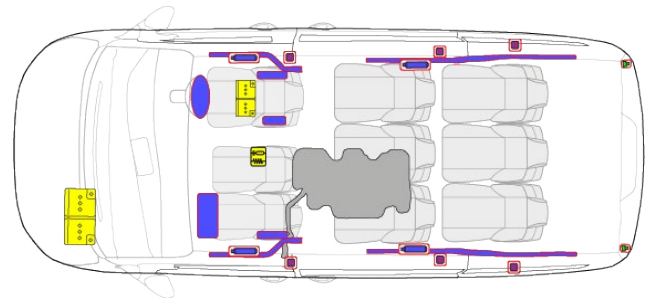

	Airbag		Stored gas inflator		Belt tensioner		SRS control unit		Diesel fuel tank
	Low-voltage battery		Gas strut / Preloaded spring		High strength zones		Zone requiring special attention		

1. Identification / recognition

Lettering

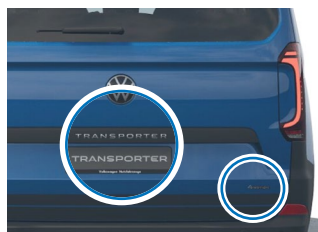


Optional wing doors



- Two vehicle lengths
- Optionally without rear glazing
- Optional high roof
- Optionally with up to 9 seats


2. Immobilisation / stabilisation / lifting

Immobilising the vehicle

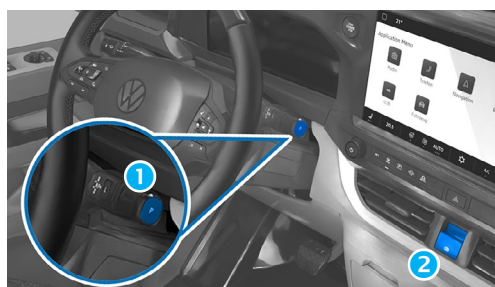

- 1 Press the "P" button on the steering column switch
- 2 Operate the electronic parking brake in the dash panel
- 3 Secure the vehicle to prevent it from rolling away


Lifting points

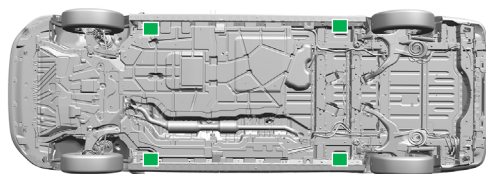

Appropriate lifting points

3. Disable direct hazards / safety regulations

Switching off the ignition

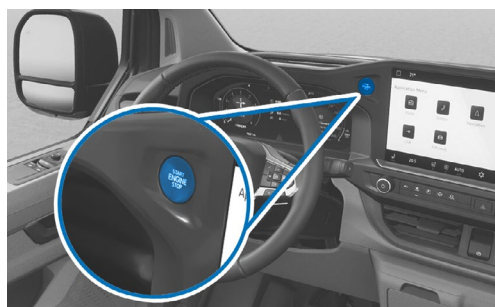

Press the "Start-Stop" button on the dash panel without operating the foot brake.




If possible, move the vehicle key more than 5 m away from the vehicle.

Deactivating the 12-volt electrical system voltage



In the engine compartment:
Disconnect the negative battery terminal

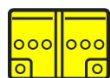


The 12-volt vehicle electrical system voltage is used for functions such as unlocking and opening electrically operated doors and flaps, and for electric seat adjustment.





After disconnecting the 12-volt vehicle electrical system voltage, the airbags are deactivated. Unignited airbags can be triggered by heat in the event of a fire!

Deactivating the 12-volt vehicle electrical system voltage (optional)

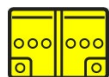

In the passenger compartment:


- 1 Move the driver seat as far forwards as possible
- 2 Remove cover
- 3 Disconnect the cable

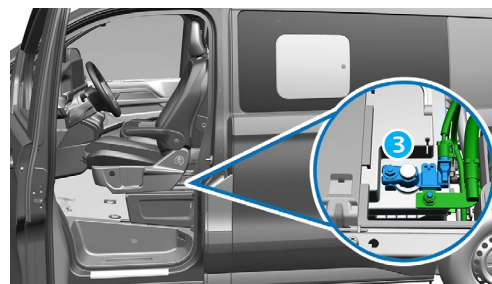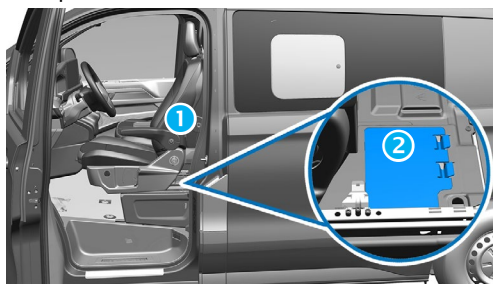

All batteries must be disconnected in order to deactivate the vehicle electrical system.

4. Access to the occupants

The seats in the second and third seat rows are optional.

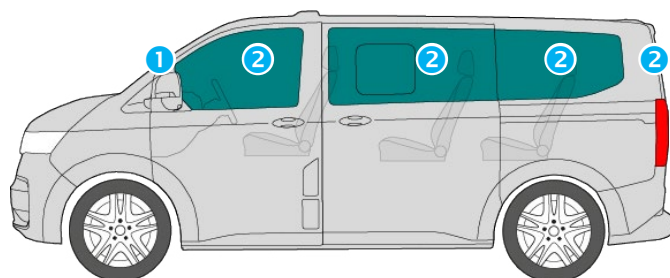

Glass types:

- 1 Laminated glass
- 2 Tempered glass

5. Stored energy / liquids / gases / solids



70 l



12 V

6. In case of fire



7. In case of submersion

After recovery, allow the water to drain and disconnect the battery/batteries (see section 3).
Wear appropriate personal protective equipment!

8. Towing / transportation / storage



A vehicle that has been in an accident must not be towed on its drive axles.



Volkswagen Transporter

Panel van, Kombi, from 2024









5-door, max. 9-seater

9. Important additional information

The front passenger front airbag is installed in the headliner.

Volkswagen Guideline for Rescue Services: www.volkswagen.de

10. Explanation of pictograms used

							
Flammable	Corrosives	Hazardous to human health	Environmental hazard	Fuel tank, diesel	Use water to extinguish the fire	Remove smart key	Unlock bonnet