



KIA K4 4 door, Sedan From 2025







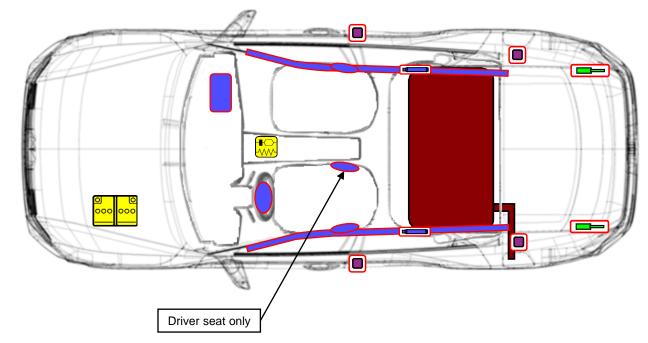

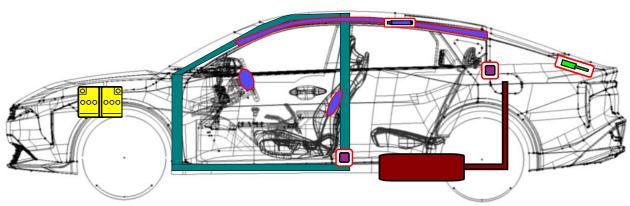


	Airbag		Stored gas inflator	Seat belt pretensioner	SRS control unit	
0000	Battery low- voltage	4	Gas strut / Preloaded spring	High strength zone	Fuel tank	

 ID No.
 Version No.
 Version date:
 Page

 3KP-CL4-RS-I-3-202505
 01
 2025
 1 of 4


1. Identification / recognition

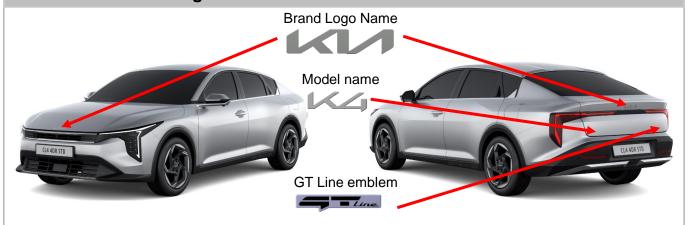

2. Immobilisation / stabilisation / lifting

Immobilisation:



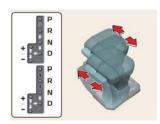



- 1. Chock the wheels and pull the **EPB** switch to set the parking brake.
- 2. For automatic vehicles shift the knob to the park(P) position.

For stabilize vehicle, crib at four points directly under the front and rear pillars using wooden blocks or equivalent objects

Lifting points under the vehicle:



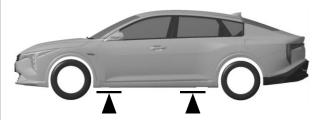


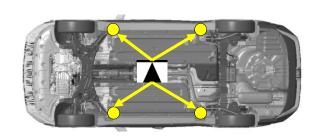


3. Disable direct hazards / safety regulations

 Disabling 12V Battery:








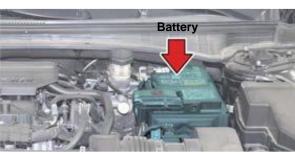





Battery in the engine room

   Disabling:







Disconnect the positve(+) terminal

ID No. 3KP-CL4-RS-I-3-202505


Version No. 01

Version date: 2025


Page 2 of 4

4. Access to the occupants

Steering column adjustment:

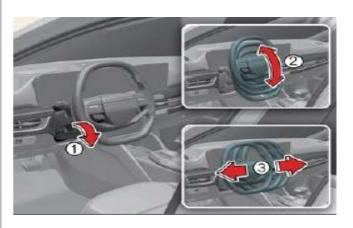

Seat adjustment:

 



FRT SEAT MANUAL **POWER**



 
REAR SEAT FOLDING

Glass:

1 : Laminated 2345: Tempered



Vehicle body → Hardened Steel



5. Stored energy / liquids / gases / solids





R-1234yf 875g





WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL IMAGING CAMERA



6. In case of fire



Use large amount of water














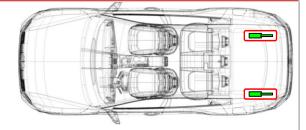









Risk of missile effect of hood and tailgate.

ID No. 3KP-CL4-RS-I-3-202505 Version No. 01

Version date: 2025

Page 3 of 4


7. In case of submersion




Do not touch any of the 12V components or cables, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled out of the water.



8. Towing / transportation / storage

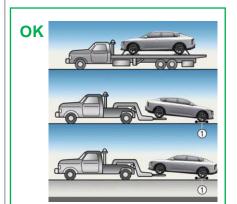

Notice: The use of wheel dollies (1) or flatbed is recommended. Use a wheel lift or flatbed equipment.

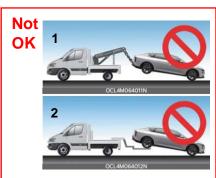

Notice: Do not tow with slingtype equipment (1). Do not tow the vehicle with the front wheels on the ground as this may cause damage to the vehicle (2).

Front



Rear



STD

Towing hook is located in the tool case in the tailgate

10. Explanation of pictograms used

· · ·							
B	Gasoline vehicle		Fuel tank content gasoline/ethanol		Bonnet		
<u>^</u>	General warning sign	*	Air-conditioning component		Boot		
	Corrosives		Hazardous to the human health		Flammable		
	Explosive		Acute toxicity	*	Environmental hazard		
	Use thermal Infrared camera	(ASP)	Use water to extinguish the fire	4	Warning, Electricity		

ID No.	Version No.	Version date:	Page
3KP-CL4-RS-I-3-202505	01	2025	4 of 4