

# Škoda **Superb Combi**5 doors/5 seats/station wage


# 5 doors/5 seats/station wagon from 2024








Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO 17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.

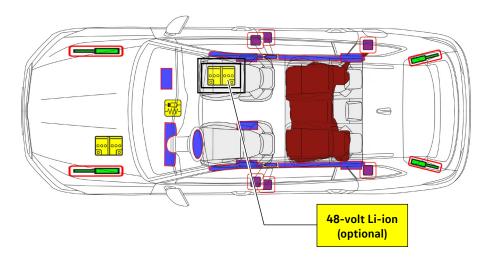

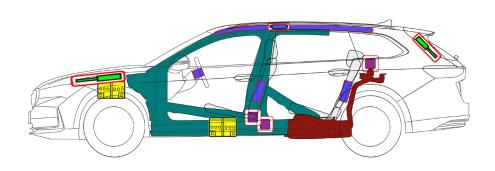

Airbag	Stored gas inflator		Seat belt pretensioner	SRS control unit	Fuel tank content gasoline
Gas strut/preloaded spring	High strength zone	000 000	Battery low voltage	Zone requiring special attention	

 $Skoda\_Superb\_Combi\_Stationwagon\_2024\_5d\_GD\_EN$ 



# Škoda Superb Combi

5 doors/5 seats/station wagon from 2024

# 1. Identification / recognition

Lettering




# 2. Immobilisation / stabilisation / lifting

Immobilising the vehicle



- 1. Press the "P" button
- 2. Apply the electric parking brake
- 3. Switch off the ignition (power display "OFF")
- 4. Secure the vehicle so it cannot roll away

### Lifting points

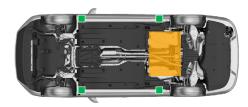

- Suitable lifting points
- Battery pack, high-voltage

# 3. Disable direct hazards / safety regulations

## Switching off the ignition



Press the "Engine Start/Stop" button in the centre console without engaging the brake pedal.



Keep the vehicle key, key card and/or smartphone with the app at least five metres away from the vehicle wherever possible.



### Disconnecting the 12-volt battery



In the engine compartment
Disconnect the negative battery terminal

Additional information Document number

Document numberVersionSkoda\_Superb\_Combi\_Stationwagon\_2024\_5d\_GD\_EN01 (04/2024)



# Škoda Superb Combi


# 5 doors/5 seats/station wagon from 2024



### Disconnecting the 48-volt battery


In the event of accidents where the airbag is deployed, the 48-volt vehicle electrical system will be deactivated automatically as soon as airbag deployment has been detected.

For all other cases, the 48-volt vehicle electrical system can be deactivated as follows:

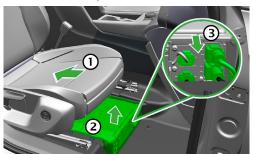

- ① Move the right seat all the way back
- Remove the battery cover in the footwell on the right-hand side of the vehicle
- 3 Unplug all connectors

### 4. Access to the occupants

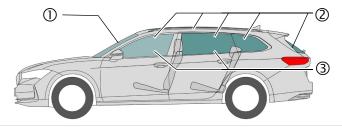

### Glass types:

- ① Composite safety glass
- ② Single-pane safety glass
- ③ Composite safety glass, optional

Electrical seat adjustment

Mechanical seat adjustment

Mechanical steering column adjustment








## 5. Stored energy / liquids / gases / solids









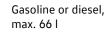











12 V











48 V Lithium-ion

**Additional information** 

**Document number**Skoda\_Superb\_Combi\_Stationwagon\_2024\_5d\_GD\_EN

**Version** 01 (04/2024)

Page



# Škoda Superb Combi

5 doors/5 seats/station wagon from 2024

### 6. In case of fire












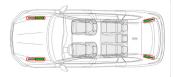



Lithium-ion batteries can self-ignite or reignite after firefighting measures have been

Use appropriate personal protective equipment!



### 7. In case of submersion

Once the vehicle has been recovered, let the water drain out and disconnect the battery or batteries (see chapter 3). Use appropriate personal protective equipment!

## 8. Towing / transportation / storage



Lithium-ion batteries can self-ignite or reignite after firefighting measures have been

Use appropriate personal protective equipment!





Front towing eye on the right-hand side of the vehicle



Rear towing eye on the right-hand side of the vehicle





## 9. Important additional information

Škoda Emergency Services Rescue Sheets: www.skoda-auto.com/services/rescuers

### 10. Explanation of pictograms used















If a vehicle has been involved in an accident, do not tow it on its drive axles.



Flammable

Corrosives

Hazardous to the human health

Environmental

Vehicle on fuel of

Vehicle on fuel of liquid group 1

Use water to extinguish the fire

Remove smart key



Use thermal Infra-

red camera

**Additional information** 



Release the

bonnet

**Document number** 

Version 01 (04/2024) Page




# Škoda **Superb** 5 doors/5 seats/hatchback from 2024








Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO 17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.

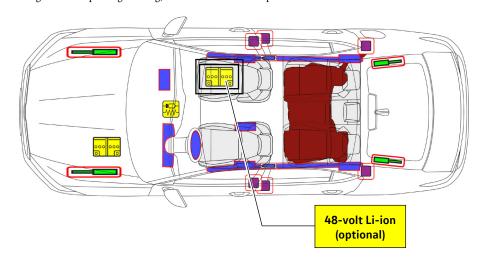

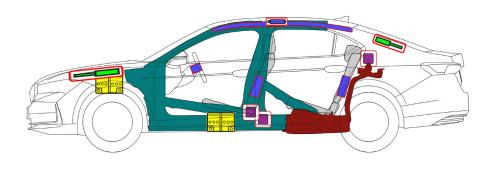

Airbag	Stored gas inflator		Seat belt pretensioner	<b>*</b>	SRS control unit	Fuel tank content gasoline
Gas strut/preloaded spring	High strength zone	000 000	Battery low voltage		Zone requiring special attention	



# Škoda **Superb**

# 5 doors/5 seats/hatchback from 2024

# 1. Identification / recognition






# 2. Immobilisation / stabilisation / lifting

Immobilising the vehicle



- 1. Press the "P" button
- 2. Apply the electric parking brake
- 3. Switch off the ignition (power display "OFF")
- 4. Secure the vehicle so it cannot roll away

### Lifting points

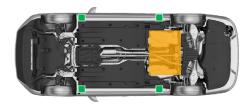

- Suitable lifting points
- Battery pack, high-voltage

# 3. Disable direct hazards / safety regulations

## Switching off the ignition



Press the "Engine Start/Stop" button in the centre console without engaging the brake pedal.



Keep the vehicle key, key card and/or smartphone with the app at least five metres away from the vehicle wherever possible.



### Disconnecting the 12-volt battery



In the engine compartment
Disconnect the negative battery terminal

**Additional information** 

**Document number**Skoda\_Superb\_Hatchback\_2024\_5d\_GD\_EN

Version 01 (04/2024) Page



# Škoda Superb


# 5 doors/5 seats/hatchback from 2024



### Disconnecting the 48-volt battery


In the event of accidents where the airbag is deployed, the 48-volt vehicle electrical system will be deactivated automatically as soon as airbag deployment has been detected.

For all other cases, the 48-volt vehicle electrical system can be deactivated as follows:

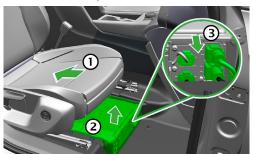

- ① Move the right seat all the way back
- Remove the battery cover in the footwell on the right-hand side of the vehicle
- 3 Unplug all connectors

### 4. Access to the occupants

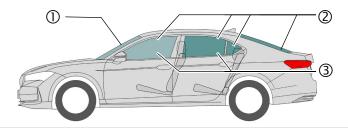

### Glass types:

- ① Composite safety glass
- ② Single-pane safety glass
- 3 Composite safety glass, optional

Electrical seat adjustment

Mechanical seat adjustment

Mechanical steering column adjustment








## 5. Stored energy / liquids / gases / solids









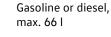











12 V











48 V Lithium-ion



# Škoda Superb

# 5 doors/5 seats/hatchback from 2024

### 6. In case of fire












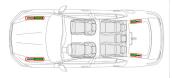



Lithium-ion batteries can self-ignite or reignite after firefighting measures have been

Use appropriate personal protective equipment!



### 7. In case of submersion

Once the vehicle has been recovered, let the water drain out and disconnect the battery or batteries (see chapter 3). Use appropriate personal protective equipment!

## 8. Towing / transportation / storage



Lithium-ion batteries can self-ignite or reignite after firefighting measures have been

Use appropriate personal protective equipment!





Front towing eye on the right-hand side of the vehicle



Rear towing eye on the right-hand side of the vehicle







### 9. Important additional information

Škoda Emergency Services Rescue Sheets: www.skoda-auto.com/services/rescuers

### 10. Explanation of pictograms used

















If a vehicle has been involved in an accident, do not tow it on its drive axles.



Flammable

Corrosives

Hazardous to the human health

Environmental

Vehicle on fuel of liquid group 2

Vehicle on fuel of liquid group 1

Use water to ex-

Remove smart key



Use thermal Infra-

red camera



Release the

bonnet



tinguish the fire

**Additional information**