

Arrange all parts to ensure you have everything.

Blue Pieces:

Scissor frames

2 Lower handles (long)

2 Upper handles ("Creedmoor Sports")

2 Wheel braces

1 Lock Bar



Horizontal Round Bars:

2 Long

2 Short

1 Bottom Bar with Notch and Roll Pin

1 Upper Bar with Scope Clamp



Parts Bag:

5 Small Star Knobs

2 Large Star Knobs

3 Small Pins

1 Large Pin

12 Screws

Allen Wrench



Wheels, Bag, Accessories

2 Wheels

Stool Bag

Plastic Stool Bottom

Rain Cover

2 Mat Straps

Tray

Rifle Mount Top and Bottom



Step 1 – Upper Handle: Attach upper bar (scope clamp) to upper handles (“Creedmoor Sports”) with included allen screws. The scope clamp will face forward and tray cut outs will face to the rear of the cart. Shown for right handed shooter. For left handed, ensure scope clamp is on other end. Set aside.



Step 2 – Lower Handle: Attach bottom round bar and one short bar to lower handles with allen screws. Bottom of lower handles are flat. The roll pin will be on the same end as the scope mount on the upper handle. Set aside.



Step 3 – Wheels: Attach the threaded end of the wheel braces to the wheels and tighten. Then attach the wheel to the bottom of the lower handle (flat end) using the large star knobs. Set aside.



Step 4 – Scissor frames: Attach one long horizontal round bar to the long bar of the scissor frame at the point of the flat spot. The flat spot will rest on the ground when completed. Attach the second long horizontal round bar to the scissor bar in the second hole from the top. Attach short round horizontal bar to the shorter bar of scissor frame, on the long end.



Step 5 – Stool bag and mat straps: Insert white plastic stool bottom into stool bag. Position the scissor frame on the ground as shown. Slide one of the mat straps onto the short horizontal round bar. Slide the stool bag onto the horizontal round bars as shown. Slide second mat strap onto short horizontal round bar.



Attach corresponding scissor frame.



Step 6 – Attach lower handle and wheels (step 3) to the upper holes in the scissor frame using the two small pins.



Insert the third small pin through the wheel brace and scissor frame on the same side as the scope mount.




On the other side, insert the long pin through the lock bar, scissor frame, and wheel brace. Rotate the lock bar rearward and over the notched portion of the horizontal round bottom bar.



Step 7 – Attach upper handle (step 1) to the lower handle using four of the small star knobs. You have the option to choose a high or low setting depending on the set of holes you choose.




The fifth star knob screws into the scope clamp.

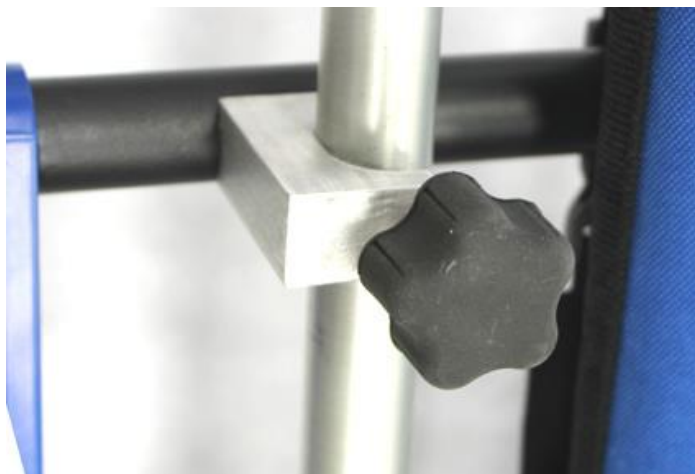

The bottom rifle mount attaches near the bottom of the scissor frame. The top rifle mount attaches on the upper handle (shown in above picture.)



The tray attaches to either side of the upper handle at the cut out.

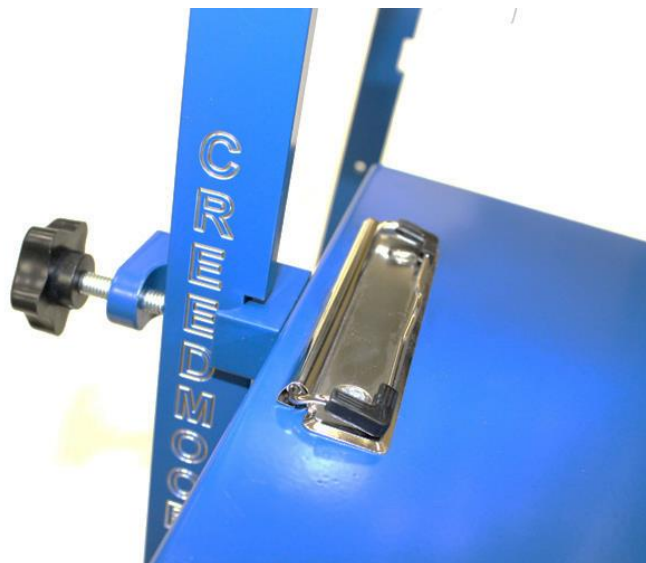

Enjoy your new cart!

