

*Norstar*  
**Doorphone**  
**User Guide**

About the Doorphone	1
To answer the Doorphone	2
The Doorphone calling	2
The chime	2
To respond	3
To unlock the gate or door	4
To monitor using the Doorphone	5

---

## About the Doorphone

The Doorphone is connected to a Norstar telephone port and used as an extension or to control access to your building. Pressing the Call key of the Doorphone may call one or more telephones and/or send a distinctive chime to all telephones programmed into a page zone.

Placing an extension call from any telephone on the system to the Doorphone sets up a two-way voice path.

Additionally, optional products can be installed to permit the activation of electric locks on doors or gates. For more information, contact your Advice Line.

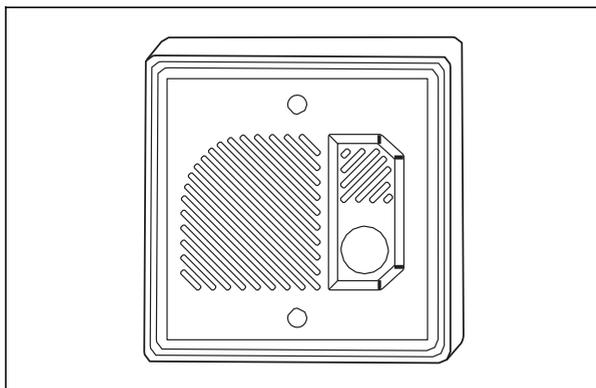


Figure 1 – The Doorphone

---

## To answer the Doorphone

### The Doorphone calling

When the Call key on the Doorphone is pressed, one or more telephones will begin ringing, and the name of the Doorphone will appear on your Norstar telephone display.

If more than one Doorphone is installed on your system, each one can be programmed to call any telephone.

### The chime

If the Doorphone call is not answered within the programmed number of rings, you will hear a page tone followed by a distinctive chime.

**Note:** The Doorphone can also be programmed to send the chime without ringing.

If more than one Doorphone is installed on your system, each Doorphone can send a unique chime.

**Note:** You can choose from four unique chimes, or select no chime at all. For details, contact your Advice Line.

---

## To respond

A Doorphone call can be answered like any extension call while ringing on your Norstar telephone. Simply pick up the handset or press the  key.

To respond to the Doorphone chime or initiate communication at any time, place an extension call to the appropriate Doorphone. Press the  key and the Doorphone's extension number or press the internal autodial key assigned to the Doorphone.

**Note:** For assistance regarding setting up extension autodial keys, consult your *Norstar User Card*.

When you have called the Doorphone, it will immediately answer without ringing and allow you to talk to and hear the visitor.

The display shows:

<Doorphone name>	
OPEN	QUIT

**Note:** The OPEN and QUIT display keys will only appear if the Doorphone is configured to work with a door opening device. For details, contact your Advice Line.

When you are finished speaking to the visitor, press the  key, the QUIT display key or hang up.

**Note:** During a call between the Doorphone and a Norstar telephone, pressing  or any other key on your Norstar telephone except for key pad keys or display keys will terminate the call. Priority calls to a Doorphone will be blocked by the Doorphone.

---

## To unlock the gate or door

You can unlock the door if the Doorphone is configured to activate systems for opening a door and the required equipment has been installed.

When communication is established, the door(s) can be opened by dialling the single digit code(s) or by pressing OPEN if you have a M7310N or M7324N telephone. For the single digit code(s), contact your Advice Line.

The display momentarily shows: 

Depending on Norstar configuration and equipment installed, communication may continue and door opening may be repeated.

You can end the communication with the Doorphone at any time by pressing the  key, the QUIT display key or hanging up. The Doorphone cannot end a call.

---

## To monitor using the Doorphone

You can use the Doorphone as a monitoring device for applications from personal security to listening to a baby in a nursery. Monitoring can be performed using the handset or muted handsfree.


By calling the Doorphone from any Norstar telephone, you can listen for noises near the Doorphone.

By installing a Doorphone in a nursery and establishing communication from another telephone, you can listen to the nursery through your telephone's speaker.

For silent monitoring:

1. Press the  key.
2. Press the  key once or twice, until the line appearance flashes.

The display shows:

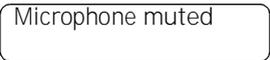Microphone muted

3. Press the Doorphone's extension autodial key or dial the extension number of the Doorphone.
4. Press  to end silent monitoring.

