

RP1226 NaviLink Adapter - Installation

1. Open trucks fuse box located to the left of the foot pedals, see Figure 1.0



Figure 1.0 - Fuse Box Location

2. Connect adapter as shown below in Figure 2.0

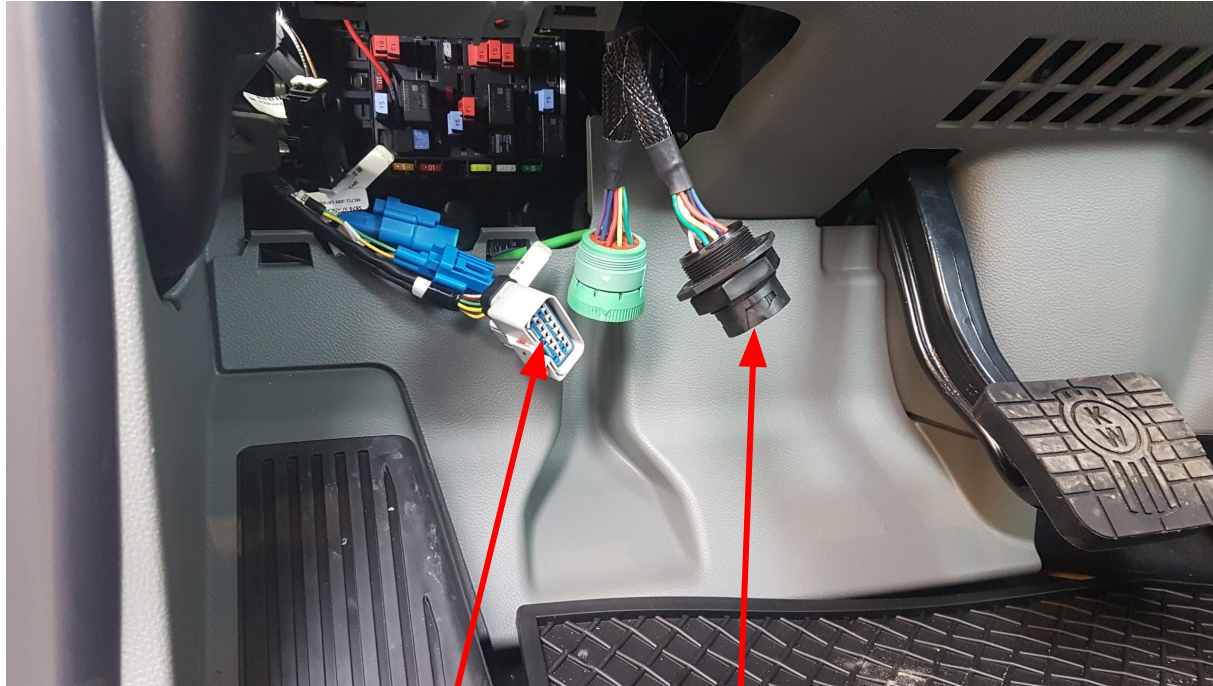


Figure 2.0 - Connectors

