

Grandstream GXP2130/2160 Phone Provisioning Guide

1. Power up the phone
2. Press "up" button on phone to obtain IP Address



3. Open a web browser on the same network as the phone.
4. Open web browser and type in IP of phone (http://x.x.x.x)
5. Username: admin Password: admin (if this doesn't work, HopDial will provide you with a specific password)
 1. Go to **Maintenance**.
 2. Select "**Always Skip the Firmware Check**" for the Firmware Upgrade and Provisioning.
 3. Remove the link in the Firmware Server Path (for auto provisioning purposes).
 4. Enter in the Config Server Path: **sipregistration.com/pbxcode** (HopDial will provide)
 5. Click "**Save & Apply**".
 6. Click "**Reboot**".

At this point the phone will go out and pull down its configuration file. Once phone reboots you will be able to make and receive calls.



Maintenance

Web Access

Upgrade and Provisioning

Syslog

Language

TR-069

Security

Packet Capture

Upgrade and Provisioning

Firmware Upgrade and Provisioning

- Always Check for New Firmware
- Check New Firmware Only When F/W pre/suffix Changes
- Always Skip the Firmware Check

XML Config File Password

HTTP/HTTPS User Name

HTTP/HTTPS Password

Always Authenticate Before Challenge

- No
- Yes

Upgrade via

- TFTP
- HTTP
- HTTPS

3

Firmware Server Path

4

Config Server Path

Firmware File Prefix

Firmware File Postfix

Config File Prefix

Config File Postfix

Allow DHCP Option 43 and Option 66 to Override Server

- No
- Yes

Allow DHCP Option 120 to Override SIP Server

- No
- Yes

3CX Auto Provision

- No
- Yes

Automatic Upgrade

- No
- Yes, check for upgrade every 10081 minute(s)
- Yes, check for upgrade every day
- Yes, check for upgrade every week

Hour of the Day(0-23)

Day of the Week (0-6)

Authenticate Conf File

- No
- Yes

Download Device Configuration

Download

Upload Device Configuration

Upload

Save Save and Apply Reset

5