



PITCHING INSTRUCTIONS – PORCH DOOR ZIPPED

- Secure in position by zipping the porch door onto the corresponding zip at the front of the tent
- Peg out the front of the porch to tension the material
- Peg out ALL anchor points using the pin-pegs
- Fit the supplied groundsheet up to the front of your tent



PITCHING INSTRUCTIONS – PORCH DOOR NON ZIPPED

- Secure in position by placing the elasticated side of the porch over the front pole of the tent
- Feed the guylines through the corresponding slots in the porch
- Peg out porch base at contact point with the tent and then the front of the porch to tension the material
- Peg out ALL anchor points using the pin-pegs
- Fit the supplied groundsheet up to the front of your tent