

## Adjusting ALGO 8180 Ring or Page Volume


1. Obtain the internal IP address of the device in one of two ways:

a) Look in the Clients/Connected devices of the local router.

OR

b) On the physical device press the "Menu" button until the option for "IP Address" is reached. Then press "Select" the IP address is announced.

Bring up your web browser and enter the internal IP address of the device (http):

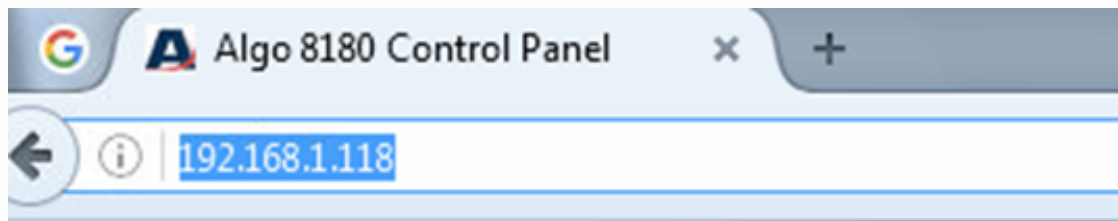

2. Enter the password:


627627

Registration ensures your access to the latest upgrades to this product and important service notices.

**Login**

Password (default: algo)

3. Click on "Page" in the navigation bar or select Ring depending on which you wish to increase. Please note 8180's should be configured with a ringer extension and a separate paging extension:

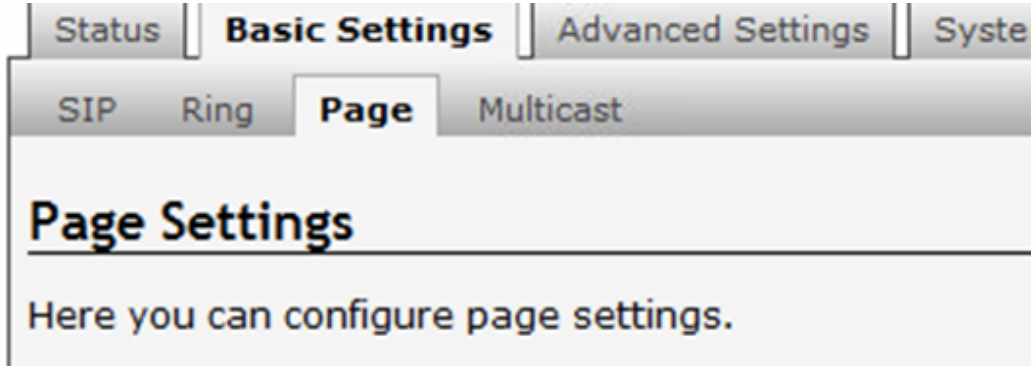

4. Select the desired volume (1-10) and click apply:

