

Registering a unit

Operating additional units


Additional handsets

Up to 6 handsets can be registered to the base unit.

Important:

- The additional handset model recommended for use with this unit is noted on page 5. If another handset model is used, certain operations (Ringer settings, phonebook, etc.) may not be available.

Registering a handset to the base unit

 

The supplied handset and base unit are pre-registered. If for some reason the handset is not registered to the base unit (for example,  is displayed even when the handset is near the base unit), re-register the handset.

1 Handset:

 

 (centre of joystick) → **[#][1][3][0]**

2 Base unit:

■ KX-TGP500:

Press and hold  for about 4 seconds until the  indicator flashes in red.

■ KX-TGP550:



Press and hold  for about 4 seconds until the registration tone sounds and the  indicator flashes in red.

- If all registered handsets start ringing, press the same button to stop. Then repeat from step 1.
- The next step must be completed within 90 seconds.

3 Handset:

OK

- ### 4
- Wait until “Enter Base PIN” is displayed.
→ Enter the base unit PIN (default: “0000”).
→ Press **OK**, then wait until a long beep sounds.

- If you forget your PIN, contact your phone system dealer.
- When the handset has been registered successfully,  will change to .


Note:

- When you purchase an additional handset, refer to the additional handset’s installation manual for registration.

Deregistering a handset

A handset can cancel its own registration (or the registration of another handset) that is stored to the base unit. This allows the handset to end its wireless connection with the system.

Handset

- ### 1
-  (centre of joystick) → **[#][1][3][1]**

- ### 2
- [3][3][5]** → **OK**



- ### 3
- [v]/[^]**: Select the desired unit. → **OK**

- ### 4
- [v]/[^]**: “Yes” → **OK**

- When you cancel a different handset than the one you are now using, press **[X]** to exit.

Base unit

Available for: KX-TGP550

- ### 1
- Press and hold  until the registration tone sounds and the  indicator flashes in red.

- If all registered handsets start ringing, press the same button to stop. Then repeat this step.

- ### 2
- Press and hold the handset number (**[1] – [6]**) that you want to cancel until a confirmation tone sounds.