

SmartTV Ecomode Configuration

The Samsung SmartTV ECO mode is enabled by default. It will automatically set the TV to standby after a certain period. This behaviour brings a lot of complains in a hotel because the guests are thinking the TV set is broken.

Ecomode Configuration access **after initial [configuration](#)**

1. Disable widget solution in hotel mode
2. Set Menu Display in hotel mode-> menu OSD "on"


3. Follow "Disabling Ecomode before initial configuration"

4. Set Menu Display in hotel mode-> menu OSD "off"
5. Enable widget solution in hotel mode

Disabling Ecomode **before initial [configuration](#)**

- power off tv


- power on tv & you should see:

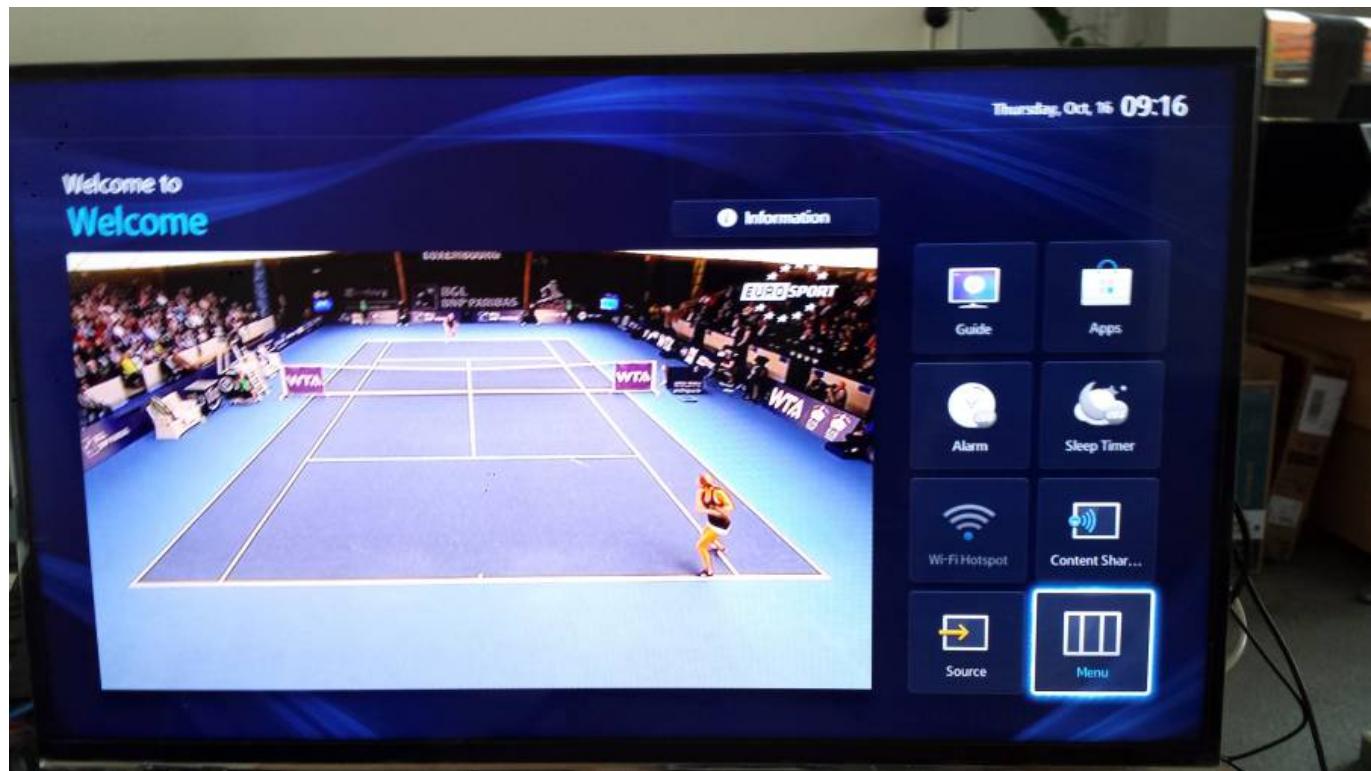


- select „Menu“ & you should see:



* select „System“ & you should see:

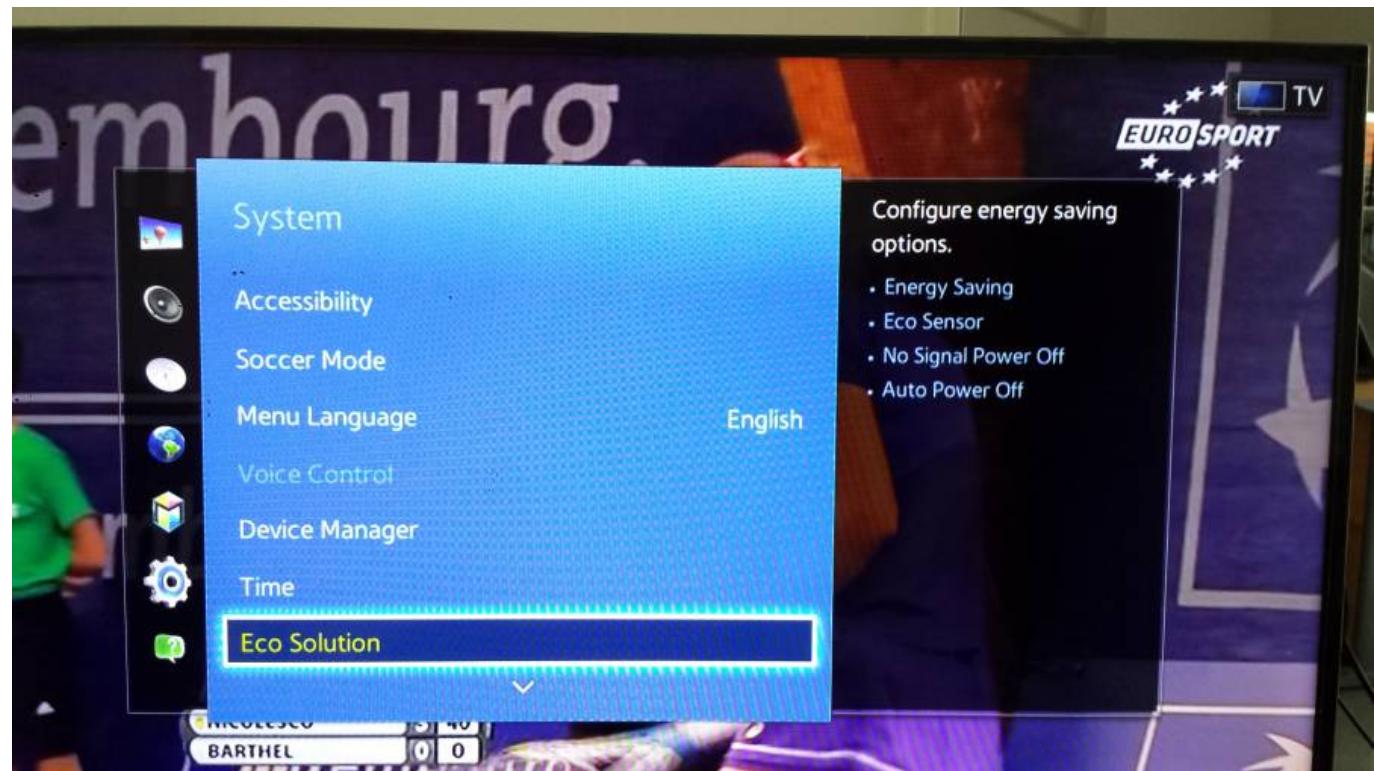

* select „Eco Solution“ & you should see:

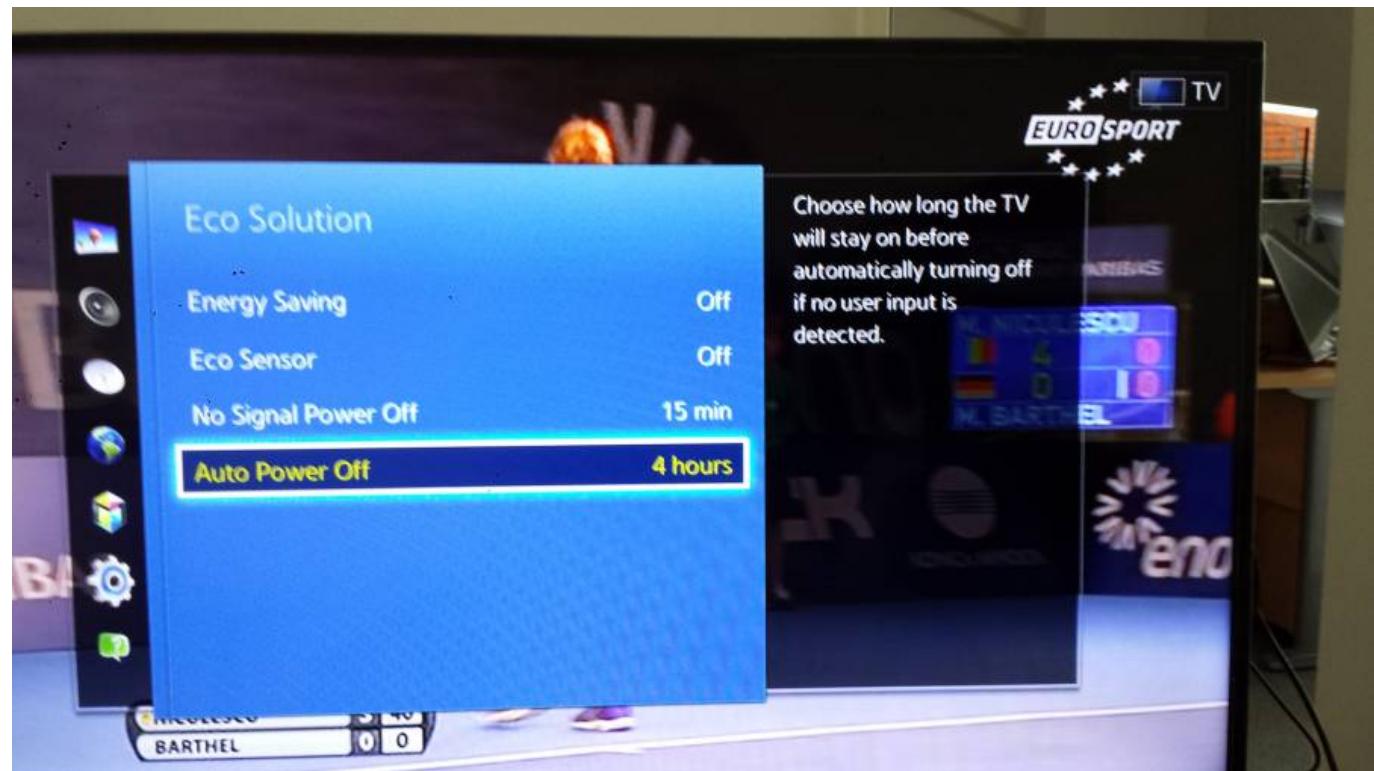

* set „Auto Power Off“ to „Off“ * power off TV